 


60in 2 Tone Console White / Brown Fireplace

SKU NO.: 810469823
ITEM NO.: CAL-602004

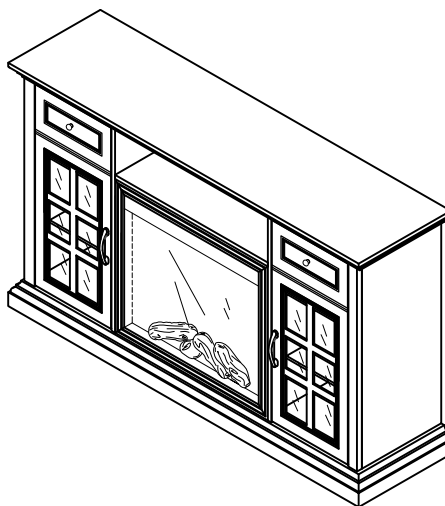

WARNING

Caution: Adult assembly required. Assembly will require at least 2 people.
Assemble on soft surfaces to prevent damage to the product finish.
DO NOT use power tools.

WARNING – Death or serious injury may occur when children climb on fireplace furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

WARNING – Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

To prevent serious injury or death, this product is equipped with a wall anchoring system. Before this product can be used, the wall anchoring system must be installed as directed in the assembly instructions.

CARE AND CLEANING

DO NOT scratch or chip the finish. DO NOT use abrasive chemicals for cleaning.
Maximum width of The television: 50 INCH

 
MAINTENANCE

Check bolts/screws periodically and tighten if necessary.
WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

IMPORTANT INSTRUCTIONS

Please read Electric Fireplace User Manual before assembly and install.

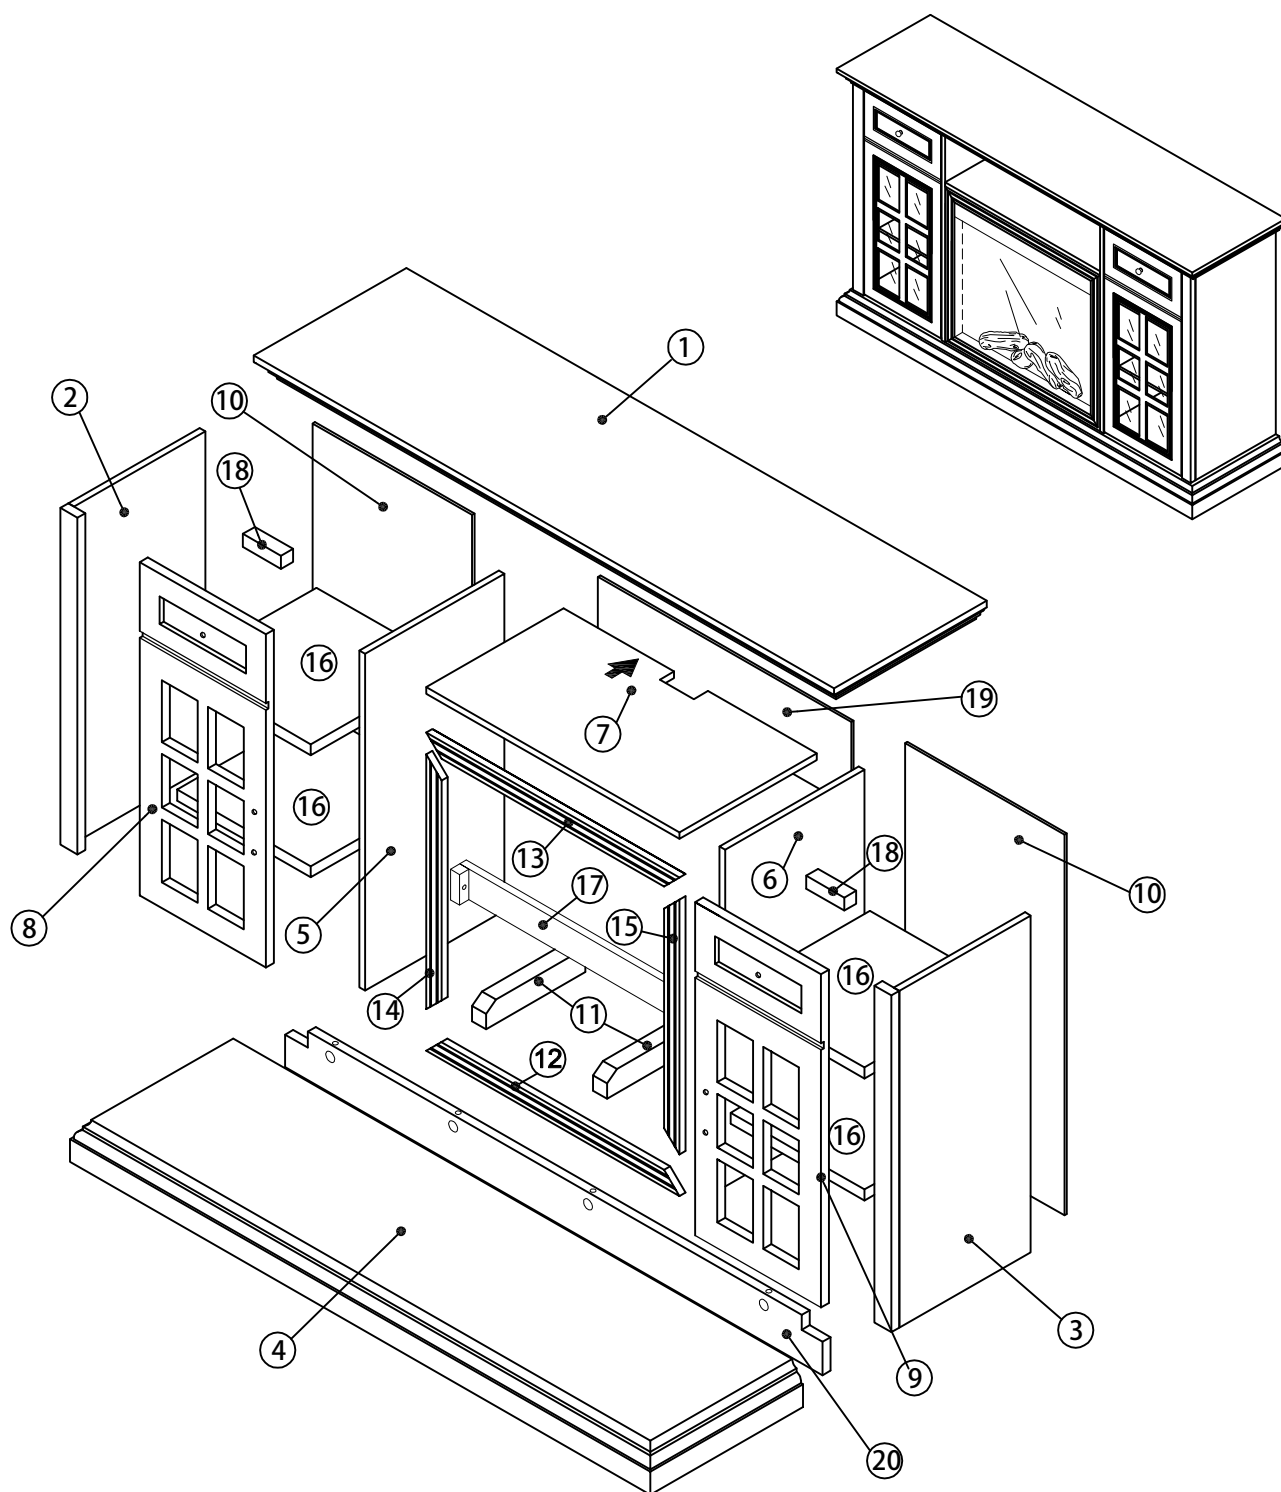 


 
 
 

 

 
 
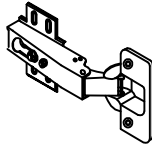 
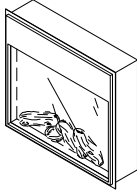 
 
 
* Please do not return any products to the store, for any missing or replacement parts for electric fireplace insert, wood pieces or hardware, please contact Customer Service. Phone: 1-888-829-1658
Working Hours: Monday - Friday, 9:00AM - 5:00PM (Pacific Standard Time)







PART LIST		
PART	DESCRIPTION	QUANTITY
1	Top panel	1
2	Left side panel	1
3	Right side panel	1
4	Bottom panel	1
5	Left Stand panel	1
6	Right Stand panel	1
7	Cross panel	1
8	Left door	1
9	Right door	1
10	Back panel	2

PART LIST		
PART	DESCRIPTION	QUANTITY
11	Block wood	2
12	Under decorative panel	1
13	Upper decorative panel	1
14	Left decorative panel	1
15	Right decorative panel	1
16	Shelf panel	4
17	Insert stop	1
18	Door stop	2
19	Upper Back panel	1
20	Bottom Frame Baffle	1

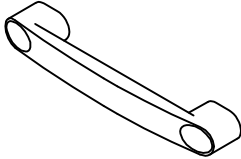HARDWARE LIST

A	24PCS		B	24 PCS		C	2 PCS	
CAM-BOLT			CAM-LOCK			HANDLE		
								
D	2 PCS		E	6PCS	☒8*5/8"	F	24PCS	☒7*5/8"
HANDLE			SCREWS			SCREWS		
								
G	4 PCS		H	42PCS	☒7*5/8"	I	1 PC	
DOWEL			SCREWS			CAM-TOOL		
								
J	18 PCS	☒8*1"	K	16 PCS		L	4 PCS	
SCREWS			SHELF SUPPORTS			HINGES		
								
M	1 PC		N	2 PCS		O	4 PCS	☒8*1-1/2"
FIREPLACE INSERT			PLASTIC TIE			FLAT HEAD SCREWS		
								

  HARDWARE LIST

P	6 PCS		Q	4 PCS		R	4 PCS	
BOLTS			HOOK			ANCHOR		
								
S	1 PC							
ALLEN WERNCH								
								

WARNING

Caution: Adult assembly required. Assembly will require at least 2 people.

Assemble on soft surfaces to prevent damage to the product finish.

 
DO NOT use power tools.

A cart, stand or entertainment center shall be provided with legible instructions pertaining to the risk of fire, electric shock, or injury to persons that is associated with the use of the system, such as operation, user-maintenance, loading, storage, and, as applicable, electrical issues including grounding or double-insulation. The instructions shall not cause the user to commit an act that might result in a risk of fire, electric shock, or injury to persons.

INSTALLATION


STEP 1:

Insert 2pcs Cam-Bolts (A) into Left Stand panel (5) as shown and fully tighten. Align the cam-Bolts (A) in Left Stand panel (5) with the holes in Frame panel (7) and Slide into place. Secure in place with 2pcs Cam-Lock (B) using Cam-Tool (T).

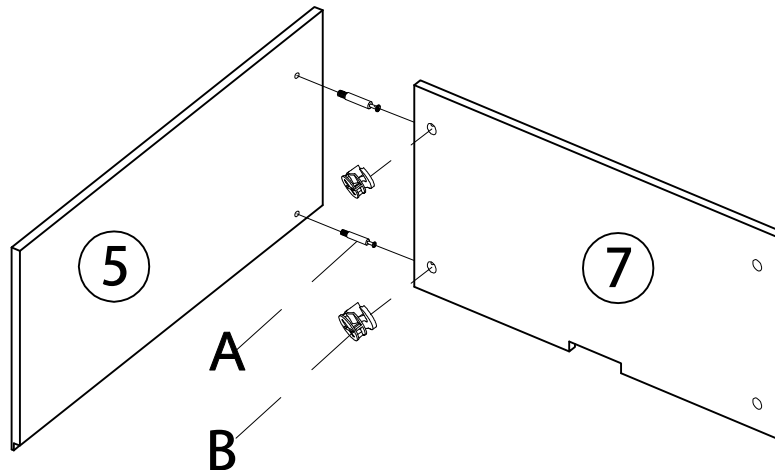

STEP 2:

 
Insert 2pcs Cam-Bolts (A) into Right Stand panel (6) as shown and fully tighten. Align the Cam-Bolts (A) in Right Stand panel (6) with the holes in Frame panel (7) and slide into place. Secure in place with 2pcs Cam-Lock (B) using Cam-Tool (T).

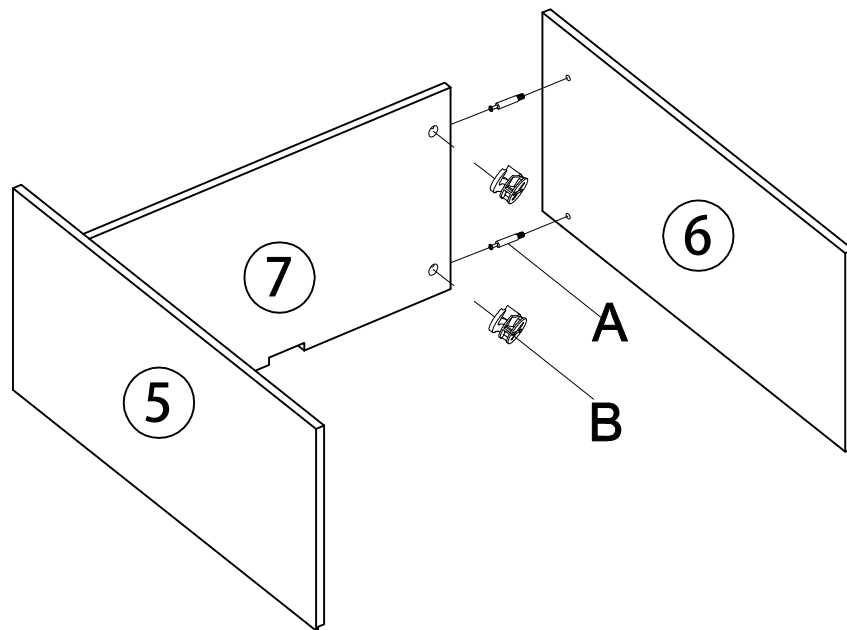

INSTALLATION


STEP 3:

 Align the four Cam-Bolts (A) in the bottom frame baffle (20) with the hole in the bottom plate (4) Slide it into place. Use the cam tool to secure the four Cam-Locks (B) in place.

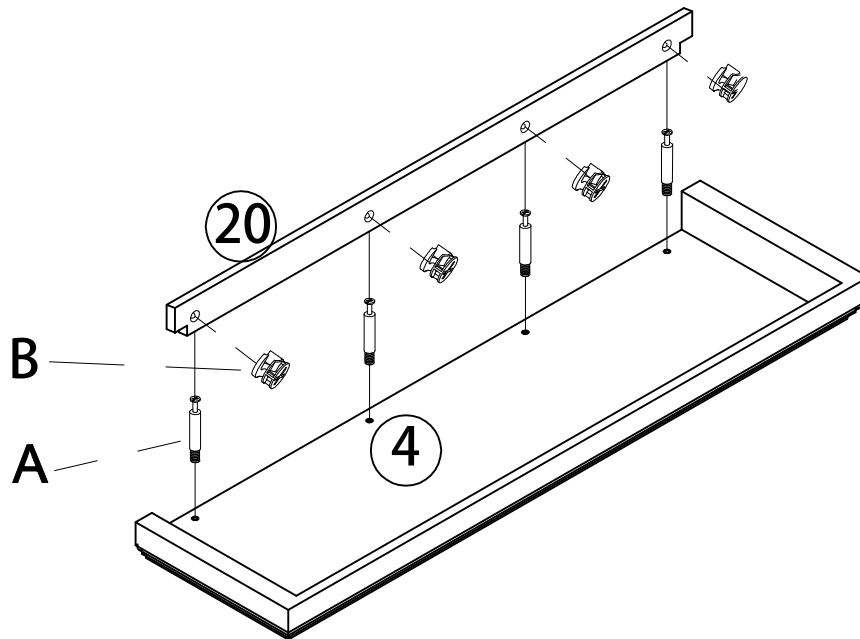

STEP 4:

 
Carefully turn the Bottom panel (4) upright and insert 4pcs Cam-Bolt (A) as shown and fully tighten. Align the Cam-Bolts (A) in Bottom panel (4) with the holes in the bottom of Left Stand panel (5) and Right Stand panel (6) as shown and slide into place. Secure the Stand panels to the Bottom with 4pcs Cam-Lock (B) using Cam-Tool (T).

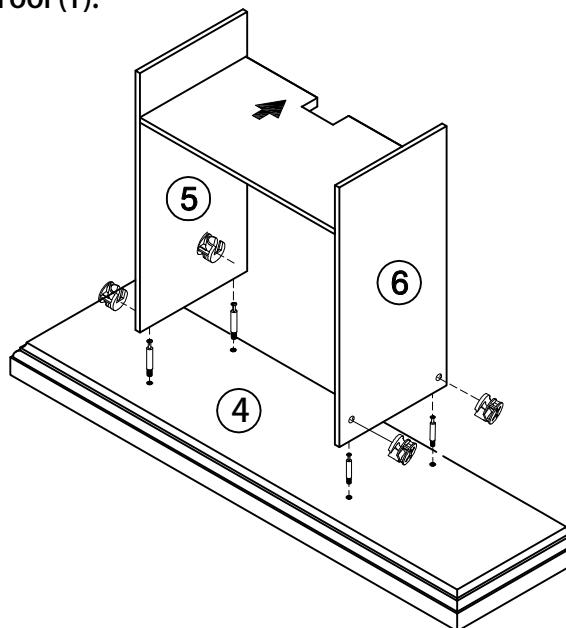

INSTALLATION


STEP 5:

 Insert 4pcs Cam-Bolt (A) into Bottom panel (4) as shown and fully tighten. Align the holes in Left Side panel (2) and slide into place as shown. Secure Left Side panel (2) to Bottom panel with 2pcs Cam-Lock (B) using Cam-Tool (T). Repeat this process to install Right Side panel (3).

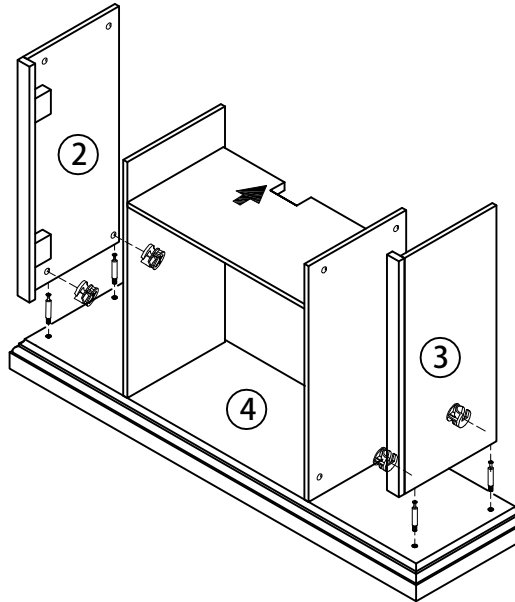

STEP 6:

 
Insert 8pcs Cam-Bolt (A) into the holes of Top panel (1) as shown and fully tighten. Attach 2pcs Door Stop (18) to Top panel (1) with 4pcs Screws (J) as shown.

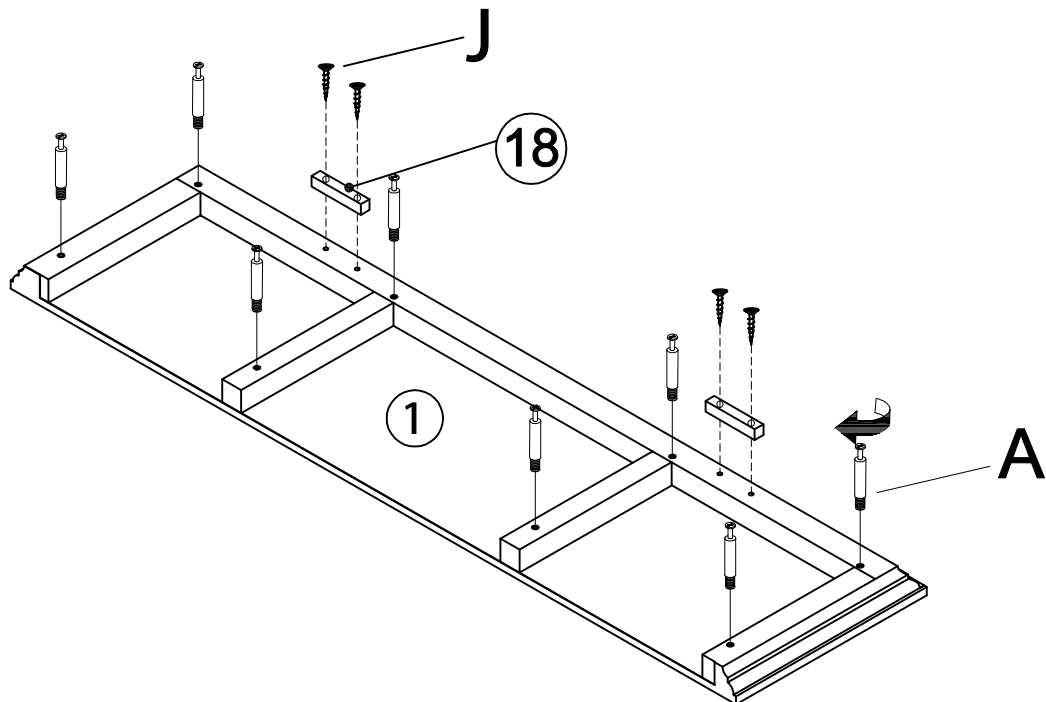

INSTALLATION

STEP 7:

 
Align the Cam-Bolts (A) in Top panel 1 with the holes in the Left and Right Side panels (2/3) and the Left and Right Stand panels (5/6) and slide into place as shown. Secure Top panel (1) to the Left and Right Side panels (2/3) and the Left and Right Stand panels (5/6) with 8pcs Cam-Lock (B) using Cam-Tool (T).

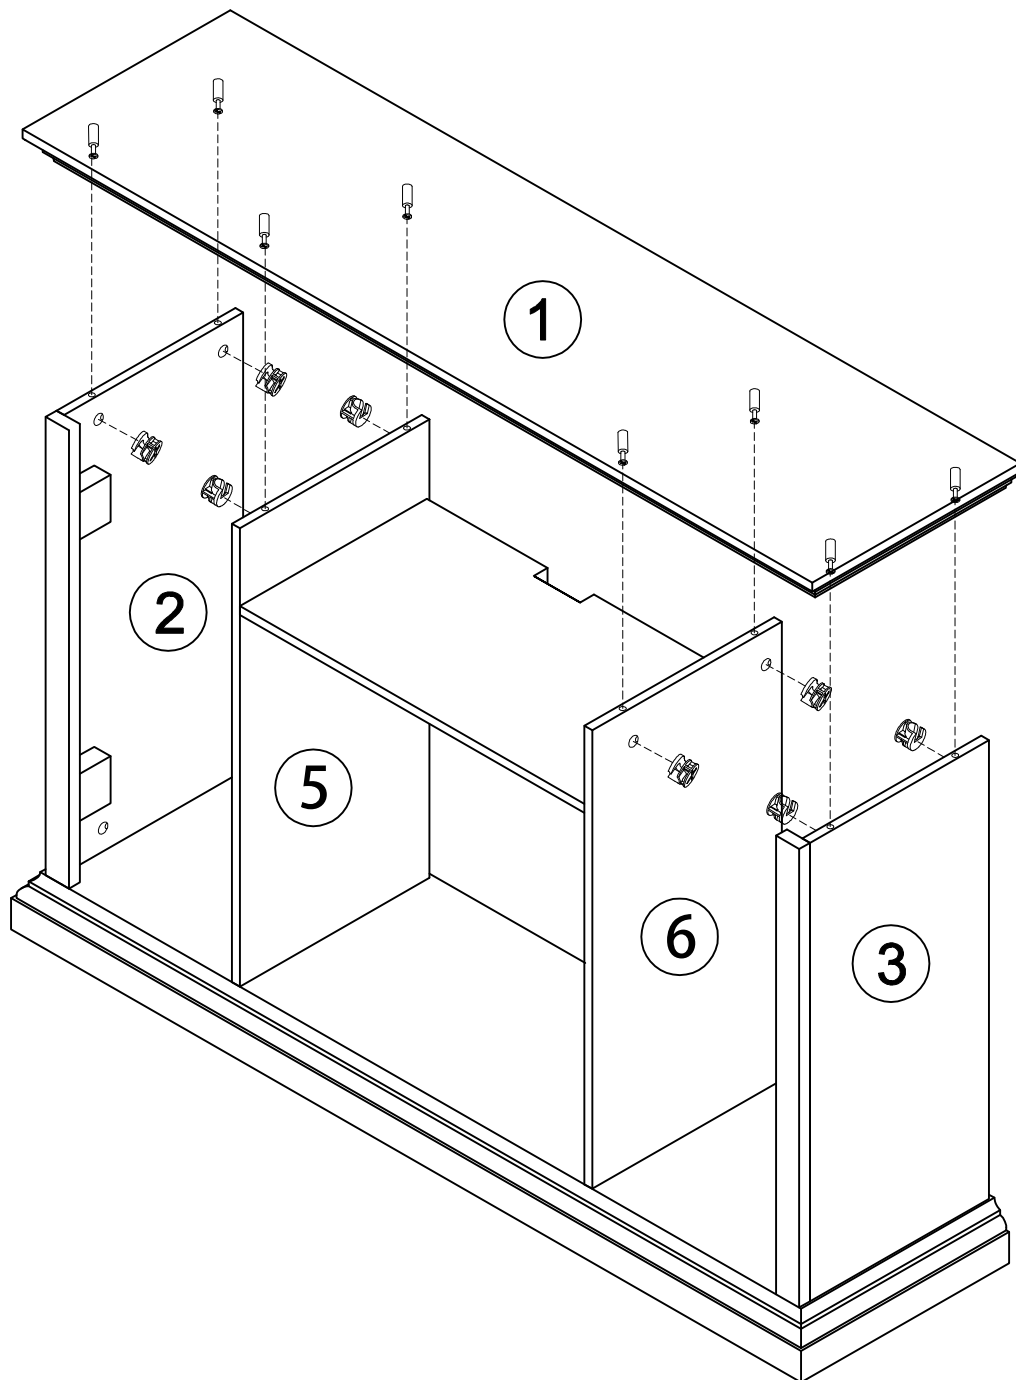

INSTALLATION


STEP 8:

 Slide the 4 Dowel (G) into the holes on the Left decorative panel and Right decorative panel (14/15) and align with the holes on the Under Decorative panel and Upper Decorative panel (12/13). Fasten all panels with 4 screws (J).

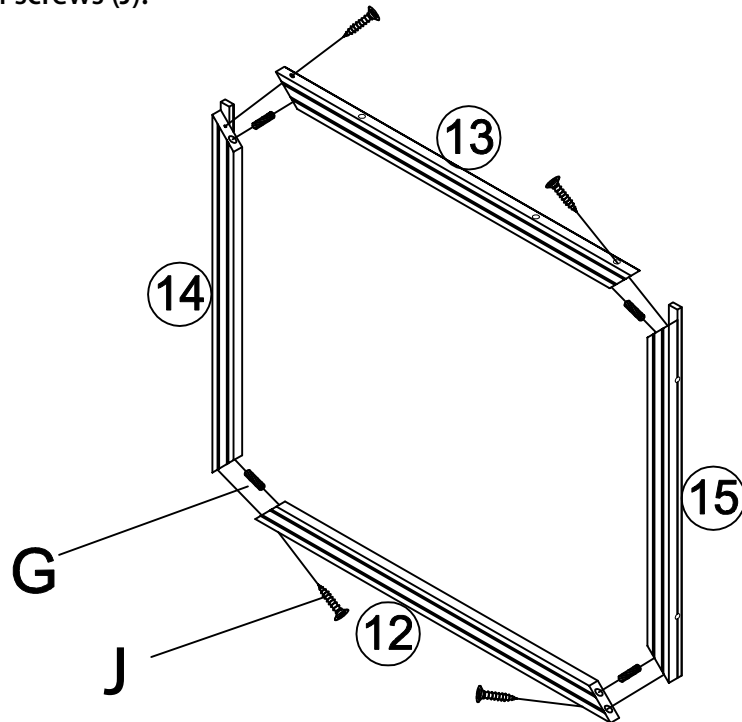

STEP 9:

 
Place the assembled Frame into the cabinet and secure it the Cross panel (7) and Bottom panel with 6pcs Screw (J). Attach the assembled frame to the Left and Right Stand panels (5/6) with 4pcs Bolt (P) as shown.

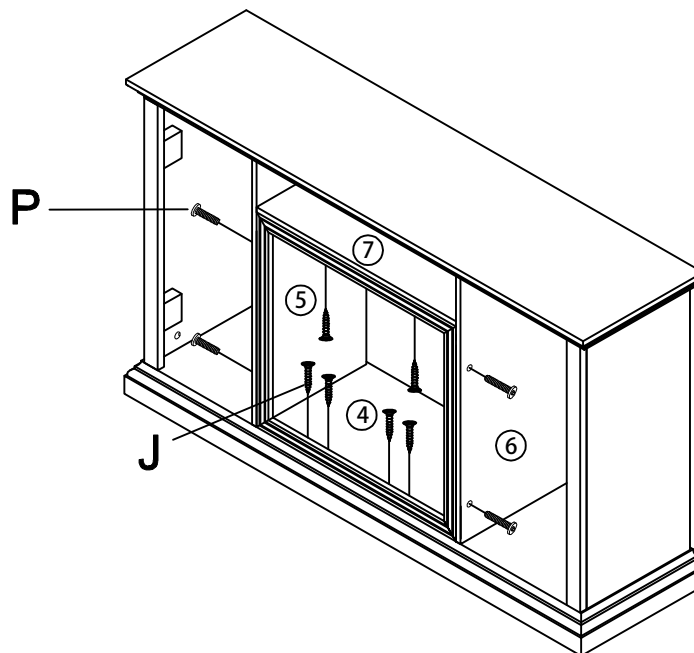

INSTALLATION

STEP 10:

 
Attach 4 hinges (L) to the Left door (8) and the Right door (9) with 8pcs Screws (F). Attach 2 Handles (C) and 2 Handles (D) to the Left and Right Doors with 6pcs Screws (E).

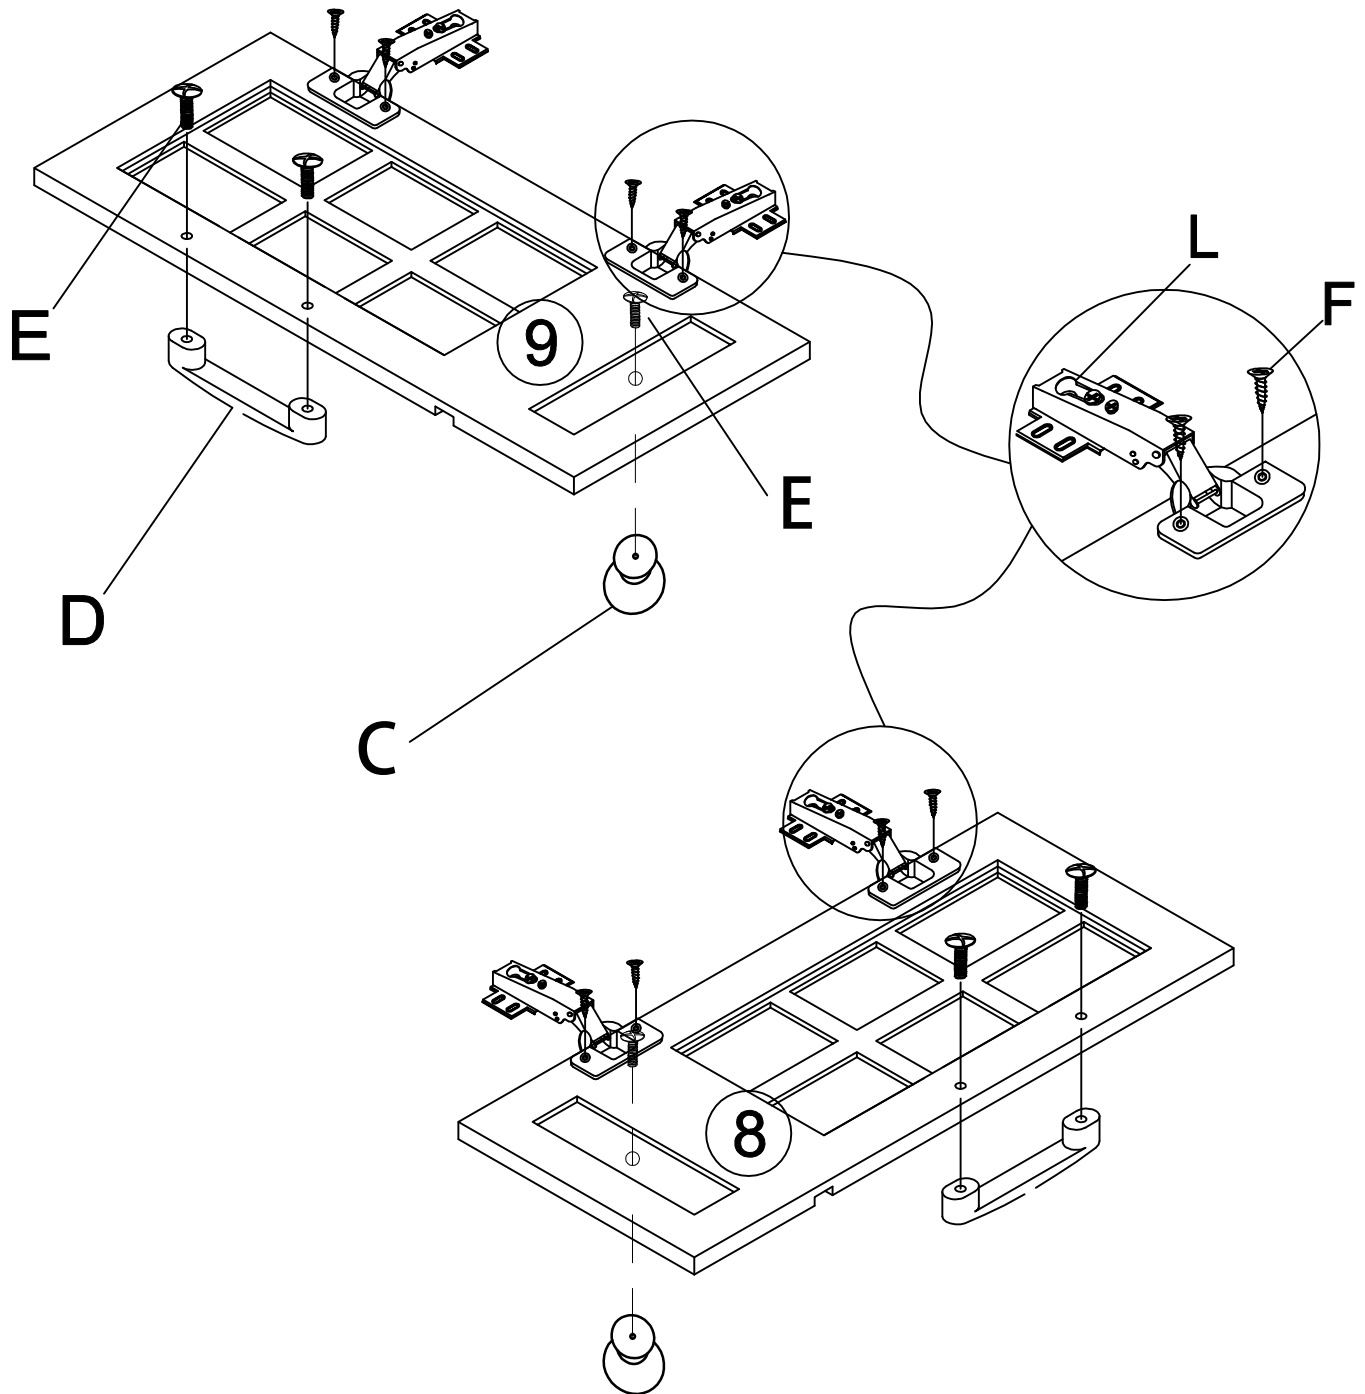

INSTALLATION

STEP 11:

 
Attach the Hinges (L) of Left door (8) to Side panel (2) with 8pcs Screws (F). Attach the Hinges (L) of Right door (9) to Side panel (3) with 8pcs Screws (F) and fully tighten all screws. Insert the 16pcs of Shelf Supports (K) into the middle position holes of the Left and Right Side panel (2/3) and the Left and Right Stand panel (5/6) as shown.

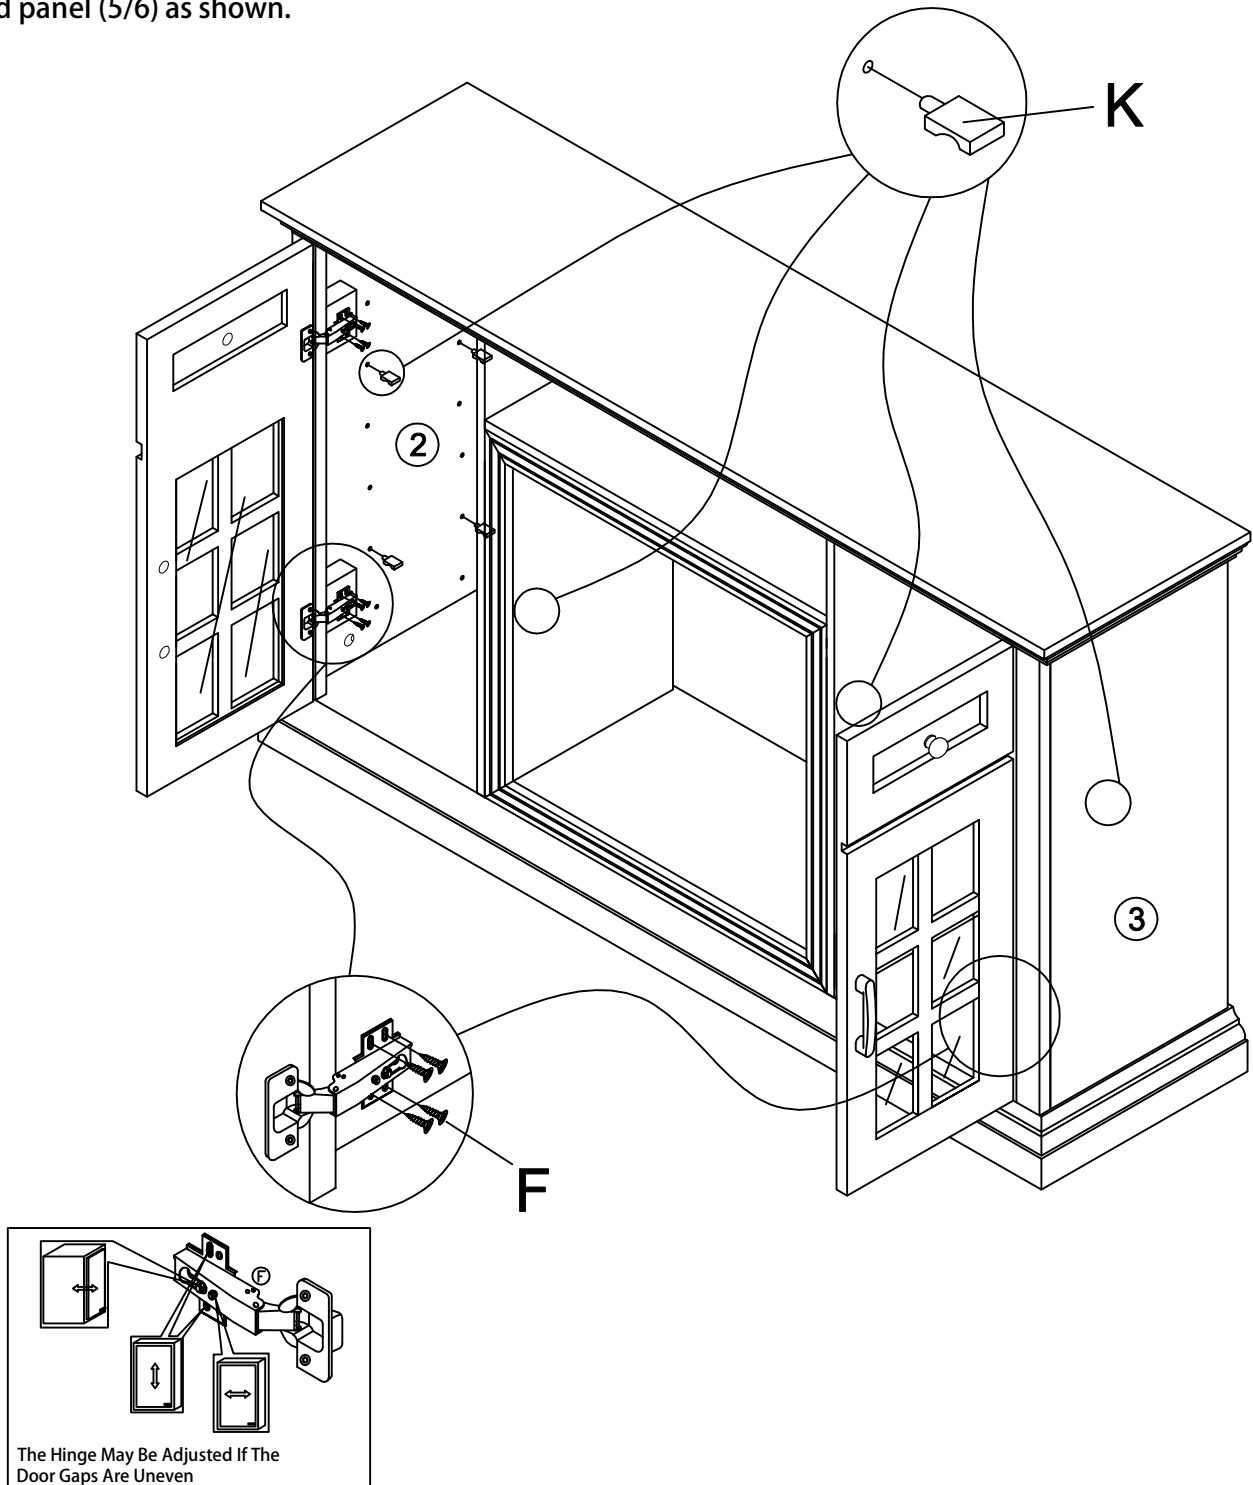

INSTALLATION

STEP 12:

 
Place 4pcs Shelf panel (16) onto the Shelf supports as shown.

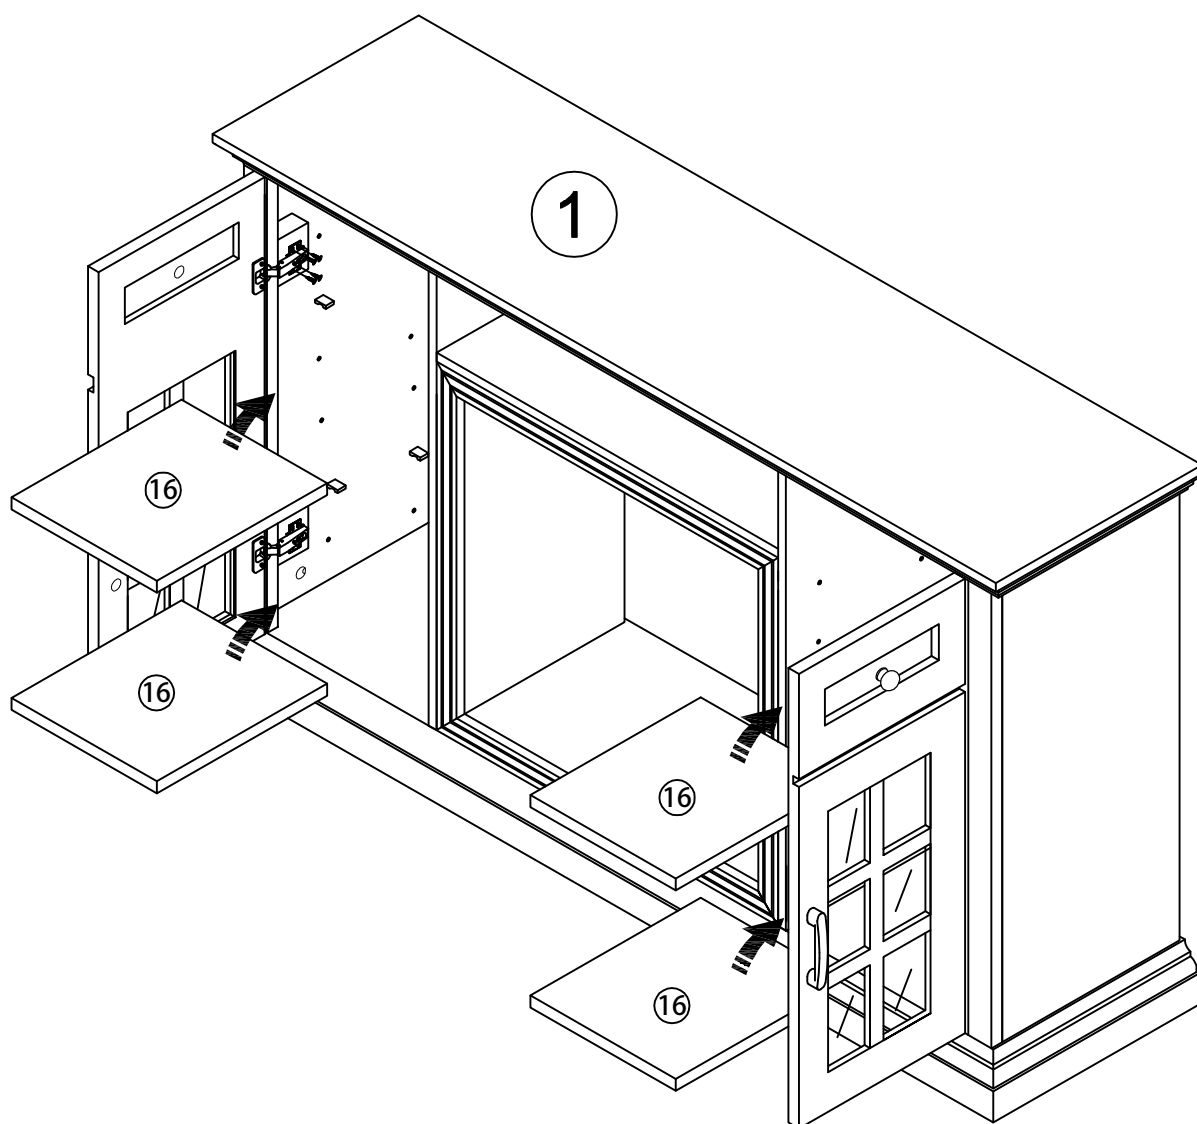

INSTALLATION

STEP 13:

 
Attach 2 Back panel (10) to the back of the fireplace with 30pcs Screws (H). Attach Upper Back panel (19) to the back of the fireplace with 8pcs Screws (H) as shown.

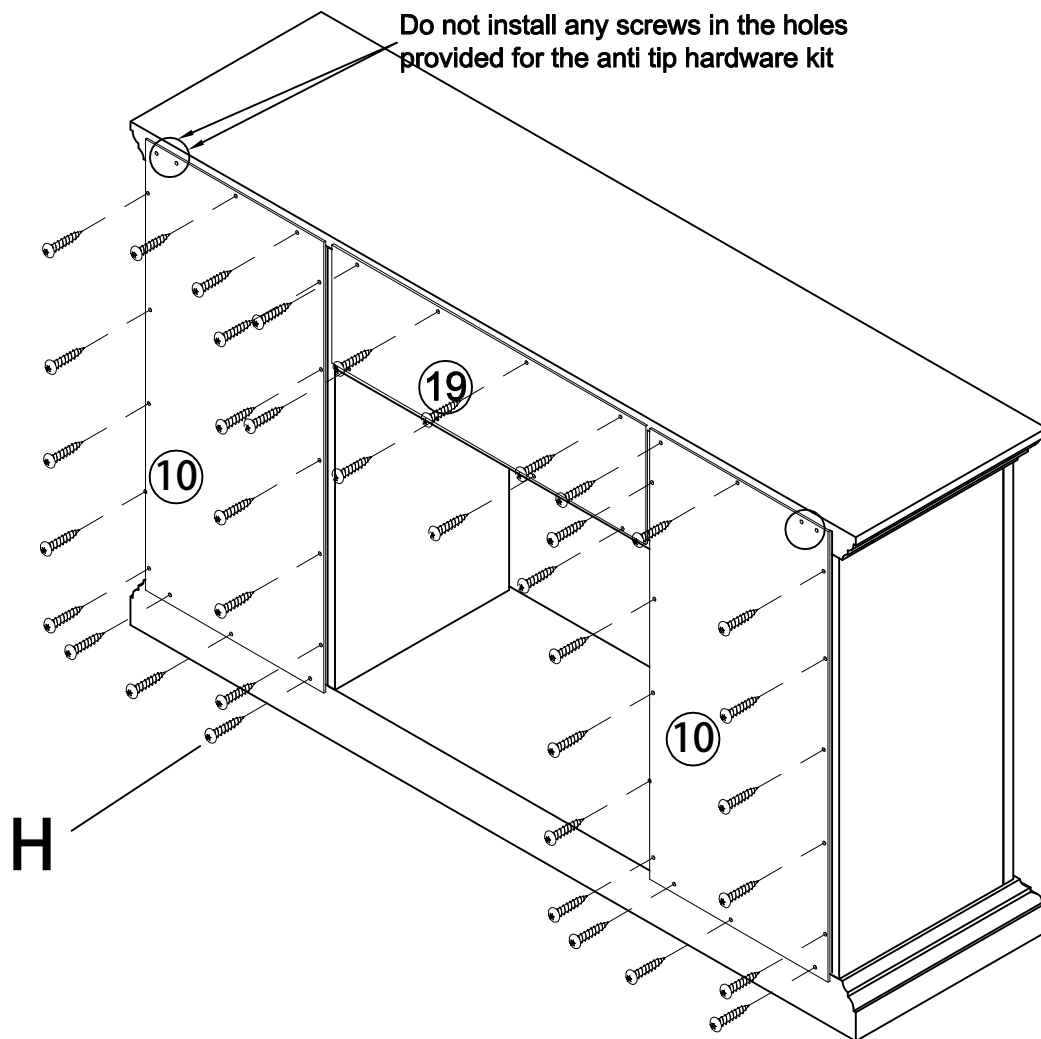

INSTALLATION

STEP 14:

 
Attach 2 Hook (Q) to Back panel (10) with 4pcs Screw (H). Attach 2 Wood block (11) to Bottom panel (4) with 4pcs Screw (J) as shown.

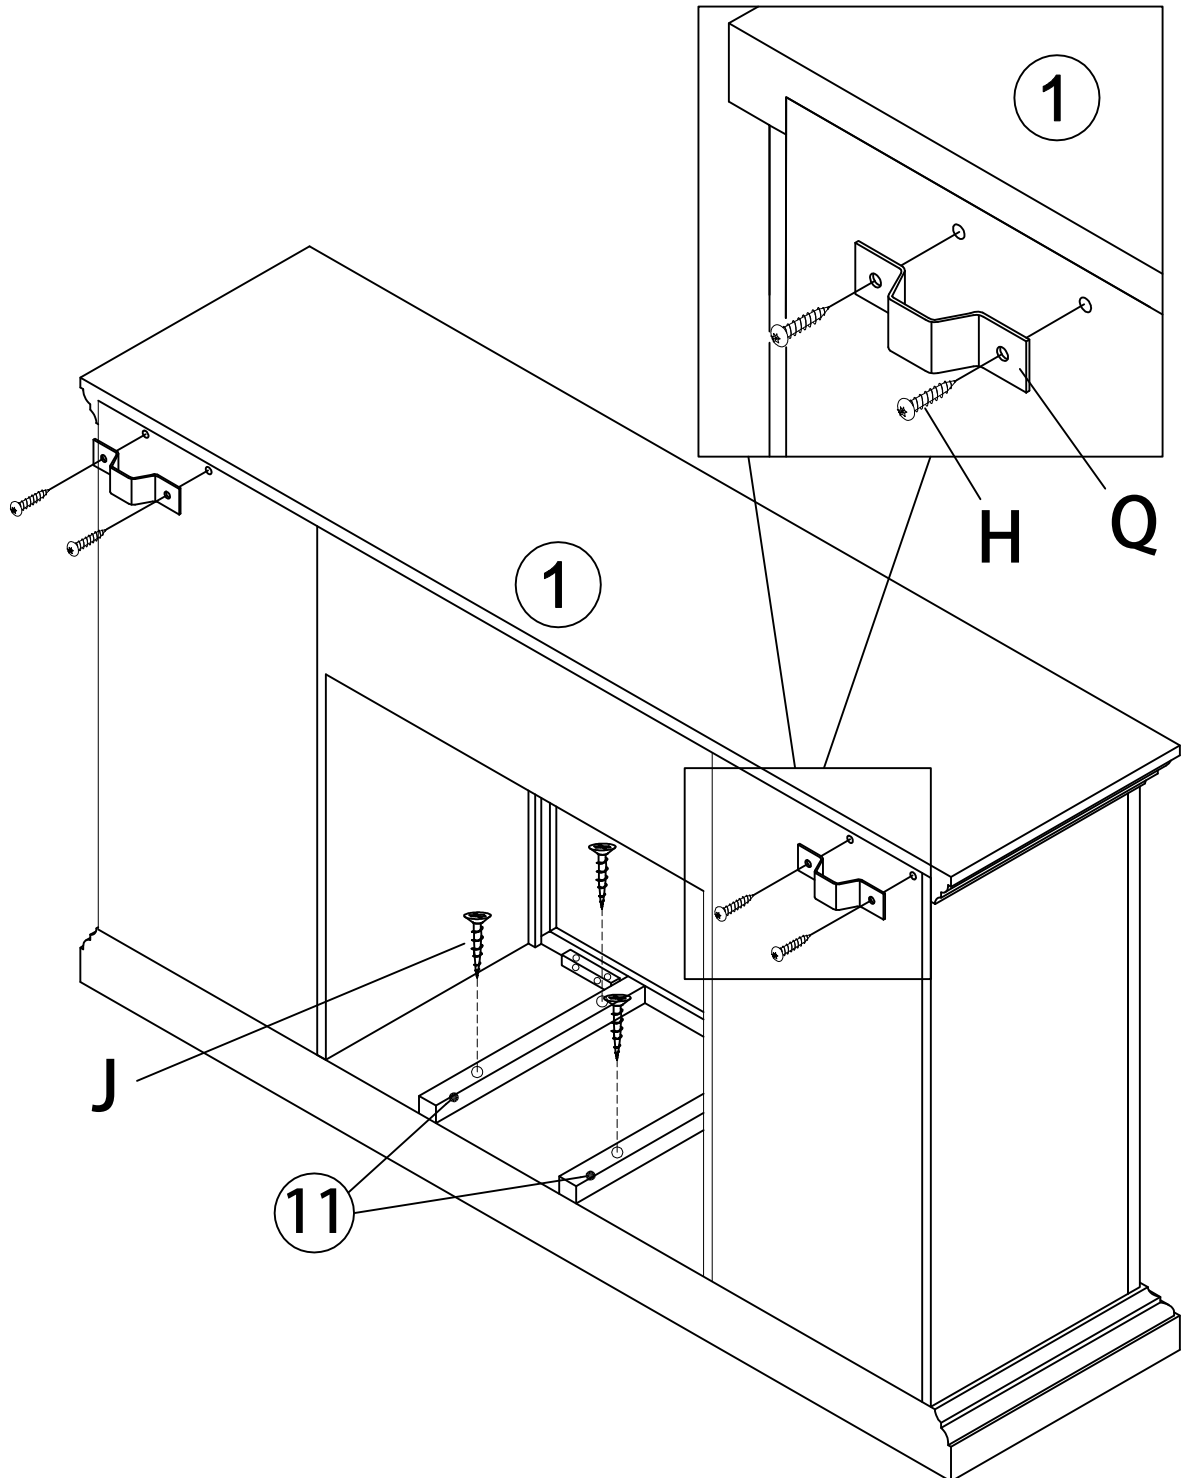

INSTALLATION

STEP 15:

 
Place the insert from the back.

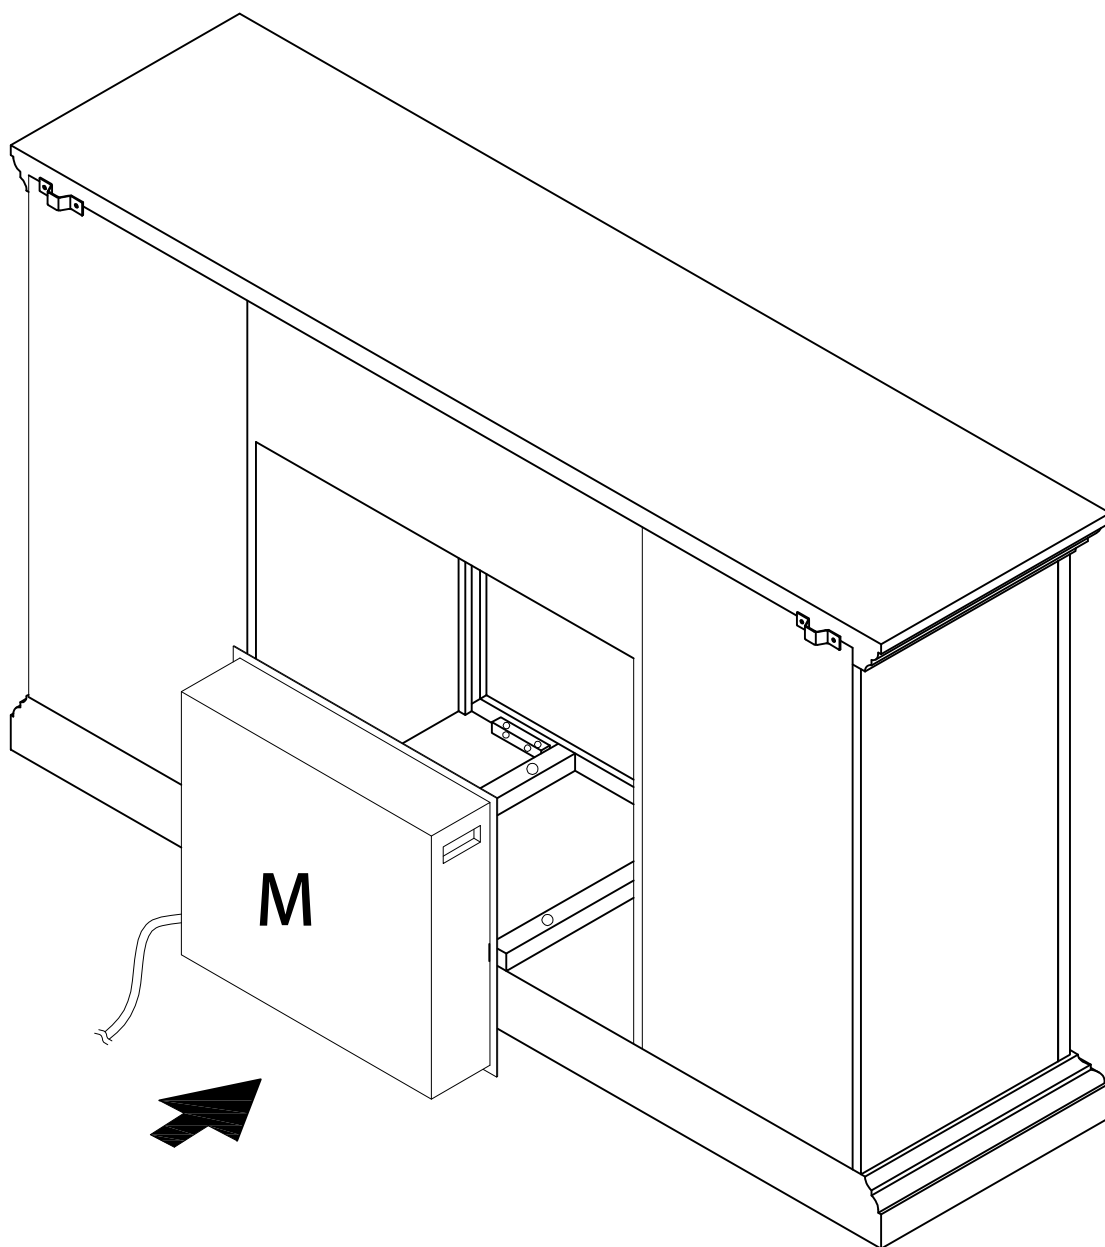

INSTALLATION

STEP 16:

 
Attach Insert Stop (17) to Left and Right Stand panel (5/6) with 2pcs Bolt (P) as shown.

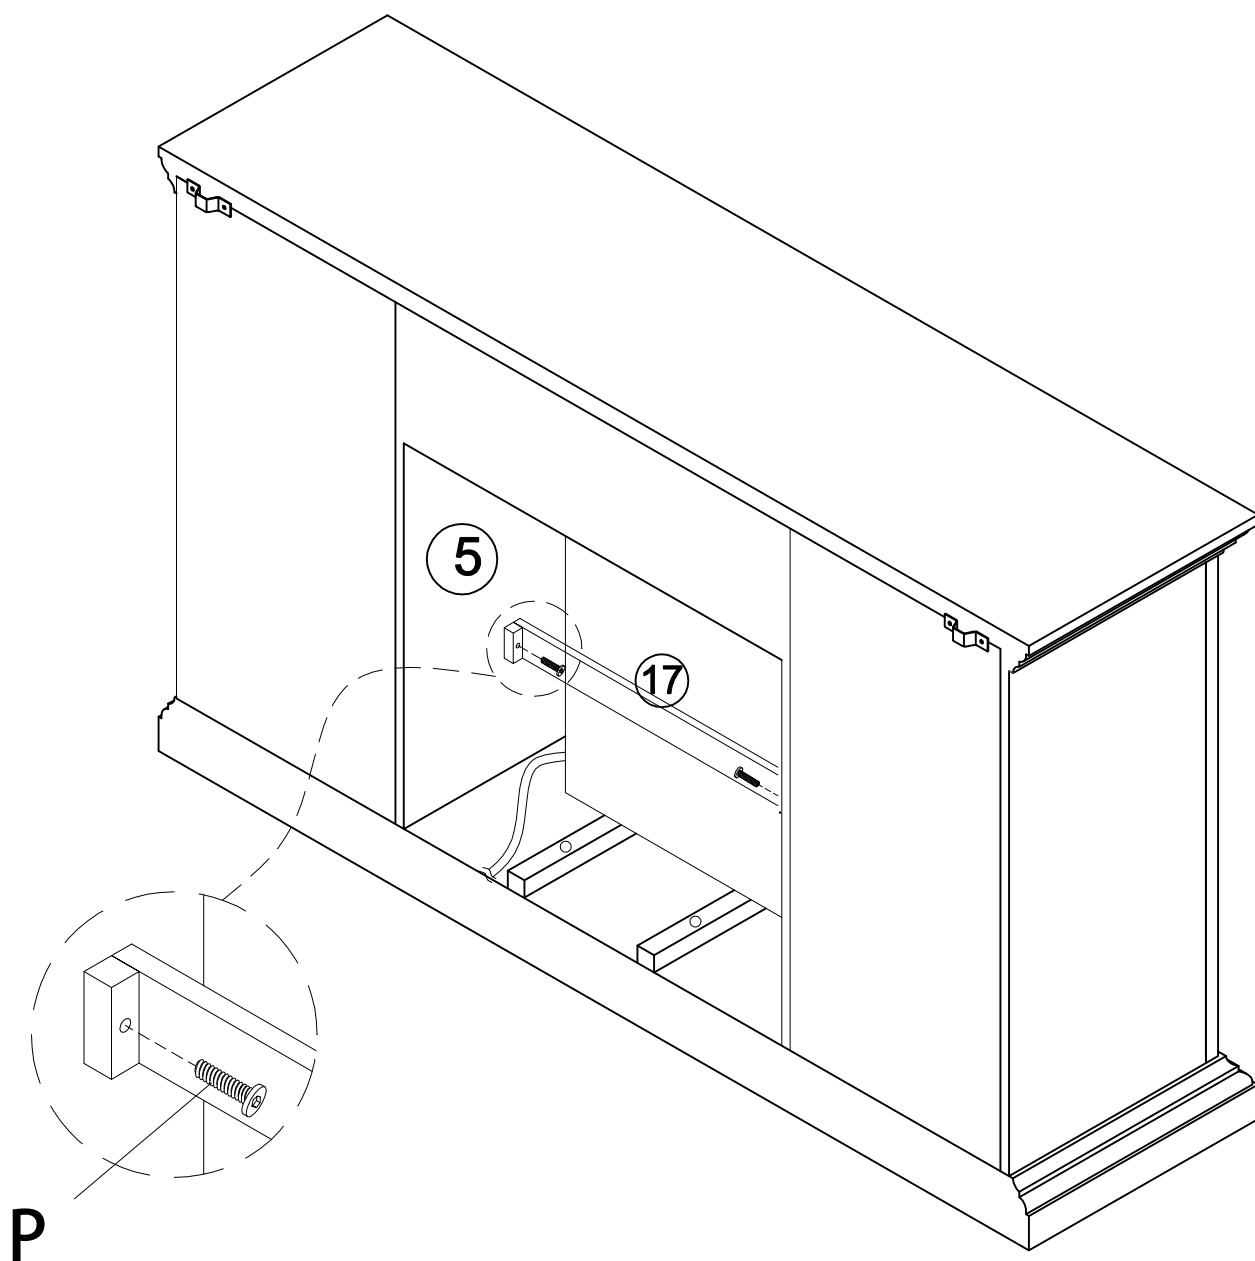

INSTALLATION

STEP 17:

 
Once assembly is complete, Place the fireplace in the desired position along the wall. With a pencil, lightly mark the location where Hook (Q) meets the wall. Remove the fireplace away from the wall. Place one of the remaining Hook (Q) just under the marked location and mark the hole locations with the pencil. Install the Anchor (R) into the wall at the marked hole locations. Attach the remaining 2pcs Hook (Q) using 4pcs Flat Head Screw (O) to the installed Anchors (R). Fully tighten the screws. Replace the fireplace back into location. Attach the Hook (Q) on the wall to the Hook (Q) on the fireplace using the Plastic Cable Tie (N) as shown.

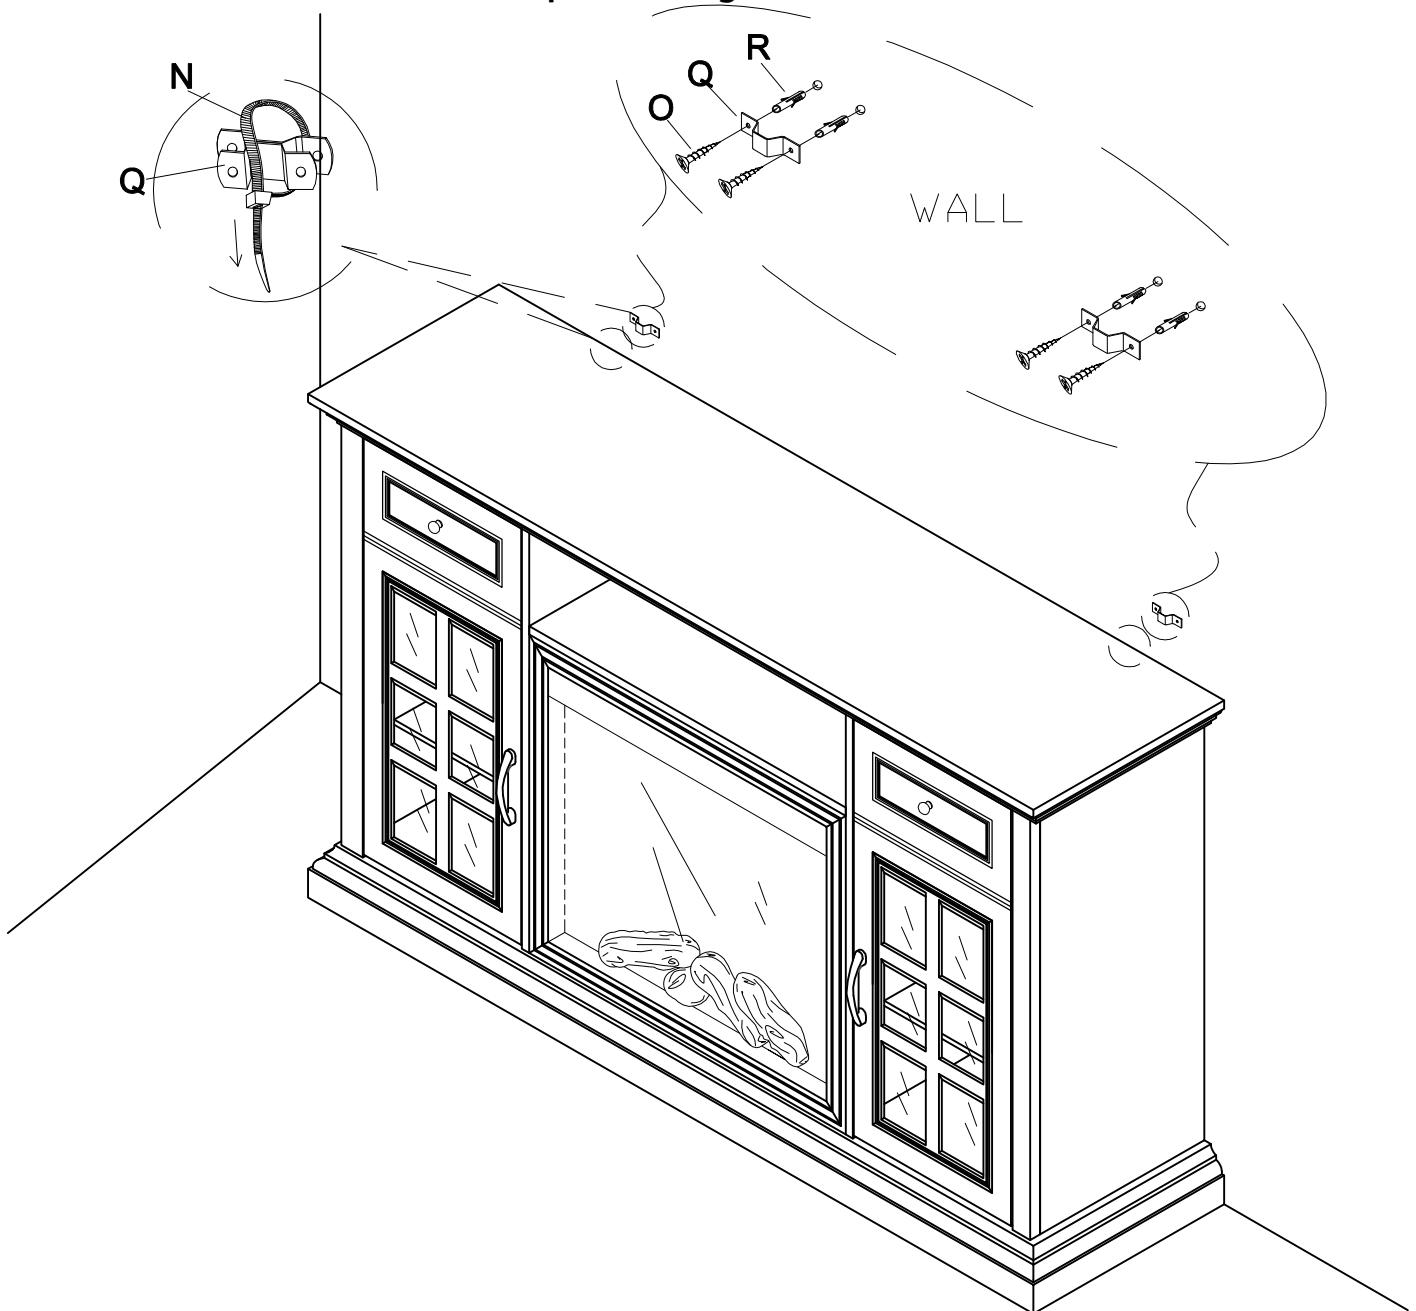



WARNING

 FOR USE WITH STORAGE WEIGHING_66(30)_LBS(KG) OR LESS.
USE WITH HEAVIER STORAGE MAY RESULT IN INSTABILITY CAUSING
TIP OVER RESULTING IN DEATH OR SERIOUS INJURY.

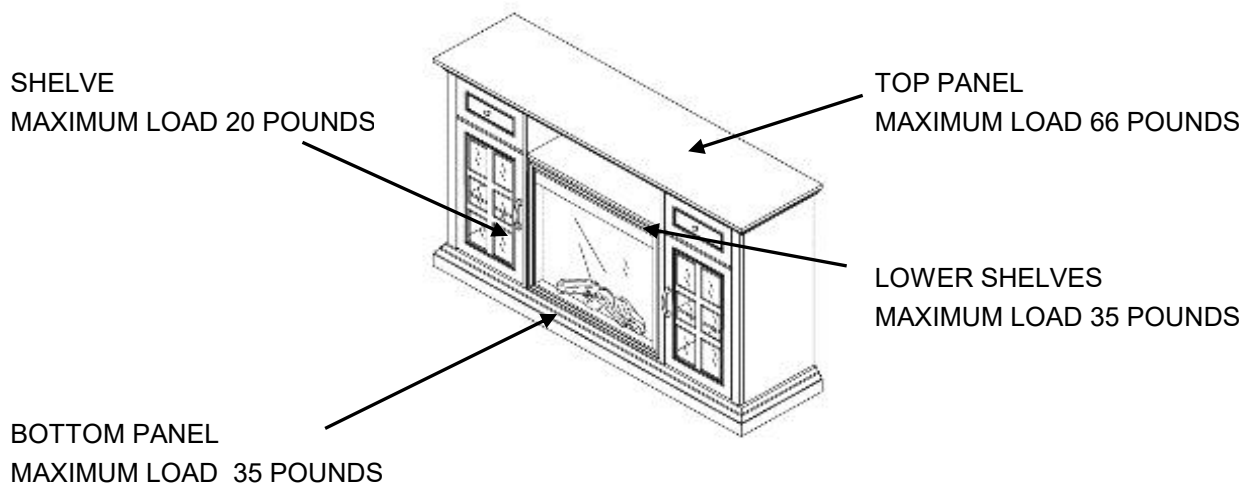

MANUFACTURER: CHIN-SHU WOODEN LTD.

MODEL:CAL-602004

DISTRIBUTION: Big Lots Stores, Inc.

ADDRESS: P.O. Box28523;Columbus, OH 43228-0523

COUNTRY OF ORIGIN: Vietnam