 


# ASSEMBLY INSTRUCTION SHEET

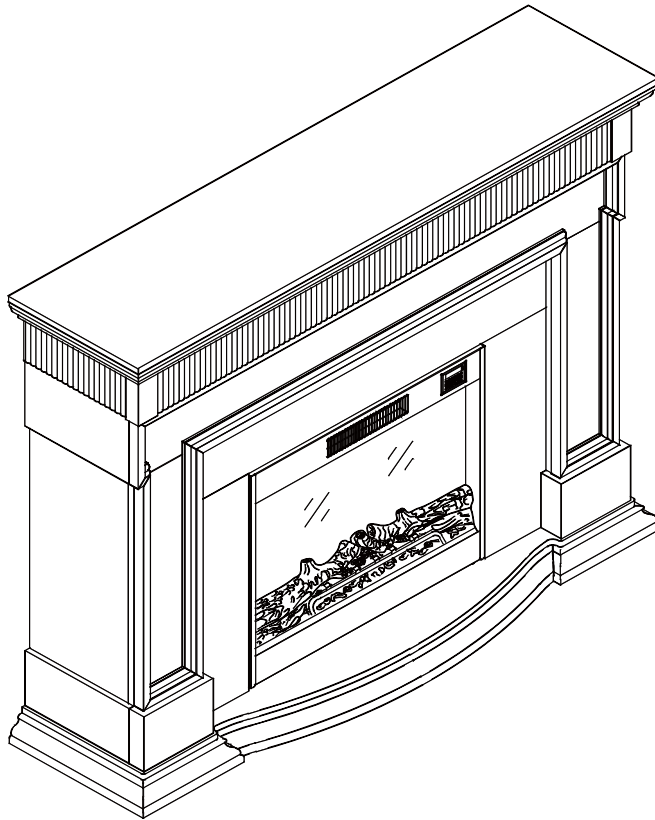

ITEM# FP-2021-62-3A

SKU# 810469922

DESCRIPTION: 62 IN BLUE GRAND FIREPLACE

**CUSTOMER SERVICE NO.:**

**1-888-878-8820**

Email: [customerservice@gbtcorporation.com](mailto:customerservice@gbtcorporation.com)



### **Warning:**

1. Need at least two adults to assemble this fireplace.
2. Assemble on soft , smooth surface to protect finish from being scratched .
3. DO NOT use power tools.
4. Remove all packaging material, make sure all parts are present before assembly.
5. Estimated Assembly Time: 30 minutes. Exact assembly times will vary based on skill level and past assembly experience.
6. Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.
7. Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

### **Customer Service**

For the missing or replacement of wooden panels, hardware, or electric fireplace insert, please contact Vendor Customer Service at 1-888-878-8820

Working hour: Mon.-Fri., 8:30am - 5:30pm Pacific Standard Time.


### **CARE INSTRUCTIONS:**

1. Clean periodically by wiping the product with a soft clean cloth.
2. Do not expose your product to any liquids. All liquids should be wiped up immediately with a soft, slightly damp cloth in the direction of wood grain.
3. Do not expose your product to strong or direct sunlight, near heat outlets or air conditioning units, open windows or dampness. Excessive exposure to sunlight and heat can cause fading of your furniture finish. Extreme temperatures and humidity changes can cause wood cracking and splitting.
4. Clean using a glass/mirror cleaner and soft cloth. Do not use cleaning products containing abrasives, as these will scratch glass/mirror.

**⚠ CAUTION:** This Fireplace ( FP-2021-62-3A ) is designed for flat panel LCD TVs weighing up to 60 lbs. For items other than flatpanel LCD TVs, this fireplace will support up to 135 lbs when the item is placed evenly on the top surface. Use with other products may results in instability causing possible injury.

**⚠ WARNING**


FOR USE WITH TELEVISIONS WEIGHTING 60 LBS (27.18KG) OR LESS. USE WITH HEAVIER TV MAY RESULT IN INSTABILITY CAUSING TIP OVER RESULTING IN DEATH OR SERIOUS INJURY.

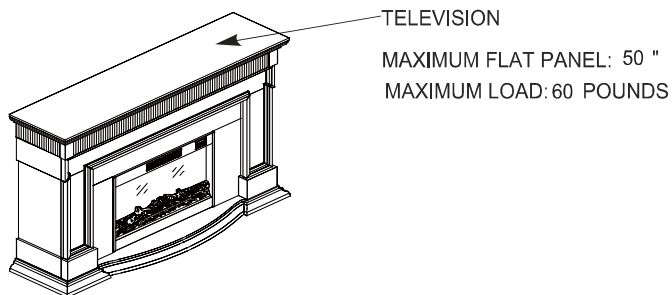

MANUFACTURER: TRENDX CO., LTD  
ITEM#: FP-2021-62-3A ; DISTRIBUTION: Big Lots Stores, Inc.  
ADDRESS: P.O. BOX 28523, COLUMBUS, OH 43228-0523 COUNTRY OF ORIGIN: VIETNAM;  
MANUFACTURE DATE: 2020.07


# PARTS LIST

**A**

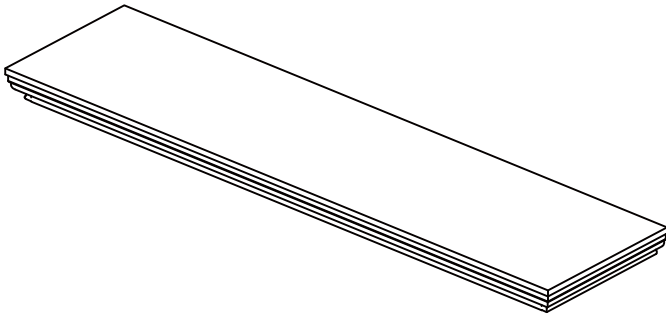


TOP 1pc

**B**

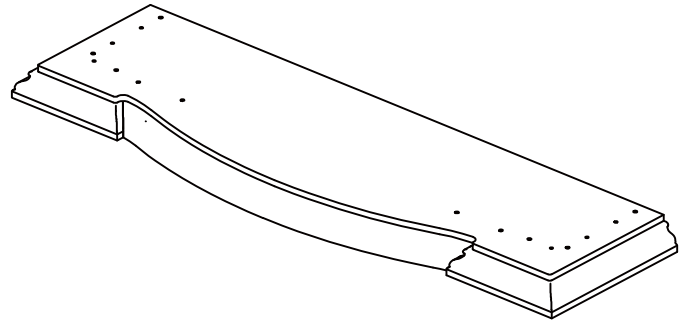 


BASE 1pc

**C**

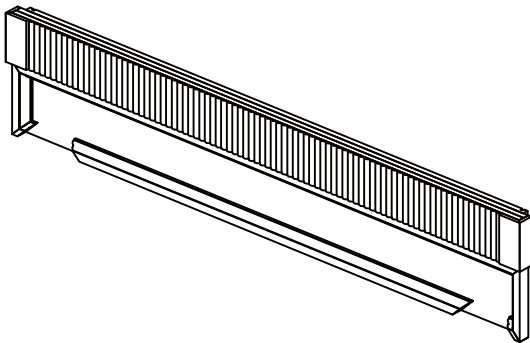 


FRONT PANEL 1pc

**D**

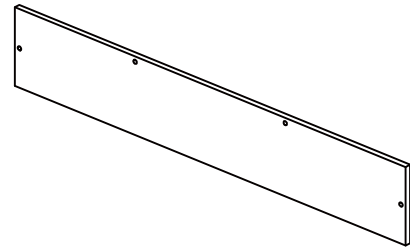 


TOP RAIL 1pc

**E**

 


LEFT SIDE PANEL  
1pc

**F**

 


RIGHT SIDE PANEL  
1pc

**G**

 


LEFT POST 1pc

**H**

 


RIGHT POST 1pc

**I**

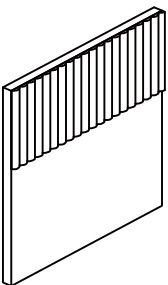 

UPPER  
DECORATIVE BLOCK  
2pcs

**J**

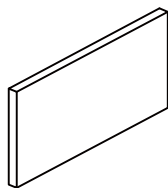 


BOTTOM  
DECORATIVE BLOCK  
2pcs

**K**



  
 

 



SIDE RAIL 2pcs

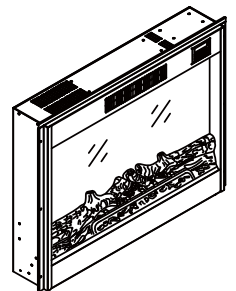**L**



 ELECTRIC  
FIREPLACE  
INSERT 1pc

# ASSEMBLY INSTRUCTION

H1		LONG BOLT	Ø1/4*1"	20pcs
H2		SHORT BOLT	Ø1/4*5/8"	40pcs
H3		SPRING WASHER	Ø1/4	60pcs
H4		FLAT WASHER	Ø1/4*16mm	60pcs
H5		ALLEN WRENCH	4mm	1pc
H6		ROUND HEAD SCREW	Ø8*12mm	6pcs
H7		BRACKET		20pcs

# ASSEMBLY INSTRUCTION

## Step 1

Place Left side panel (E) face down on a soft smooth surface. The side with the screw holes should be facing up. Align the holes of Bracket (H7) with the screw holes of Left side panel (E) with the tenons of Bracket (H7) facing outward as shown in Figure 1. Secure Bracket (H7) to Left side panel (E) with Short bolt (H2), Spring washer (H3) and Flat washer (H4) using Allen wrench (H5). DO NOT fully tighten bolts in this step. Repeat this procedure to attach Brackets (H7) to Front panel (C), Left post (G), Right post(H) and Right side panel(F).

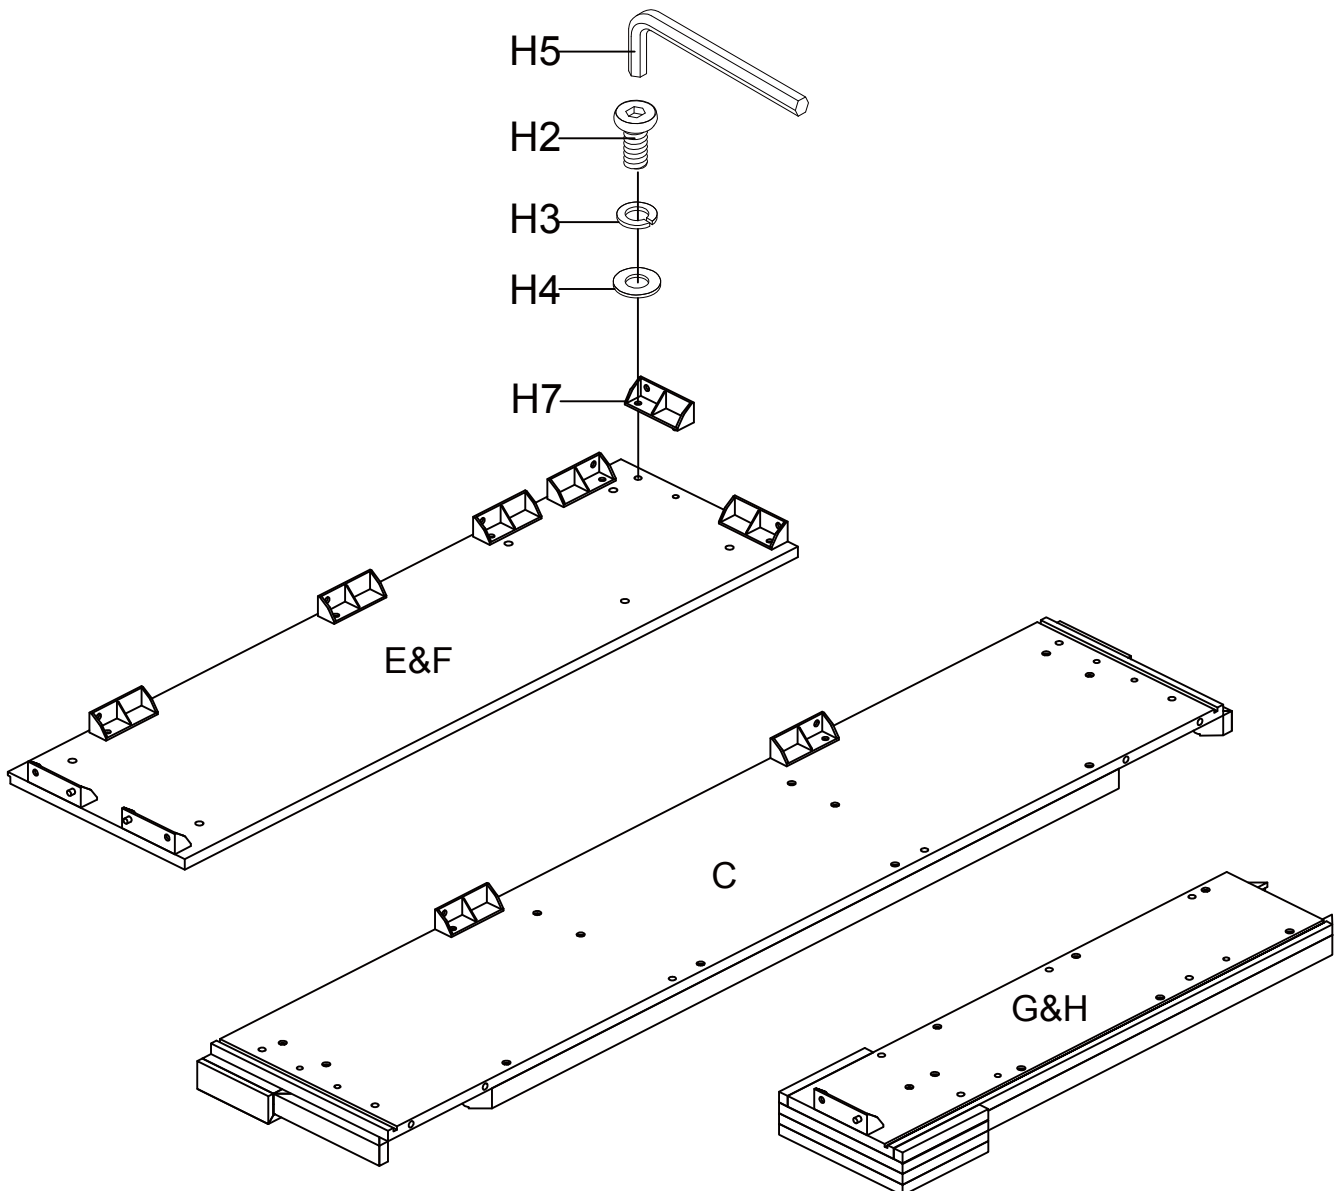


Figure 1

# ASSEMBLY INSTRUCTION

## Step 2

With assistance from another adult, place Left post (G) on a soft smooth surface, insert the tenons of Left side panel (E) into the corresponding holes of Left post (G) and make sure the bottom is flush. Secure the Left side panel (E) to Left post (G) with Short bolt (H2), Spring washer (H3), Flat washer (H4) using Allen wrench (H5) as shown in figure 2. DO NOT fully tighten the bolts in this step for later adjustment.

Repeat this procedure to attach Right side panel (F) to Right post (H) as shown in figure 2.

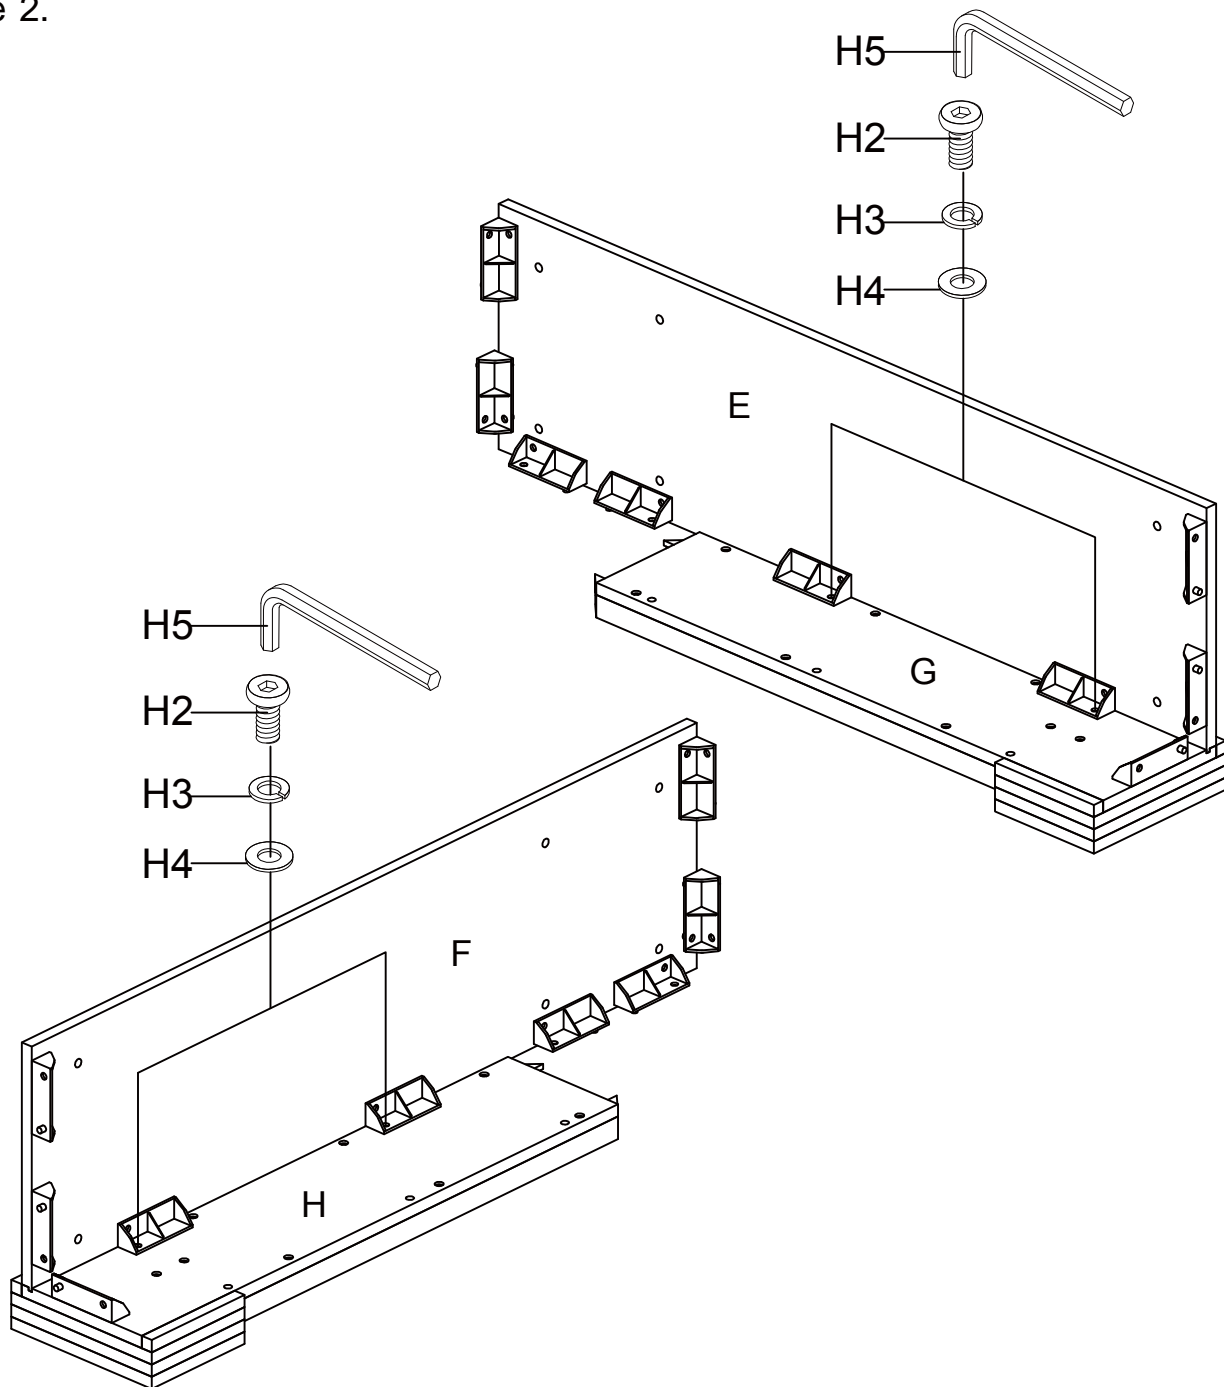


Figure 2

# ASSEMBLY INSTRUCTION

## Step 3

With assistance from another adult, insert the tenons of Left post (G) and Left side panel (E) into the corresponding holes of Base (B). Panels may need to be slightly adjusted to be inserted into the proper holes. Secure Left post (G) and Left Side panel (E) to Base (B) with Short bolt (H2), Spring washer (H3), Flat washer (H4) using Allen wrench (H5) as shown in figure 3. DO NOT fully tighten bolts in this step for later adjustment. NOTE: The Left post (G) and Left Side panel (E) should be supported until secured in place to prevent the panels from tipping and causing damage or injury. Repeat this process for the Right post (H) and Right side panel (F).

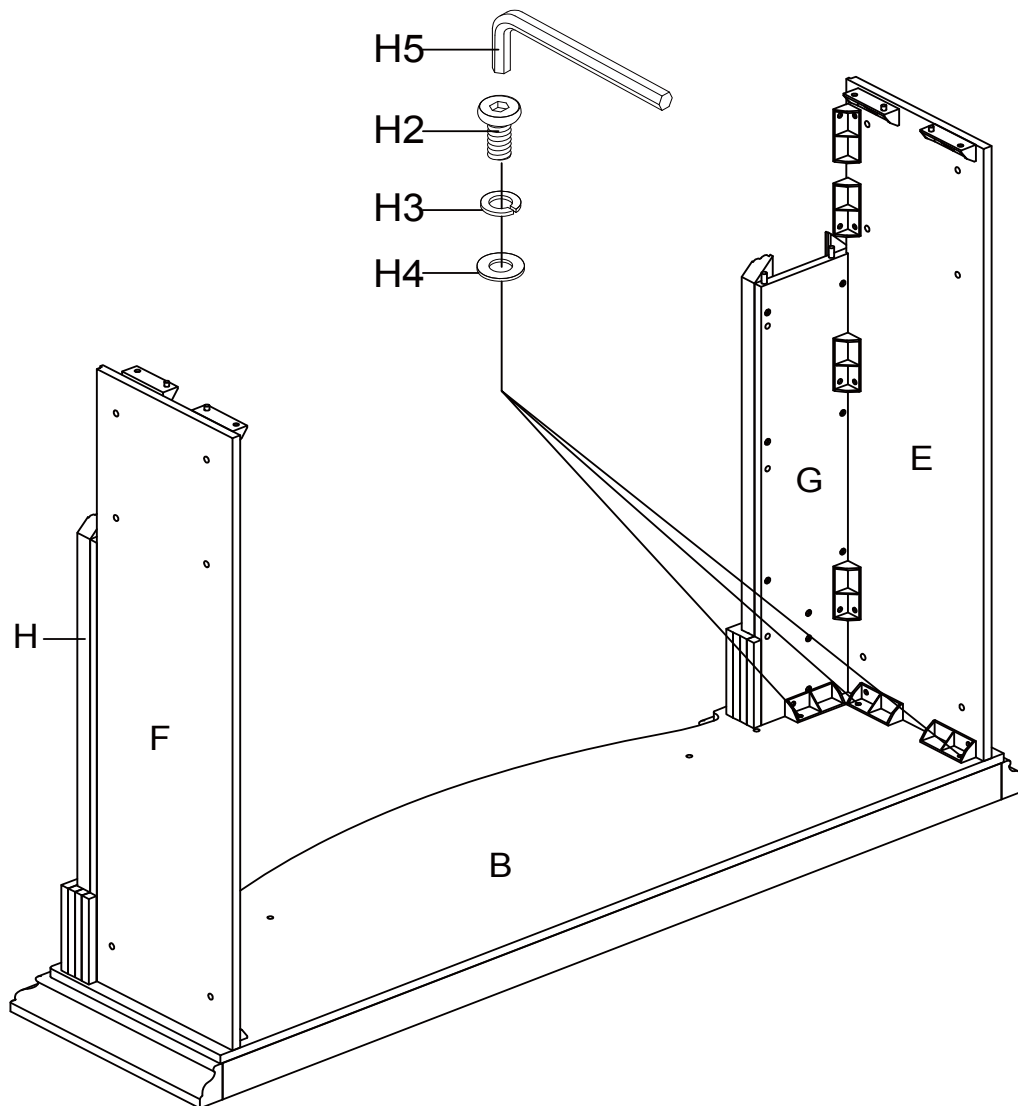


Figure 3



# ASSEMBLY INSTRUCTION

## Step 4

With assistance from another adult, insert the tenons of Left Side panel (E) and Right side panel (F) into the corresponding holes of the Front panel (C). Panels may need to be slightly adjusted to be inserted into the proper holes. Secure the Front panel (C) to Left Side panel (E) and Right side panel (F) with Short bolt (H2), Spring washer (H3), Flat washer (H4) using Allen wrench (H5) as shown in figure 4. DO NOT fully tighten bolts at this time for later adjustment.

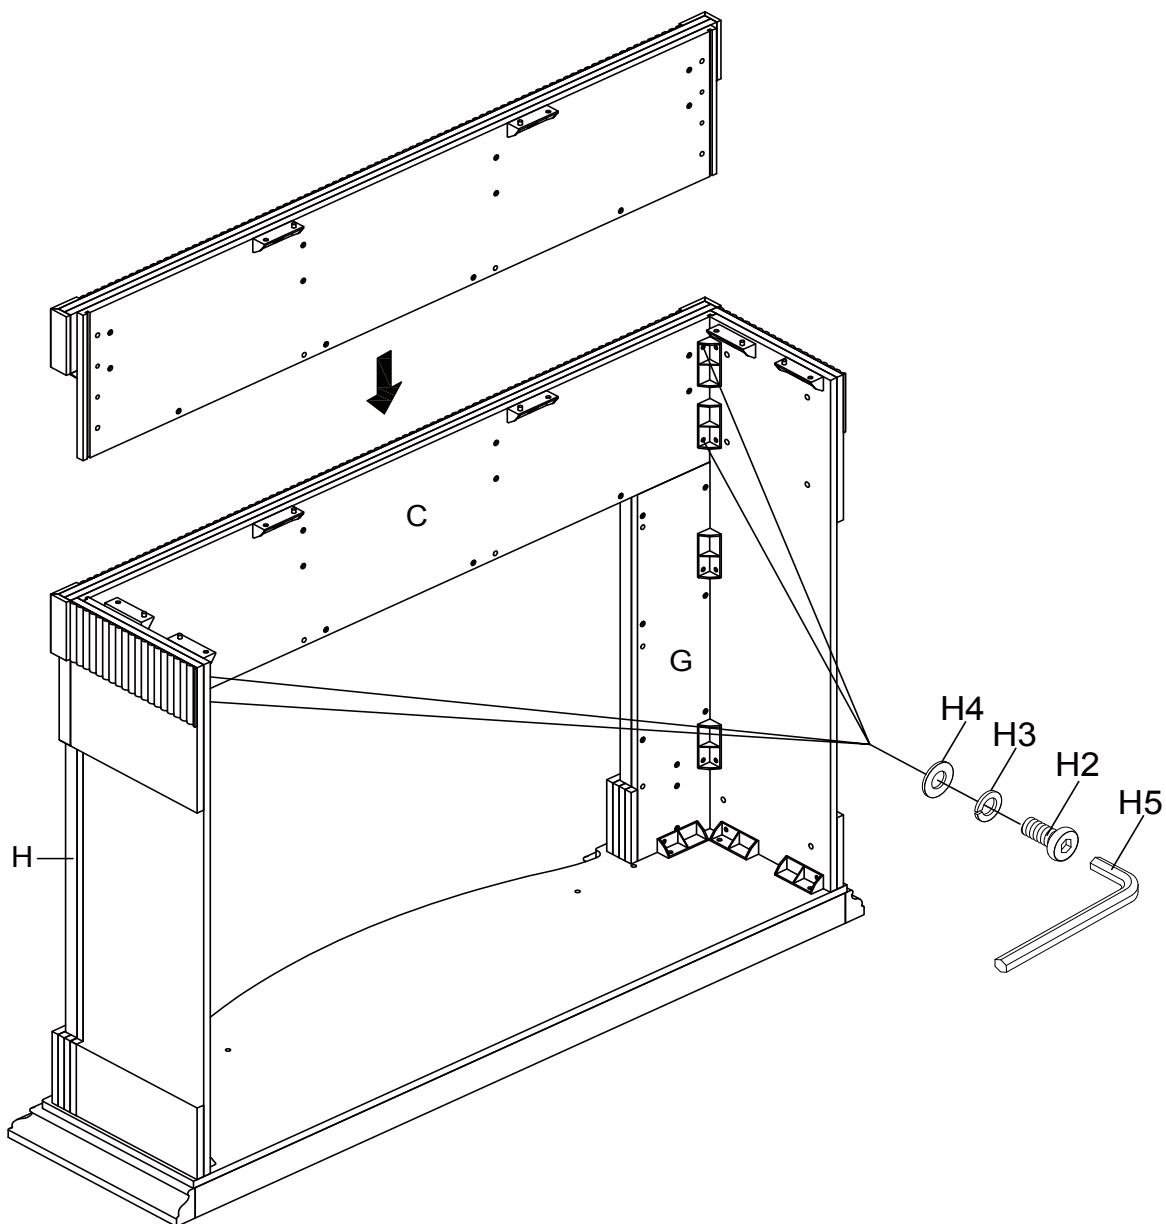


Figure 4

# ASSEMBLY INSTRUCTION

## Step 5

With assistance from another adult, place Upper decorative block (I), Bottom decorative block (J) into the corresponding holes of Left side panel (E) and Right side panel (F). Secure the block in place with Long bolt (H1), Spring washer (H3), Flat washer (H4) using Allen wrench (H5) as shown in figure 5. DO NOT fully tighten bolts in this step for later adjustment.

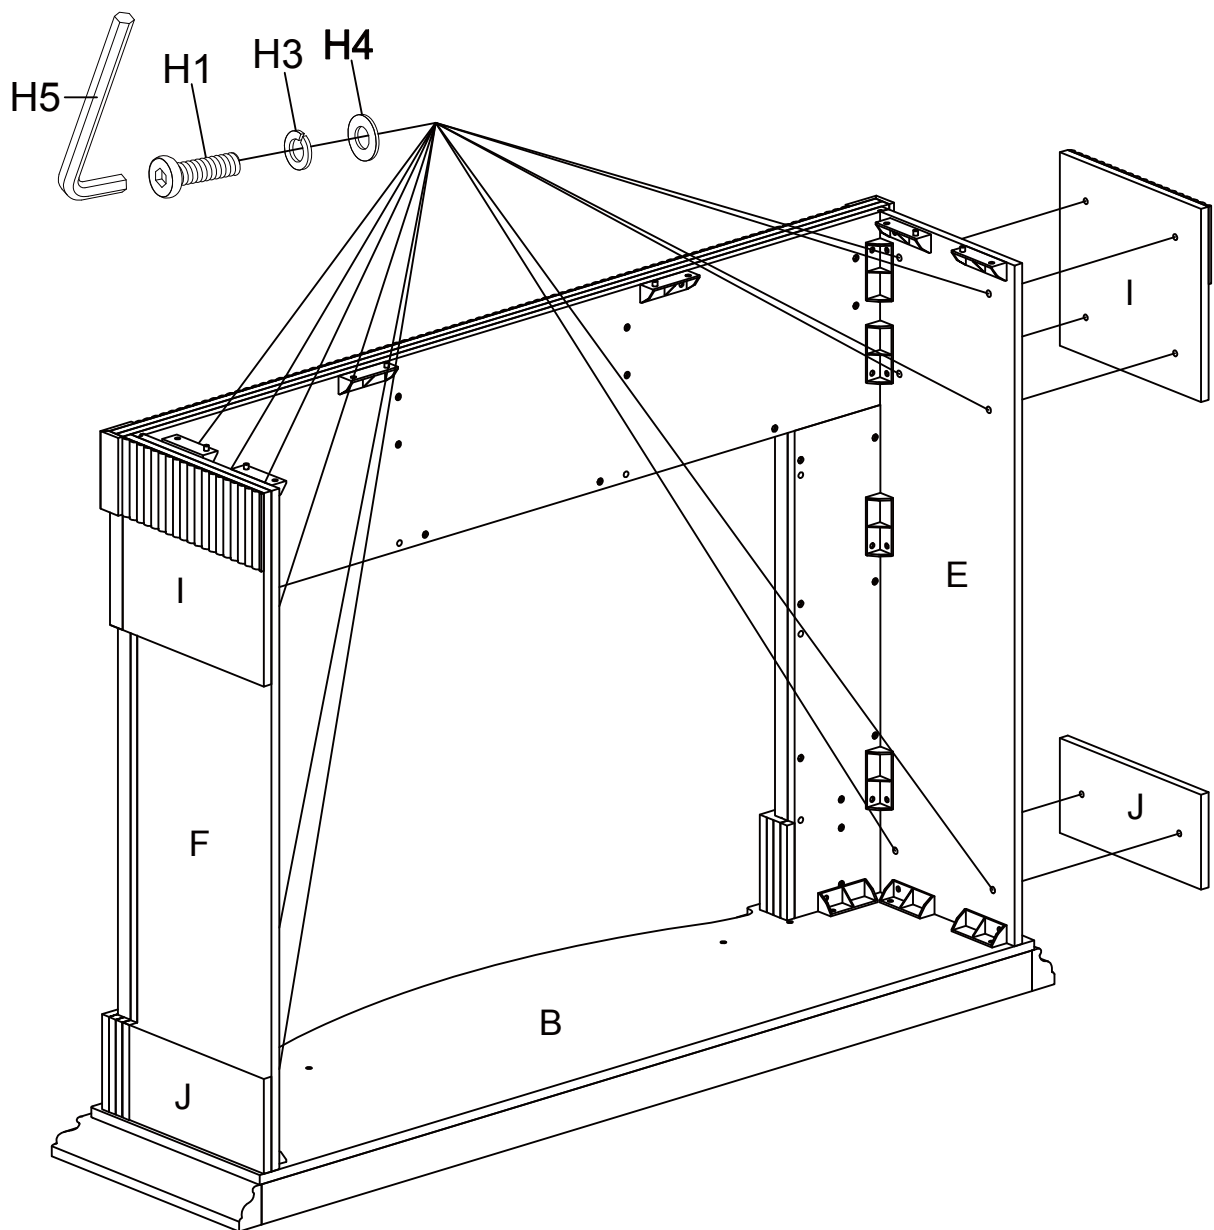


Figure 5

# ASSEMBLY INSTRUCTION

## Step 6

Insert the tenons of Side rail (K) into the corresponding holes of the Base (B). Align the holes of Side rail (K) and Left post (G), secure Side rail (K) to Left post (G) with Long bolt (H1), Spring washer (H3) and Flat washer (H4) using Allen wrench (H5). DO NOT fully tighten bolts in this step for later adjustment. Repeat this process to attach the other Side rail (K) to Right post (H) as shown in figure 6.


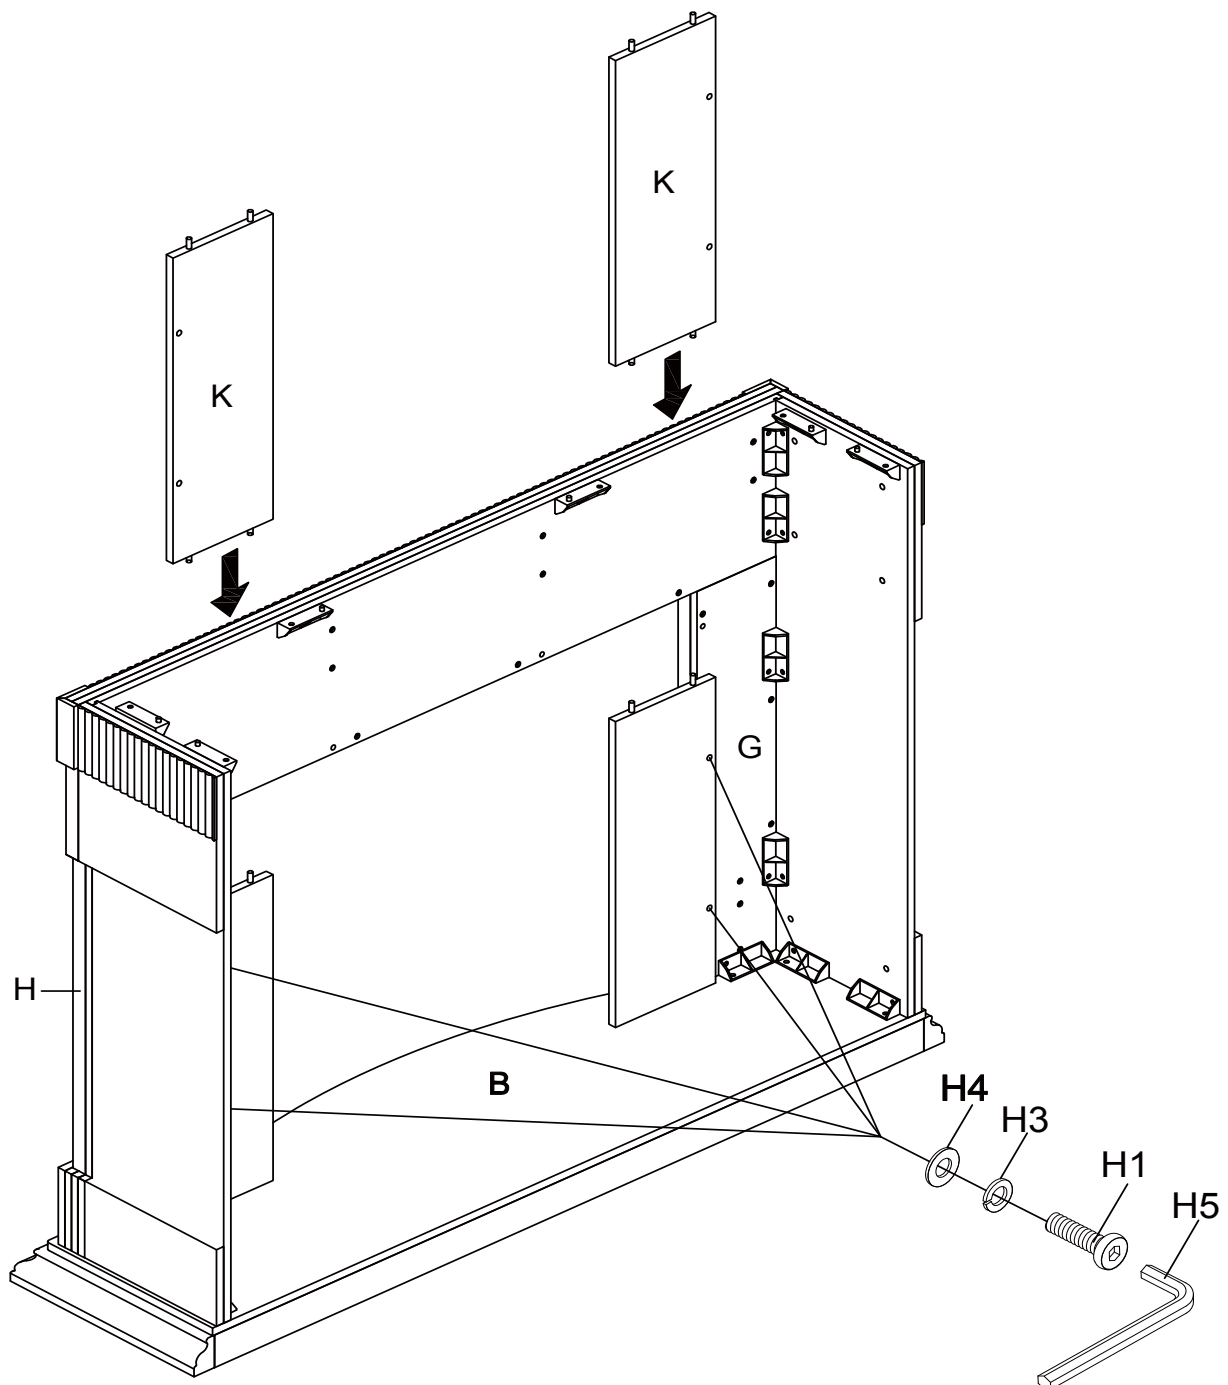


Figure 6

# ASSEMBLY INSTRUCTION

## Step 7

With assistance from another adult, insert the tenons of the Side rail (K) into the corresponding holes of Top rail (D). Then align the holes and attach Top rail (D) to Front panel (C) with Long bolt (H1), Spring washer (H3) and Flat washer (H4) using Allen wrench (H5) as shown figure 7. Do not fully tighten bolts in this step for later adjustment.

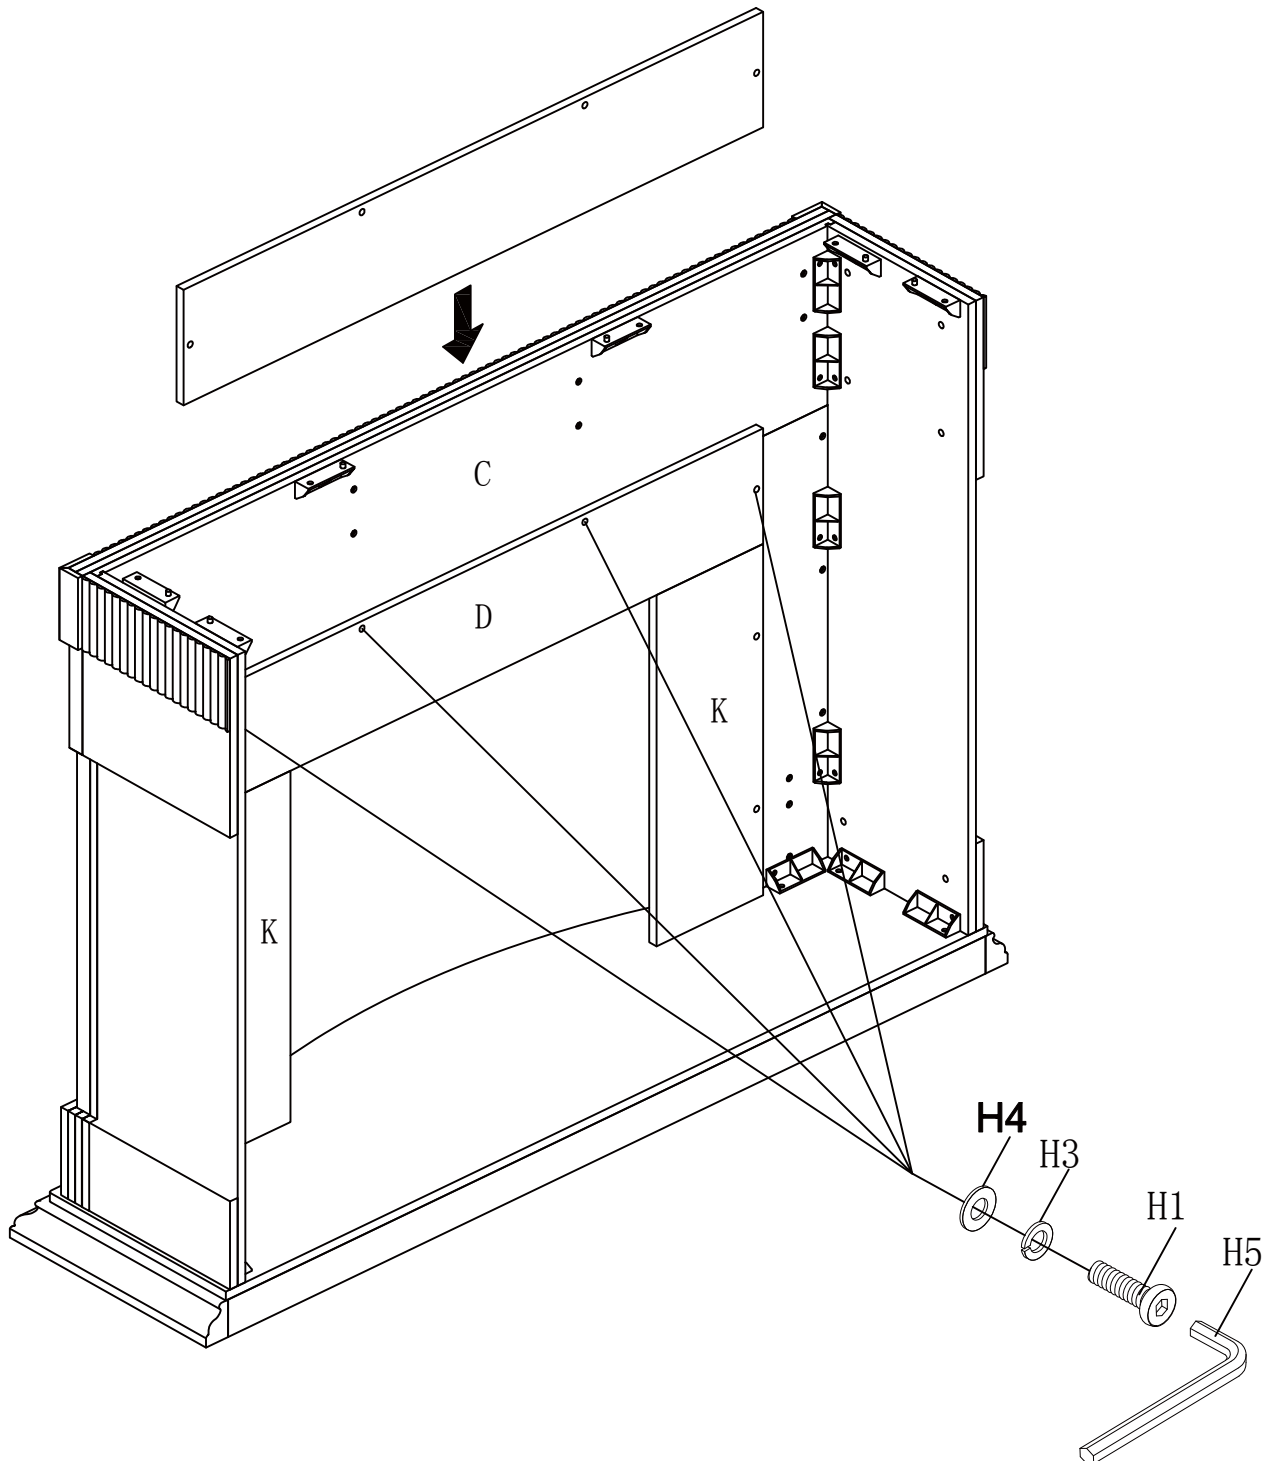

## Figure 7

# ASSEMBLY INSTRUCTION

## Step 8

With assistance from another adult, align the tenons of Left and Right side panel (E and F), Front panel (C) with the corresponding holes in Top (A) as shown in figure 8. Take care not to pinch your fingers as the top is lowered in place. Secure Top (A) to the Left and Right side panel (E and F), Front panel (C) with Short bolt (H2), Spring washer (H3) and Flat washer (H4) using Allen wrench (H5). Adjust all parts to minimize any gaps between panels and Fully tighten all bolts from Steps 1-8. As shown in figure 8.

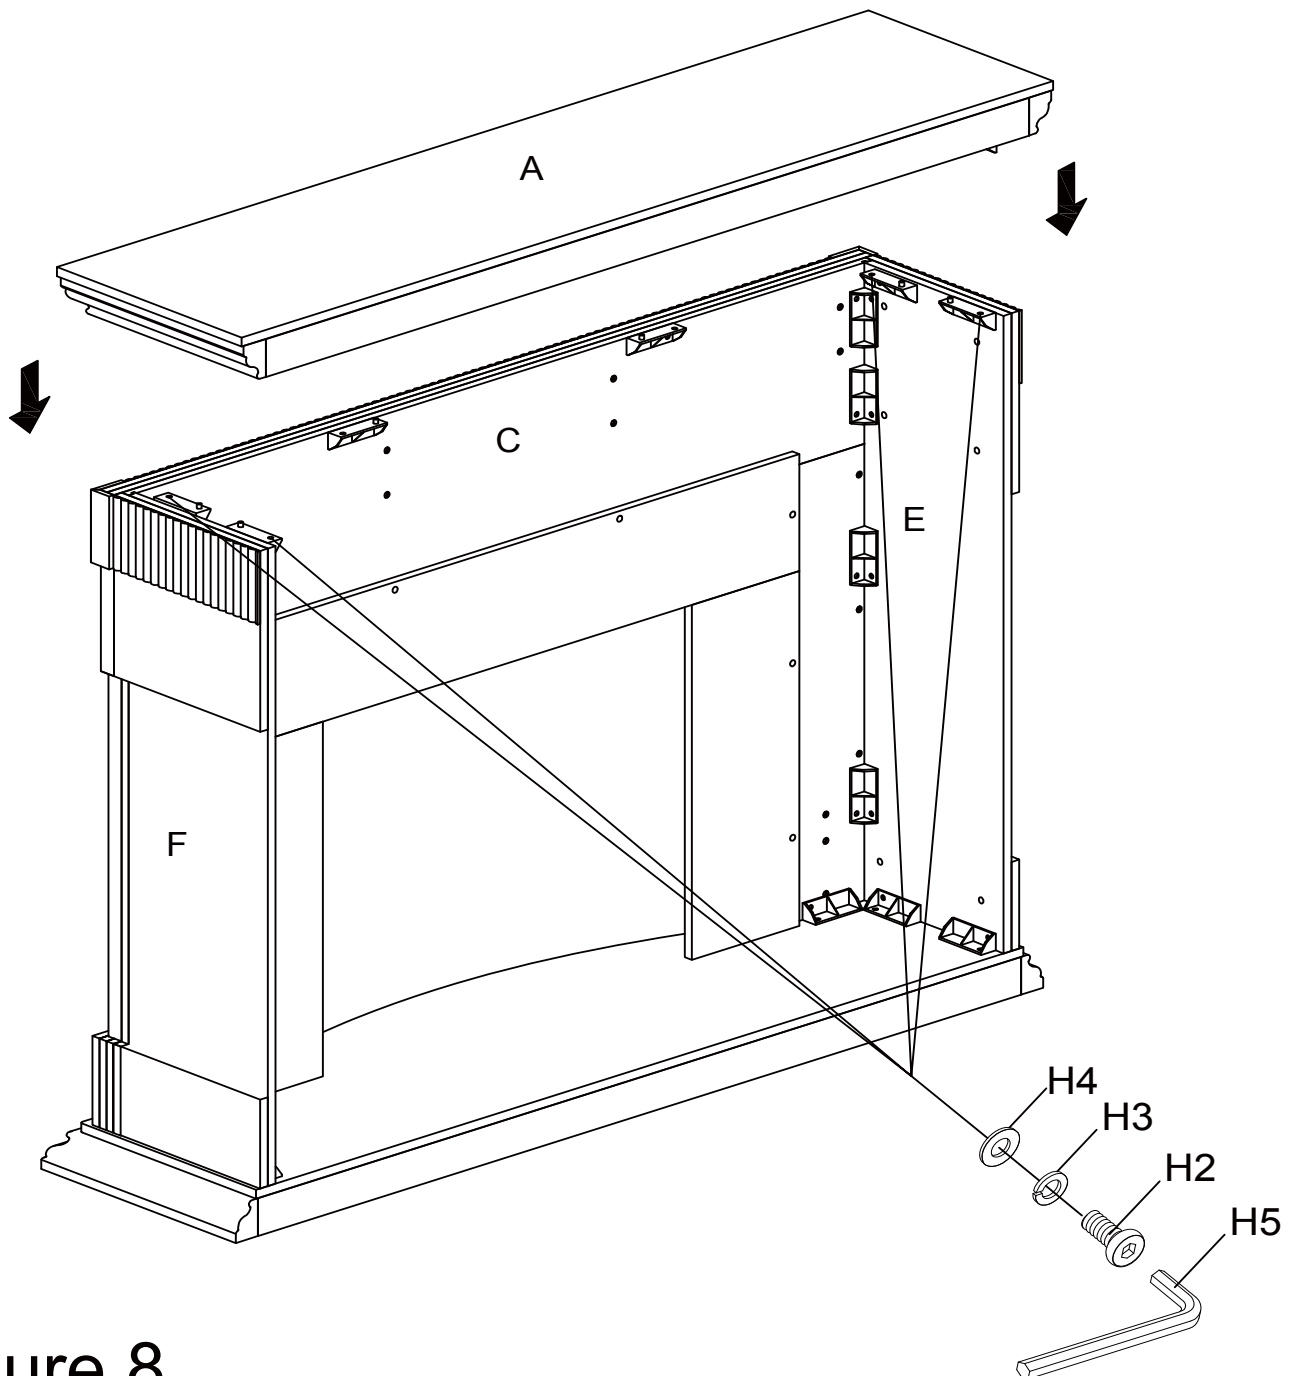


Figure 8

# ASSEMBLY INSTRUCTION

## Step 9

Place the Electric fireplace insert (L) into the assembled Mantel from the back. Slide the Electric fireplace insert (F) so the space around the insert and rails is equal. Secure the Electric fireplace insert to the back of the assembled Mantel with Round head screws (H6) using Phillips screwdriver (not provided) as shown in figure 9.


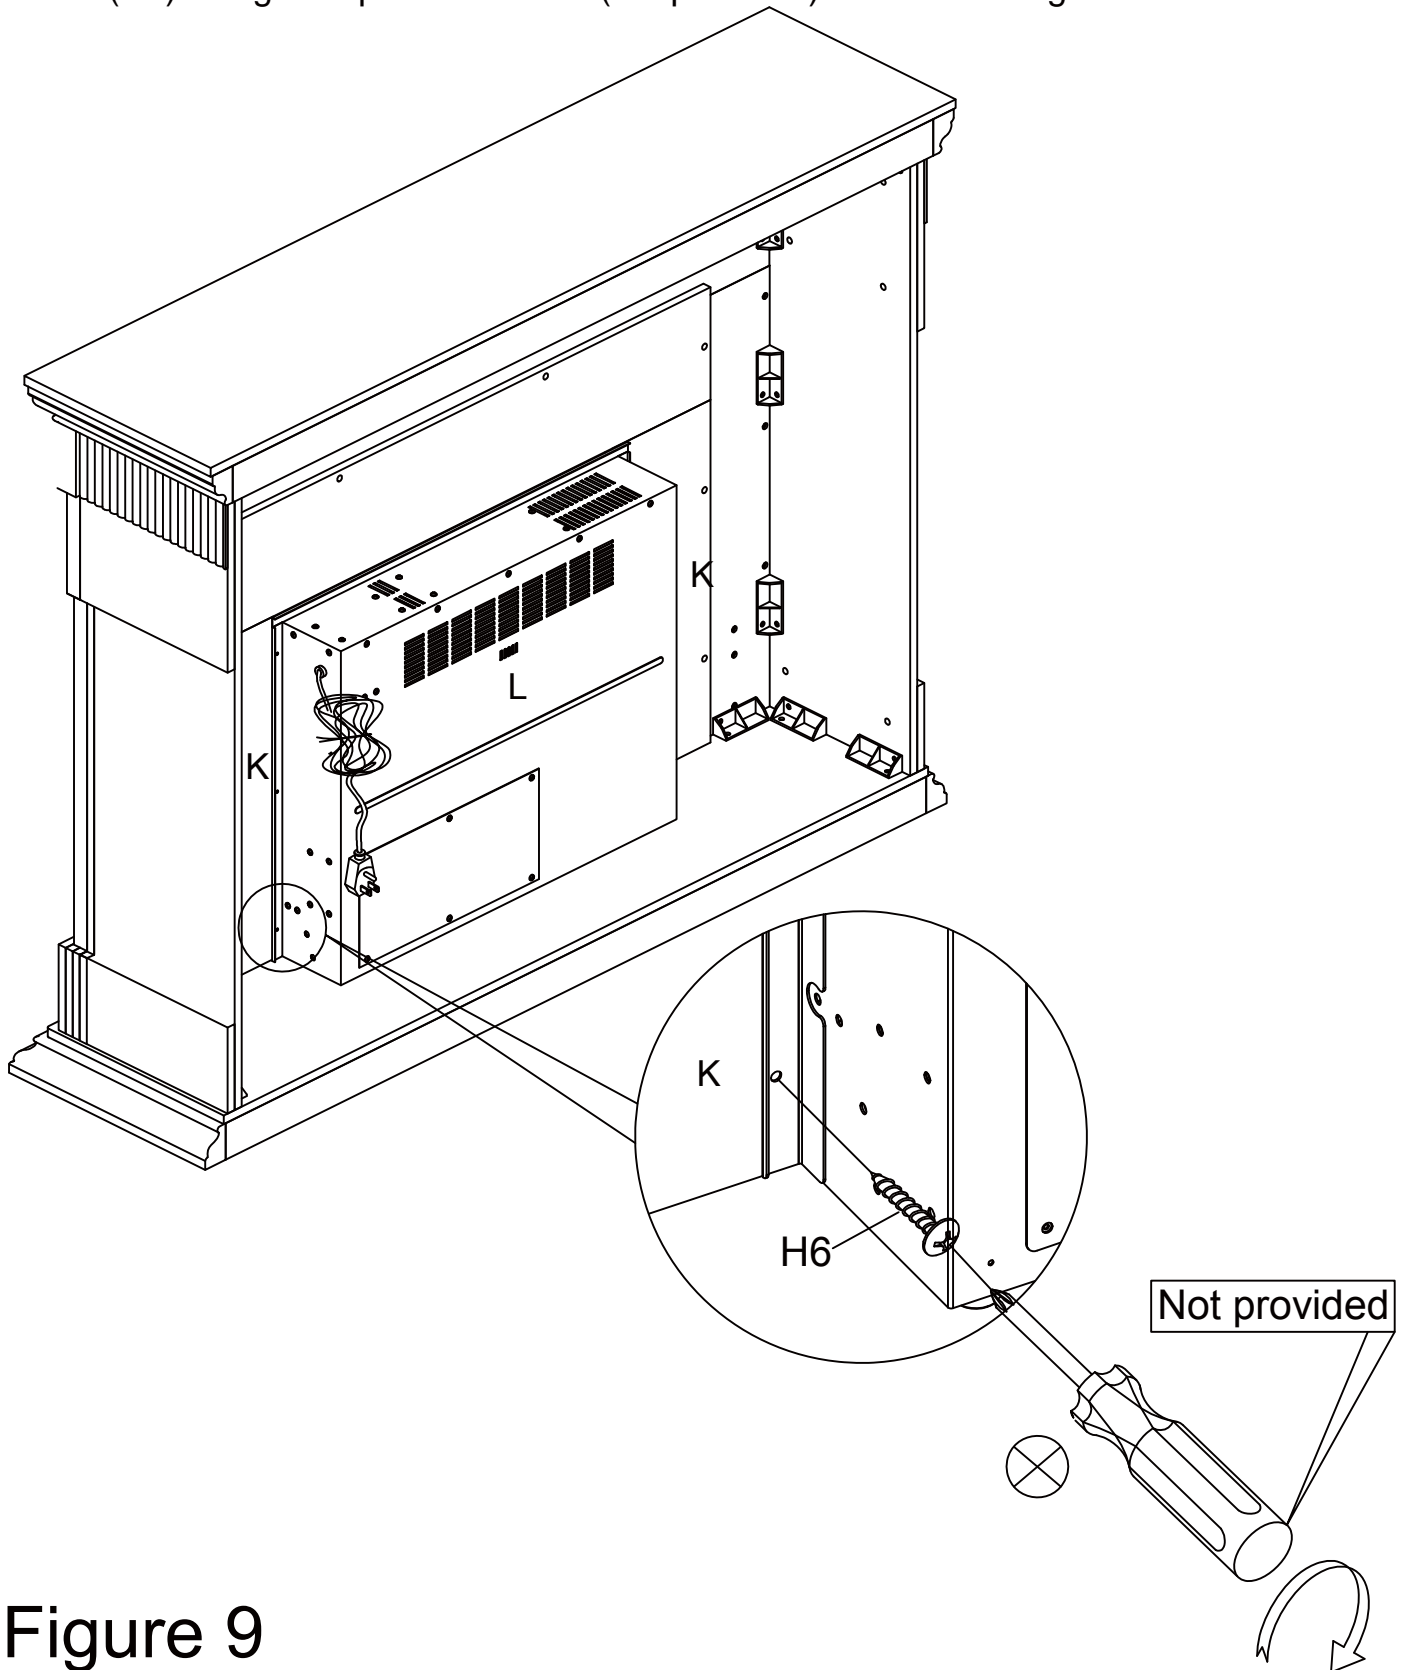


Figure 9

# ASSEMBLY INSTRUCTION

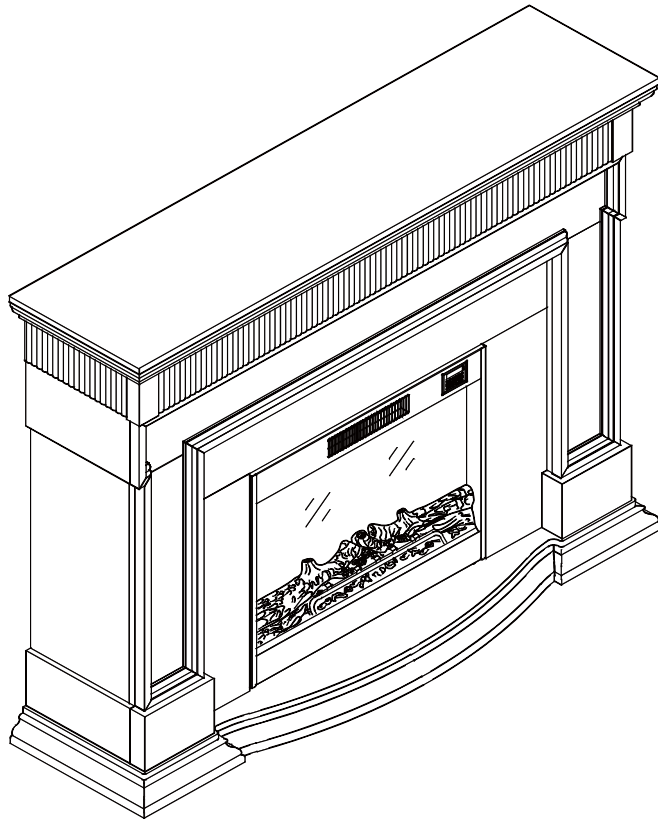

Assembly is now complete.

Note: Please read the operating manual for the Electric Fireplace Insert and Electric Fireplace Insert remote control before using Fireplace.

PRINTED IN VIETNAM

MADE IN VIETNAM