



## ASSEMBLY INSTRUCTION

ITEM#: BL-BR-203-DR-4

SKU#: 810490224

---

# DRESSER

---

### Need help? We are here for you!

- For missing hardware such as nuts & bolts, please contact BIG LOTS Customer Service at <https://www.biglots.com/help/contact-us>
- For issues with any wood parts, knobs, glides, etc. please email [Service@GrandArtFurniture.com](mailto:Service@GrandArtFurniture.com). When emailing Grand Art you MUST include the following: \*your first and last name, shipping address, phone number, email address, item sku number (shown above), and part(s) letter you are requesting.

---

# General best practices for assembly:

---

Determine you have adequate space for assembly.

Assembly by two adults is recommended.

Assembly on soft surfaces to prevent damage to product finish.

Keep children away during assembly. This item contains small parts which can be swallowed by children.

Do not discard any of packaging until you have checked that you have all parts and hardware.

Retain the assembly instructions for future reference.

The manufacturer will not accept responsibility for unauthorized repairs or modifications to this product.

This product is for residential use only, not for commercial use.

A Phillips head screwdriver is necessary for assembly but is not included.

---

## Warnings:

---

Should this product become damaged, and/or components are broken or missing,  
DO NOT USE.

This product will burn if left in contact with flame source.

---

## Maintenance:

---

Wipe with a damp cloth. Use Furniture polish or lemon oil on the wood as needed. Avoid prolonged exposure to moisture.

Do not scratch or chip the finish.

Do not put hot objects which are more than 80 degrees Fahrenheit directly on the surface.


Check bolts/screws periodically and tighten if necessary.

To prolong the life of product we recommend storage in a dry area when not in use or during austere weather conditions.

---

## PARTS LIST


---

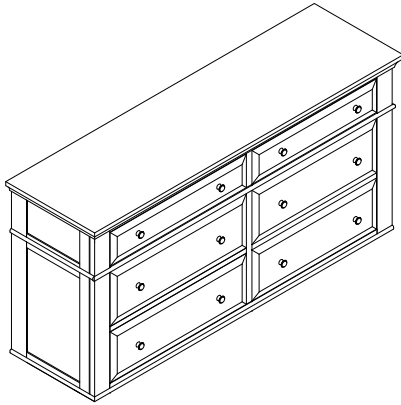

**A**

Dresser body

 x 1 pc



**B**

Legs

x 4 pcs



**C**

 
Support Leg

x 1 pc

---

## HARDWARE LIST

---



**1**

Allen Bolt x 4 pcs

Ø5/16" x 4"



**2**

Spring Washer x 4 pcs

Ø5/16"



**3**

Flat Washer x 4 pcs

 
Ø5/16"



**4**

Allen Key x 1 pc


5mm



**5**

Wood Dowel x 8 pcs

 Ø8 x 30mm

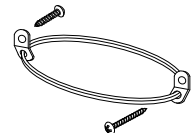



**6**

Tipping Restrain x 1 set


# STEP 1

## Hardware needed

Remove the carton containing the legs and hardware from the drawer. With assistance, carefully place the Dresser Body (A) onto it's back as shown. Insert the Wood Dowels (5) into the holes at the corner of the Dresser Body (A). Align the holes of Leg (B) with the dowels and slide into place. Secure the Leg to the Dresser Body with Flat Washer (3), Spring Washer (2) and Bolt (1) using Allen Key (4). Fully tighten bolts. Repeat this step to attach the remaining Legs.

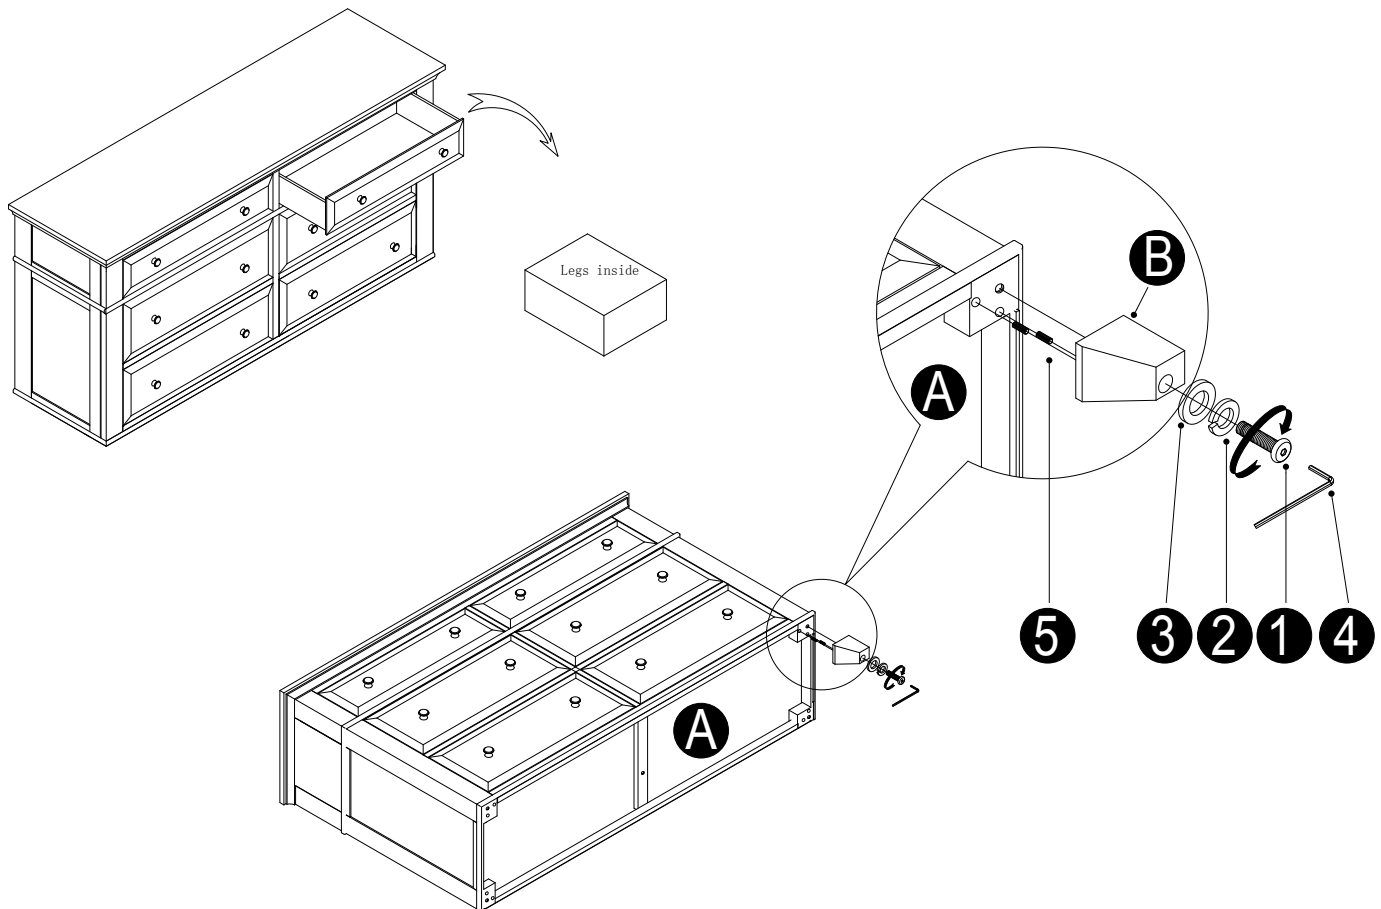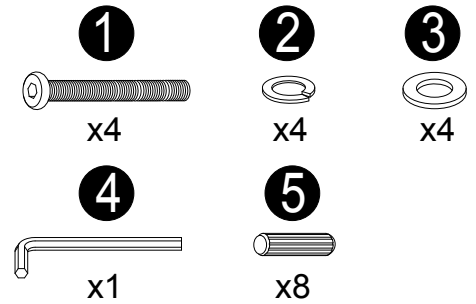


## Assembled View:

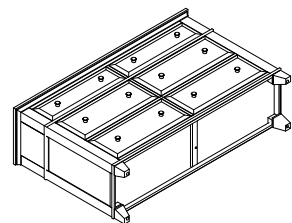


## STEP 2

Insert the Support Leg (C) into the hole in the center of the Dresser bottom and rotate clockwise until fully tightened. With Assistance, carefully return the dresser back to the upright position.

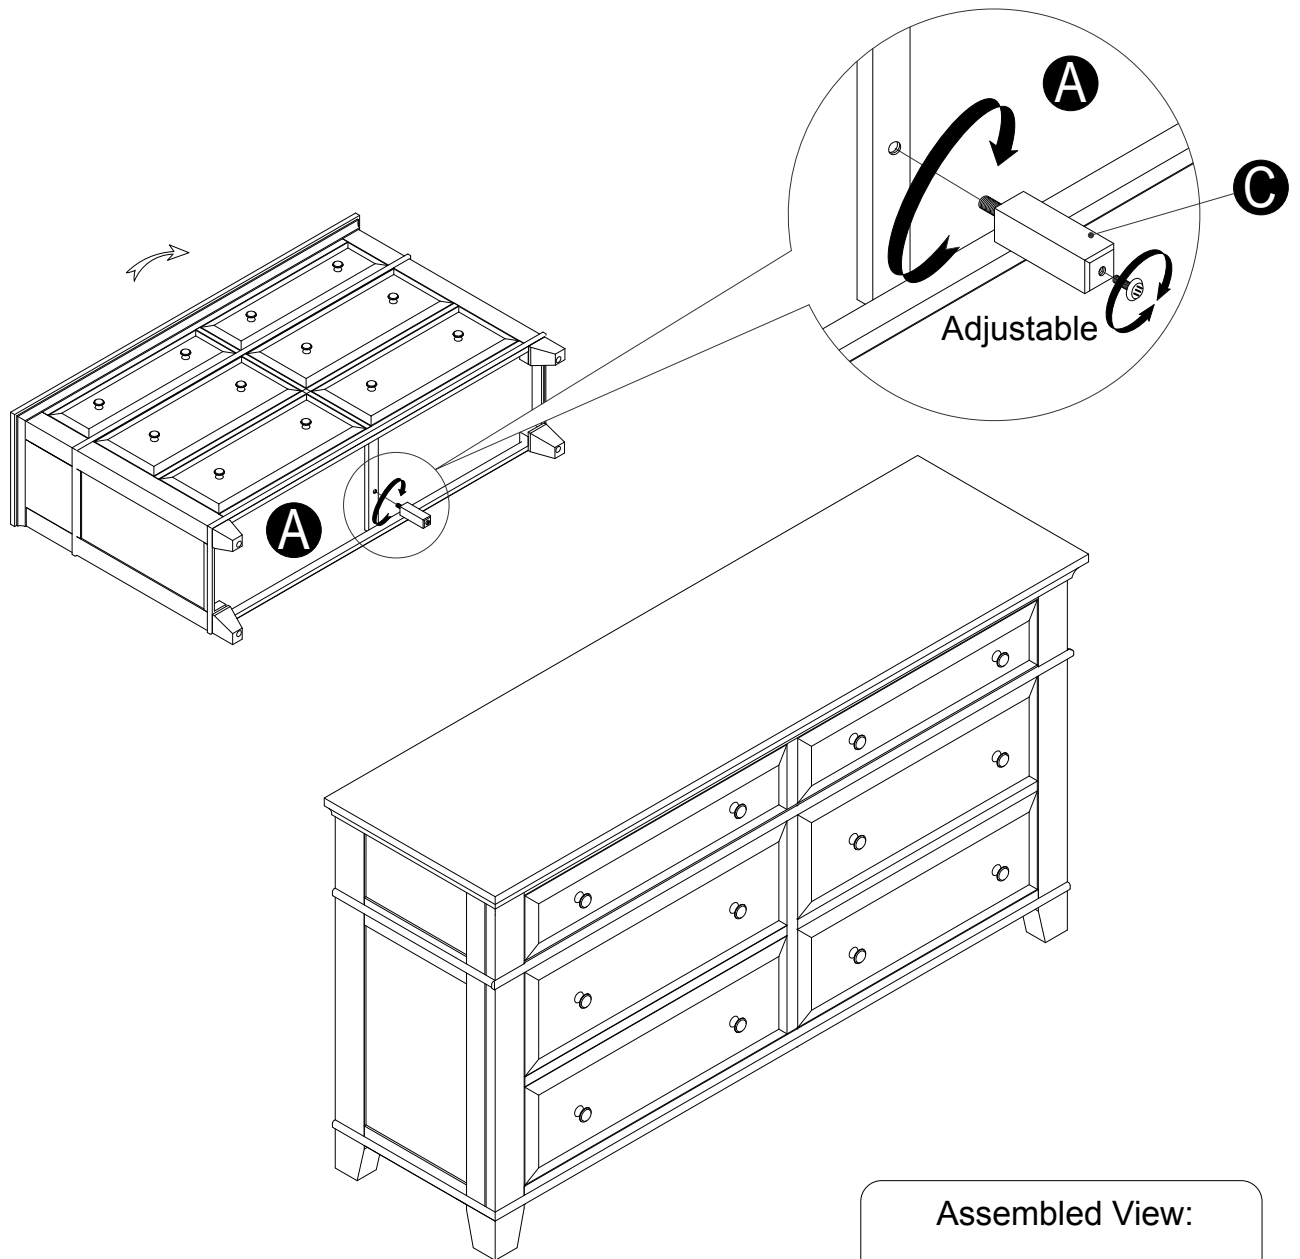






Assembled View:

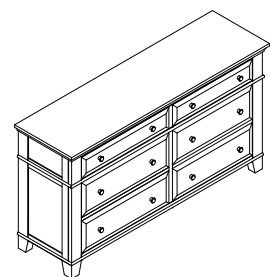

## STEP 3

### Hardware needed

     This tipping restraint must be installed as directed before the Dresser can be used. Place the dresser in the desired location. Locate a wall stud and mark the location of the stud on the back of the dresser. Remove the dresser away from the wall. Attach one of the brackets to the top rail of the dresser back in the marked location using the supplied 5/8" screw. Place the screw through the smaller hole in the Bracket and fully tighten using a Phillips Screwdriver (not provided). Return the dresser to the desired location and mark the wall 2 inches below the bracket on the dresser. Remove the dresser. Attach the remaining bracket to the wall at the marked location using a Phillips Screwdriver (not provided). Warning: To work properly, the screw inserted into the wall must be inserted into a wall stud or the anchor can pull loose from the wall. Return the dresser back to the desired location and attach the two brackets with the supplied restraint strap. Fully tighten the strap.

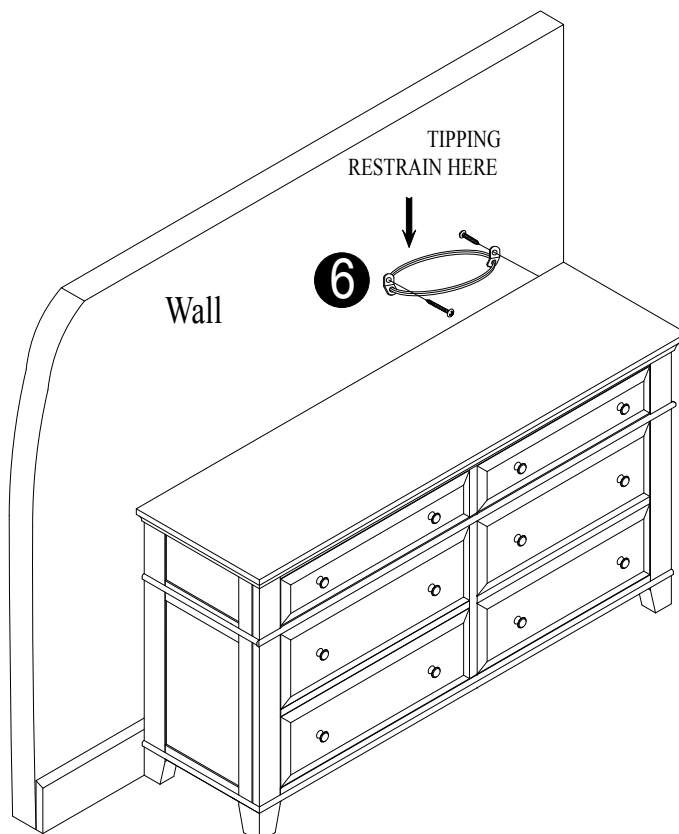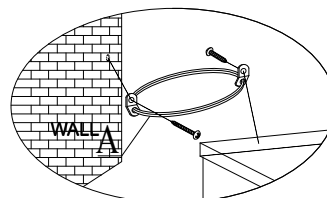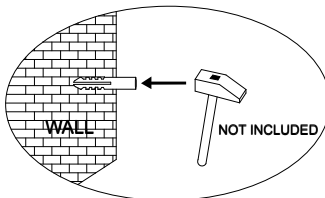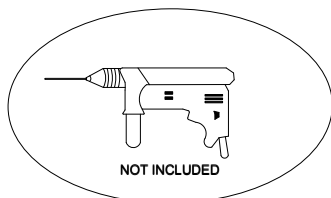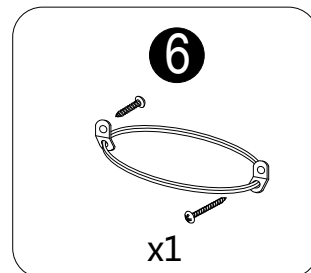

# ASSEMBLY IS COMPLETED

PRINTED IN VIETNAM