



ASSEMBLY INSTRUCTION

ITEM# : 2028 - 7DR

SKU# : 810509150

DRESSER

Need help? We are here for you! www.biglots.com/help/contact-us

GENERAL BEST PRACTICES FOR ASSEMBLY :

- * Please read assembly instructions prior to assembling this product.
- * Determine you have adequate space for assembly.
- * Assembly by two adults is recommended.
- * Assembly on soft surface to prevent damage to product finish.
- * Keep children away during assembly. This item contains small parts which can be swallowed by children.
- * Do not discard any of the packaging until you have checked that you have all the parts and hardware.
- * Retain the assembly instruction for further reference.
- * The manufacturer will not accept responsibility for unauthorised repairs or modifications to this product.
- * This product is for residential use only, not for commercial use.

WARNINGS:

- * Should this product become damaged, and/ or components are broken or missing, **DO NOT USE.**
- * The product will burn if left in contact with flame source.

MAINTENANCE:

 
- * Wipe with a damp cloth. Use Furniture polish or lemon oil on the wood as needed.
- * Avoid prolonged exposure to moisture.
- * Do not scratch or chip the finish.
- * Do not put hot objects which are more than 80 degrees Fahrenheit directly on the surface.
- * Check bolts/screws periodically and tighten if necessary.
- * To prolong the life of product we recommend storage in a dry area when not in use or during austere weather conditions.

PARTS LIST




A

TOP DRESSER
X 1 pc



B

 
BUN FEET
X 4 pcs



C

CENTER LEG
X 1 pc

HARDWARE LIST

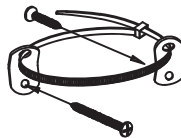


1


Anti-tip Kit

STEP 1

With assistance, place Top Dresser (A) onto its back so the drawers are facing up. Insert the Bun Feet (B) into each corner and turn in a clockwise direction until fully tight. Insert the Center Leg (C) into the center frame of the Top Dresser (A) and turn in a clockwise direction until fully tight.

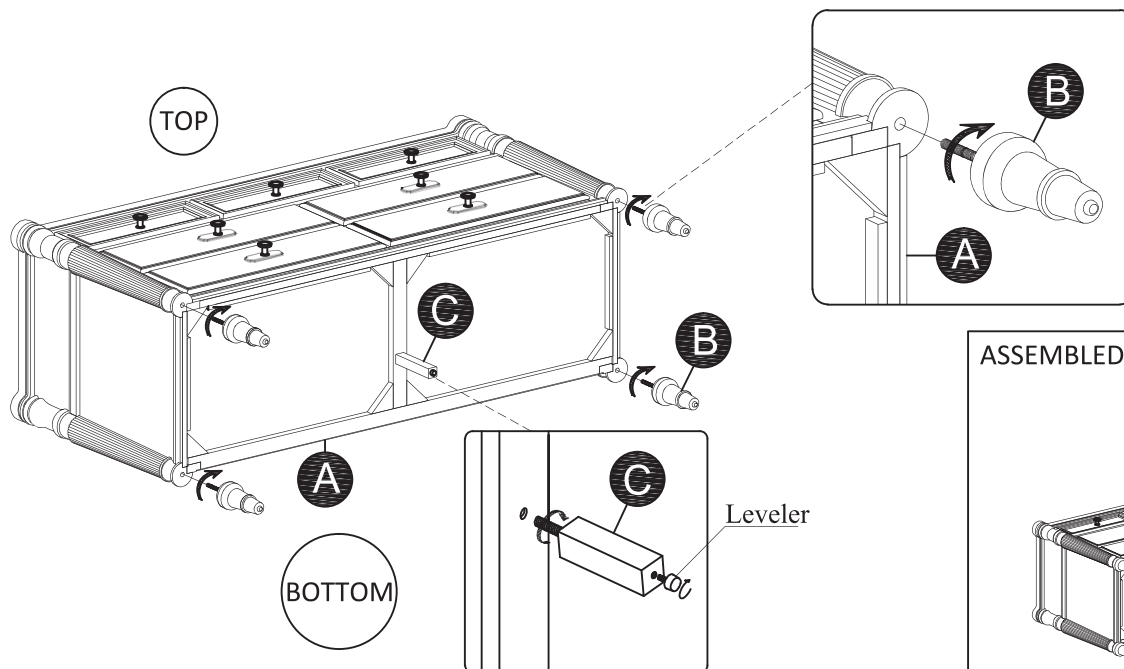


ASSEMBLED VIEW

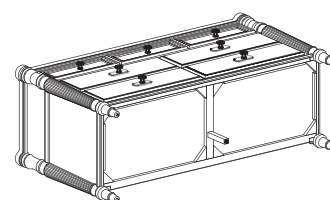

STEP 2

Carefully turn the assembled Dresser upright. Assembly is now complete.

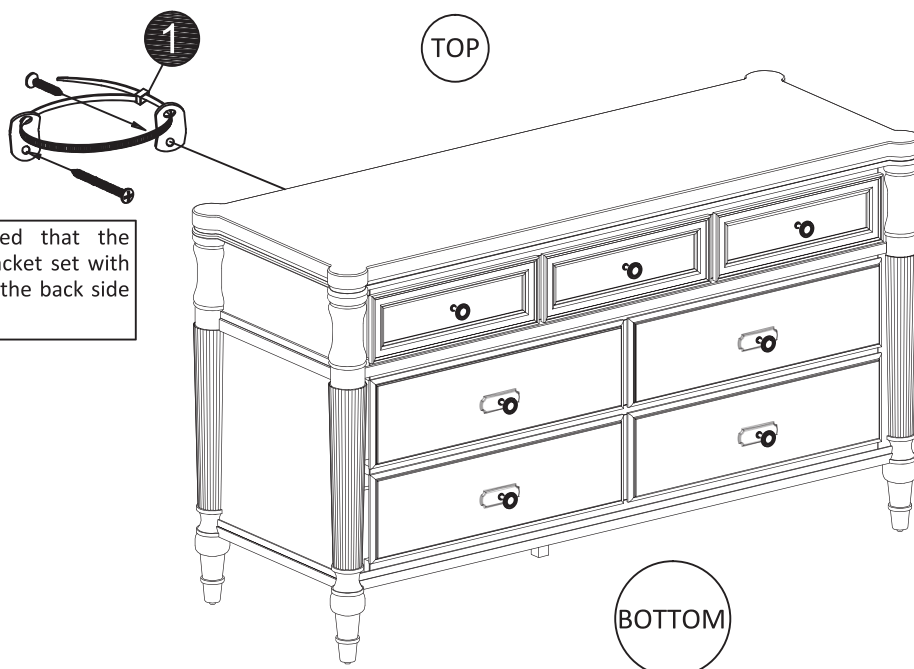

Remark: Please be noted that the anti-tip wall mounted bracket set with instruction is attached at the back side of the back panel.

