

## ASSEMBLY INSTRUCTION

ITEM#: BL-FP-072-001

SKU#: 810519410

# 72 IN. TWO-TONE FIREPLACE

### Need help? We are here for you!

- For missing hardware such as nuts & bolts, handles, or door hinges, please contact BIG LOTS Customer Service at <https://www.biglots.com/help/contact-us>
- For issues with electric fireplace inserts or remotes please contact BIG LOTS Customer Service at <https://www.biglots.com/help/contact-us>
- For issues with any wood parts, drawer glides, etc. please email [Service@GrandArtFurniture.com](mailto:Service@GrandArtFurniture.com)
- When emailing Grand Art you MUST include the following:  
\*your first and last name, shipping address, phone number, email address, item sku number shown above), and part(s) letter you are requesting.

---

# GENERAL BEST PRACTICES FOR ASSEMBLY:

---

Determine you have adequate space for assembly.

Assembly by two adults is recommended.

Assemble on soft surfaces to prevent damage to product finish.

Keep children away during assembly. This item contains small parts which can be swallowed by children.

Do not discard any of packaging until you have checked that you have all parts and hardware.

Retain the assembly instructions for future reference.

The manufacturer will not accept responsibility for unauthorized repairs or modifications to this product.

This product is for residential use only, not for commercial use.

A Phillips head screw driver is necessary for assembly but is not included.

---

## WARNINGS:

---

To prevent serious injury or death, this product is equipped with a wall anchoring system. Before this product can be used, the wall anchoring system must be installed as directed in the assembly instructions.

Should this product become damaged, and/or components are broken or missing,  
DO NOT USE.

This product will burn if left in contact with flame source.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

WARNING - Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

WARNING - Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

---

## MAINTENANCE:

---

Wipe with a damp cloth. Use Furniture polish or lemon oil on the wood as needed.

Avoid prolonged exposure to moisture.

Do not scratch or chip the finish.

Do not put hot objects which are more than 80 degrees Fahrenheit directly on the surface.


Check bolts/screws periodically and tighten if necessary.

To prolong the life of product we recommend storage in a dry area when not in use or during austere weather conditions.

 


 

 


 
 

 


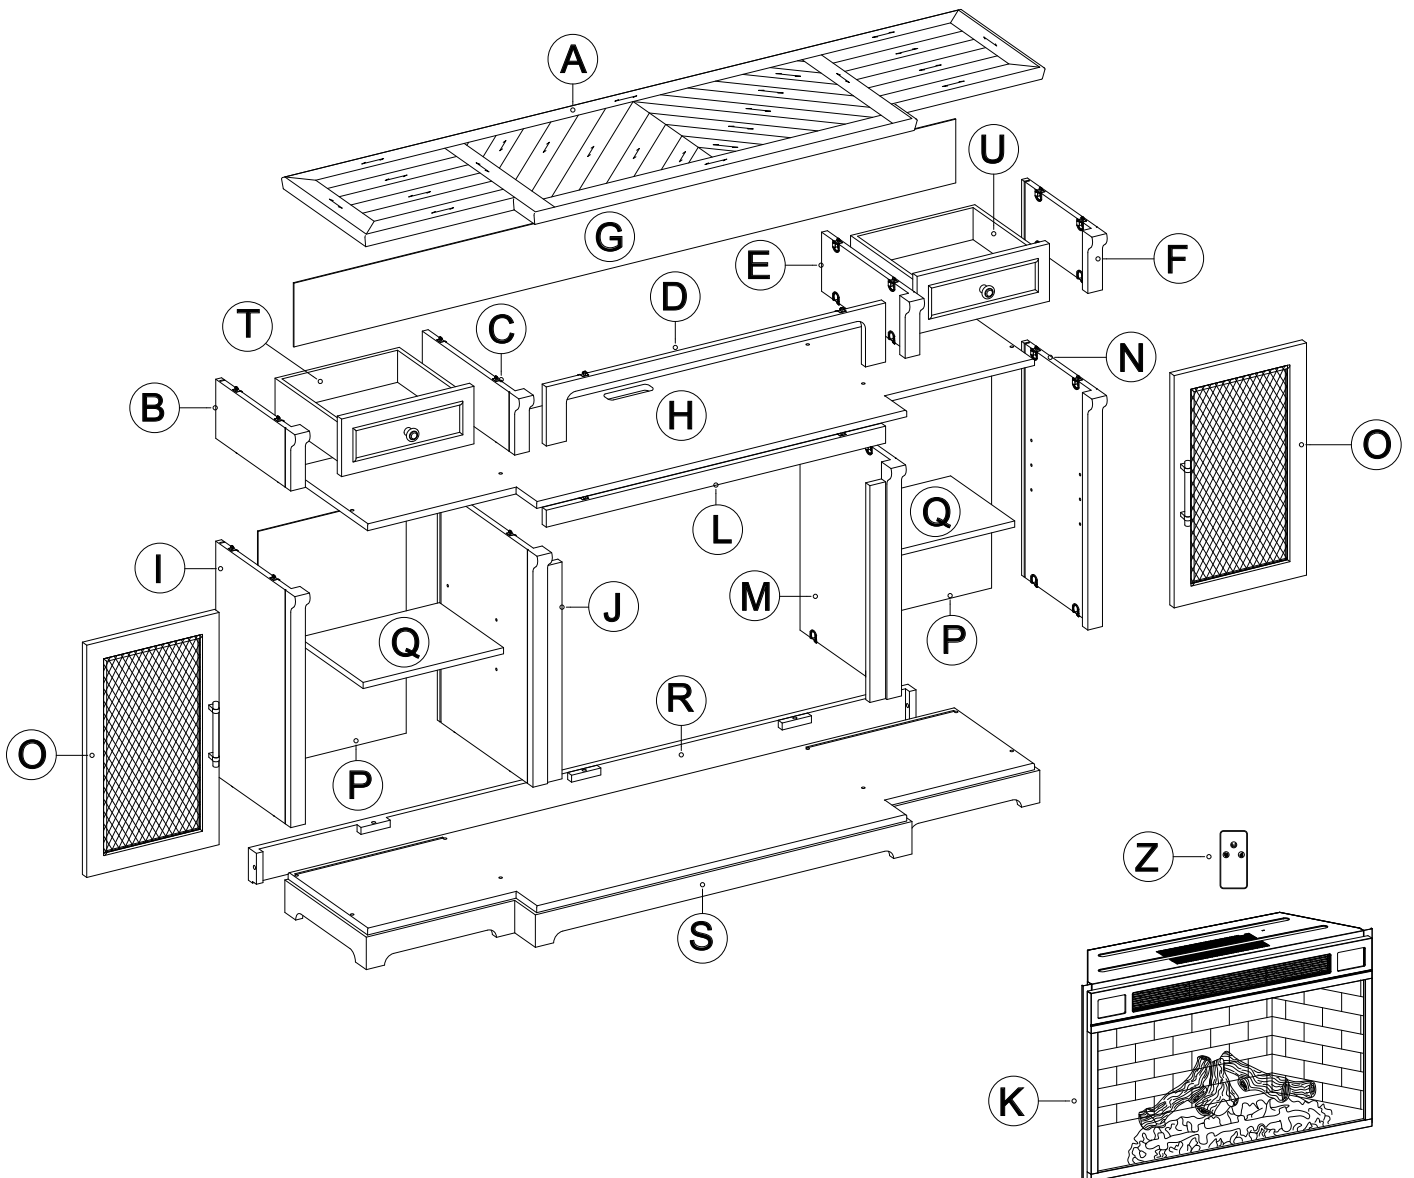





---

# PARTS LIST

 A	Top Panel	1	L	Center Crossbar	1
B	Top Left side Panel	1	M	Bottom Right Middle Panel	1
C	Top Left Middle Panel	1	N	Bottom Right Side Panel	1
D	Top Crossbar	1	O	Door	2
E	Top Right Middle Panel	1	P	Side Back Panel	2
F	Top Right side Panel	1	Q	Adjustable Shelves	2
G	Center Back Panel	1	R	Bottom Crossbar	1
H	Center Middle Panel	1	S	Bottom Panel	1
I	Bottom Left Side Panel	1	T	Left Drawer	1
J	Bottom Left Middle Panel	1	U	Right Drawer	1
K	Fireplace	1	Z	Remote Control	1





# HARDWARE LIST

   ①	Bolt Ø1/4"*32mmL		4 PCS
②	Spring Washer Ø1/4"		4 PCS
③	Flat Washer Ø1/4"		8 PCS
④	Allen Key 4mmL		1 PC
⑤	Wood Dowel Ø8*30mmL		38 PCS
⑥	Plastic Block		8 PCS
⑦	Screw Ø7*19mmL		8 PCS
⑧	Screw Ø7*15mmL		6 PCS
⑨	Hinge		4 PCS
⑩	Flat Head Screw Ø7*16mmL		24 PCS
⑪	Handle Bolt Ø5/32"*25mmL		4 PCS
⑫	Door Handle		2 PCS
⑬	Knob Bolt Ø5/32"*35mmL		2 PCS
⑭	Knob		2 PCS
⑮	Shelf Pin		8 PCS
⑯	Anti-Tipping Strip 25*230mmL		2 PCS
⑰	Wall Anchor Ø8.5*30mmL		2 PCS
⑱	Screw Ø8*28mmL		4 PCS
⑲	Door Stopper		2 PCS
⑳	Screw Ø7*12mmL		4 PCS

# STEP 1

With assistance, place the Bottom Panel (S) upside down on a smooth surface. Attach the Bottom Crossbar (R) to Bottom Panel (S) with Flat Washer (3), Spring Washer (2) and Bolts (1) using Allen Key (4). Fully tighten all bolts. Return Bottom Panel (S) to upright position.

## Hardware needed

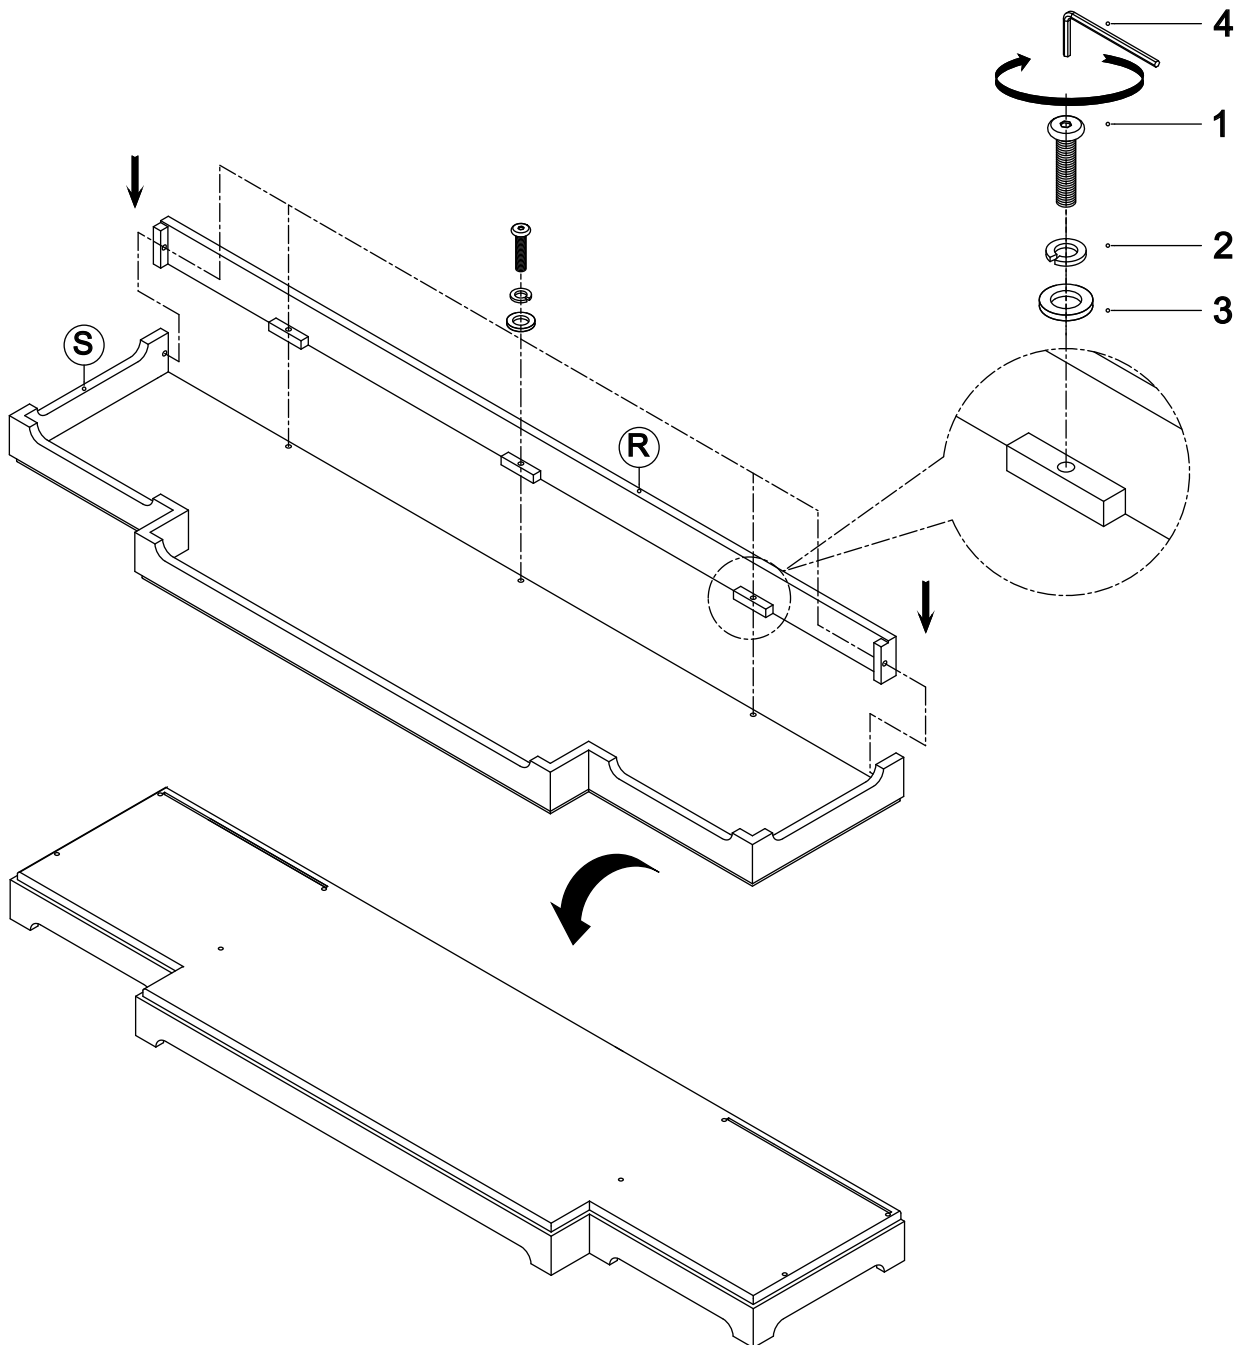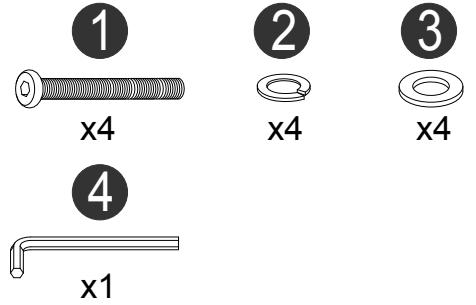

## STEP 2

Insert Wood Dowel (5) into Bottom Panel (S). Align the holes in Bottom Right Side Panel (N) and slide to place. Make sure all the latches are in open position so the pins are aligned with their corresponding holes before inserting them. Once inserted, close all the latches until they are flush to fully secure the panels in place.


Repeat process to attach the Bottom Left Side Panel (I), Bottom Right Middle Panel (M) and Bottom Left Middle Panel (J) to Bottom Panel (S).

Hardware needed

5



x8

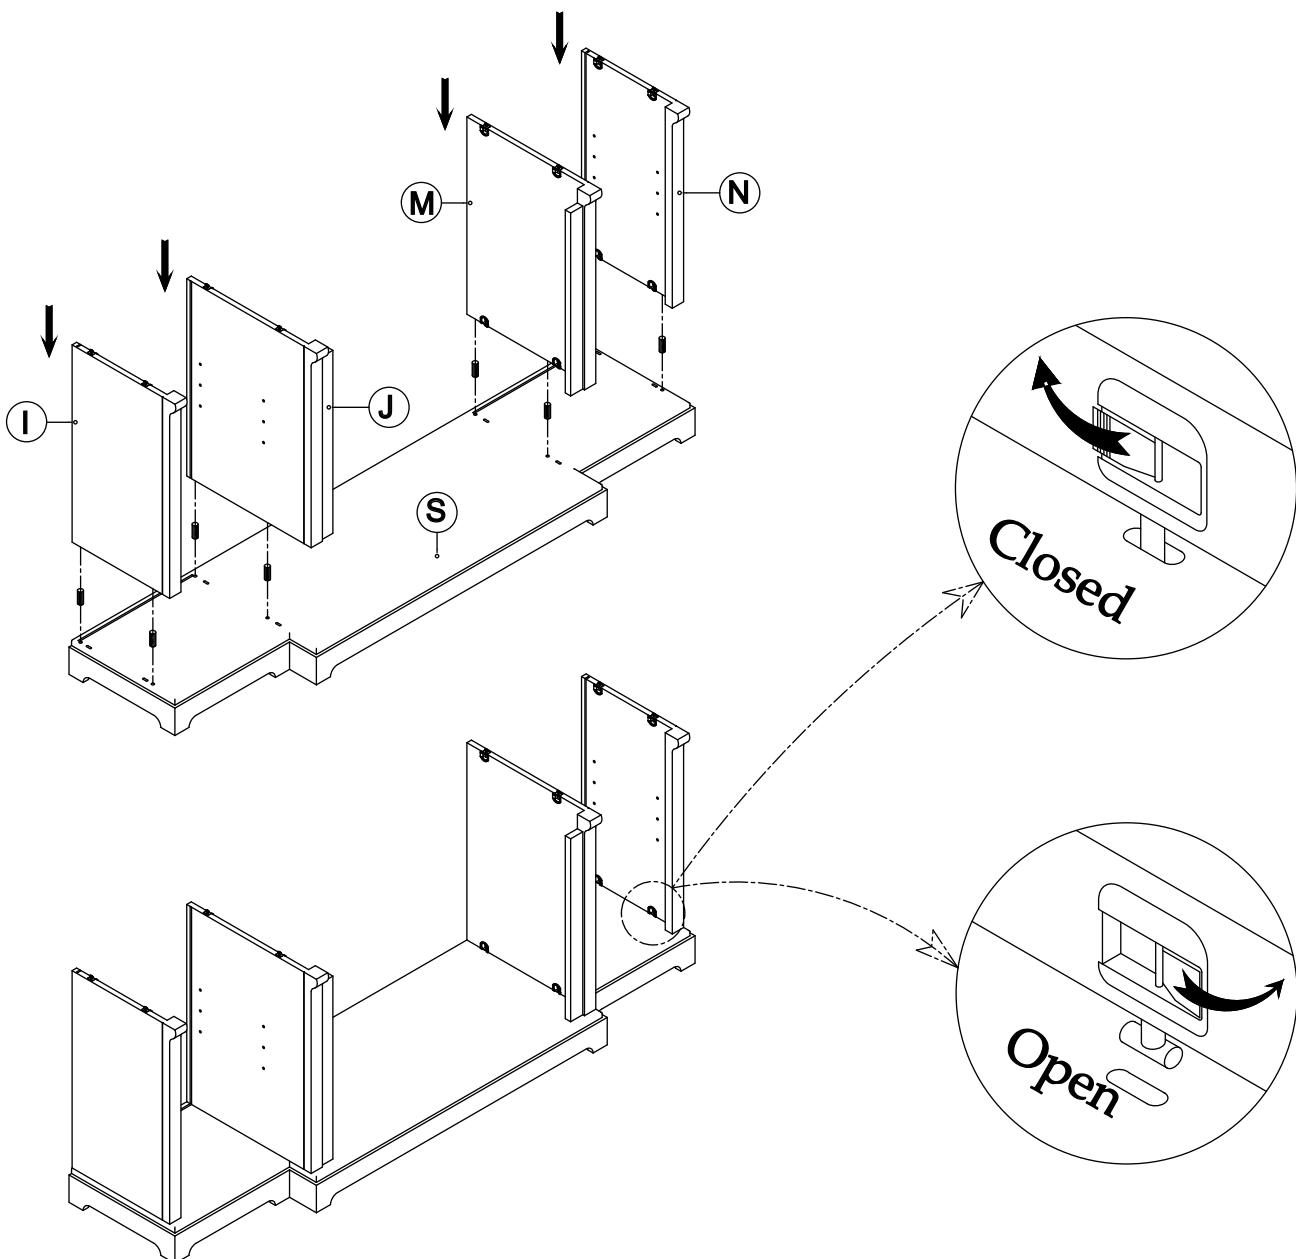

## STEP 3

### Hardware needed


5



x2

Insert Wood Dowel (5) into holes of Bottom Middle Panels as shown. Align the holes in Center Crossbar (L) with the inserted dowels and lower into place.





Insert one Side Back Panel (P) down along the groove of Bottom Left Side Panel (I) and Bottom Left Middle Panel (J). Insert the remaining Side Back Panel (P) down along the groove of Bottom Right Side Panel (N) and Bottom Right Middle Panel (M).

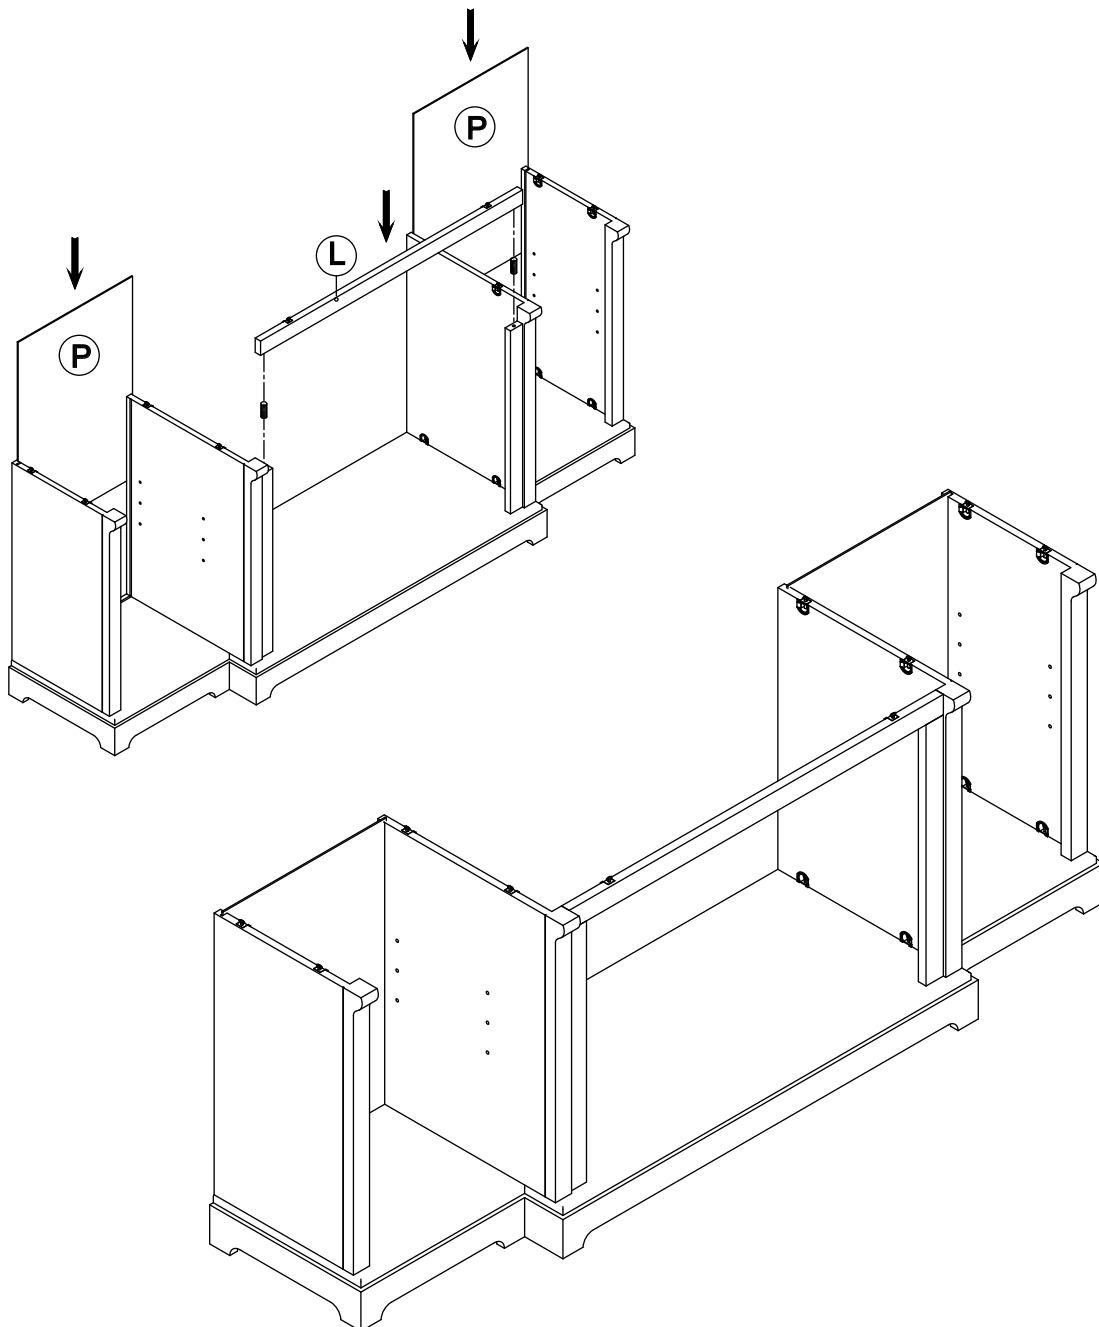

## STEP 4

### Hardware needed

Place the Door Stop (19) on the bottom of Center Middle Panel (H) as shown. Secure with Screw (20) using Phillips Screwdriver. Fully tighten screws. Repeat steps for the remaining Door Stopper (19). Return panel upright position with assistance. Insert Wood Dowel (5) into hole of Bottom Right Side Panel (N), Bottom Right Middle Panel (M), Bottom Left Middle panel (J) and Bottom Left Side Panel (I). With assistance, set the Center Middle Panel (H) over the Bottom Right Side Panel (N), Bottom Right Middle Panel (M), Bottom Left Middle panel (J) and Bottom Left Side Panel (I) and lower into place. Make sure all the latches are in the open position so the pins are aligned with their corresponding holes before inserting them. Once inserted, close all the latches until they are flush to fully secure the panels in place.

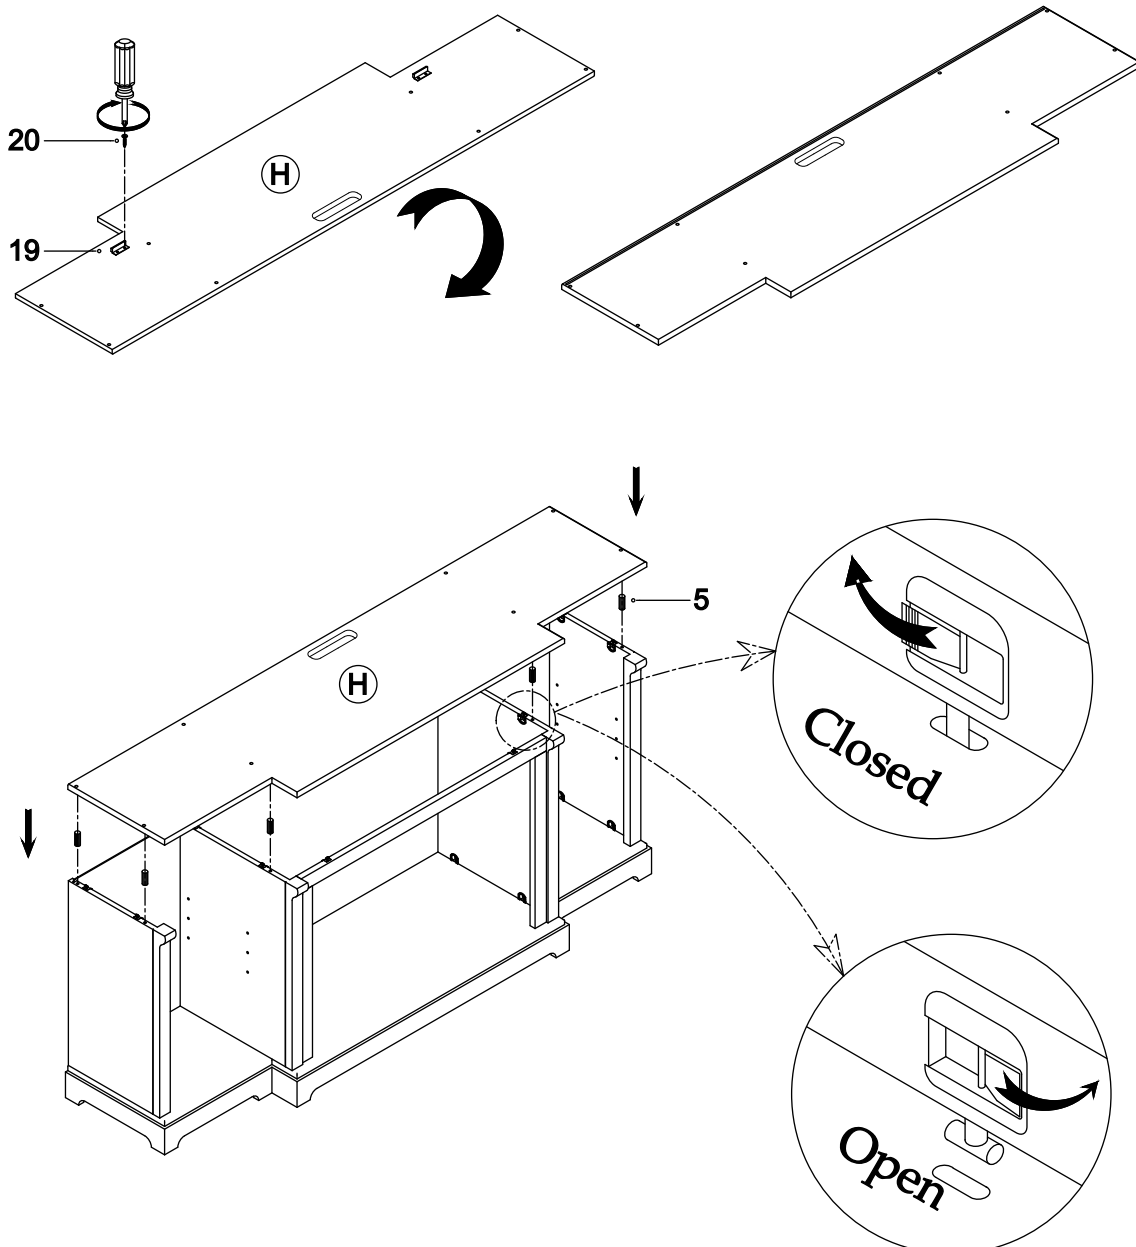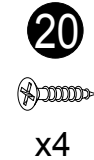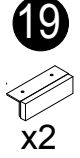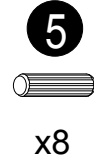



## STEP 5

### Hardware needed


5



x20

Insert Wood Dowel (5) into hole of Top Cross Bar (D). Align the hole of Top Left Middle panel (C) and Top Right Middle Panel (E) with the inserted dowels and slide into place as shown.

Insert Wood Dowel (5) into hole of Center Middle Panel (H), align the holes in the Top Left Side Panel (B), Top Right Side Panel (F) and the assembled parts with the inserted dowels as shown and slide into place. Make sure all the latches are in open position so the pins are aligned with their corresponding holes before inserting them. Once inserted, close all the latches until they are flush to fully secure the panels in place.

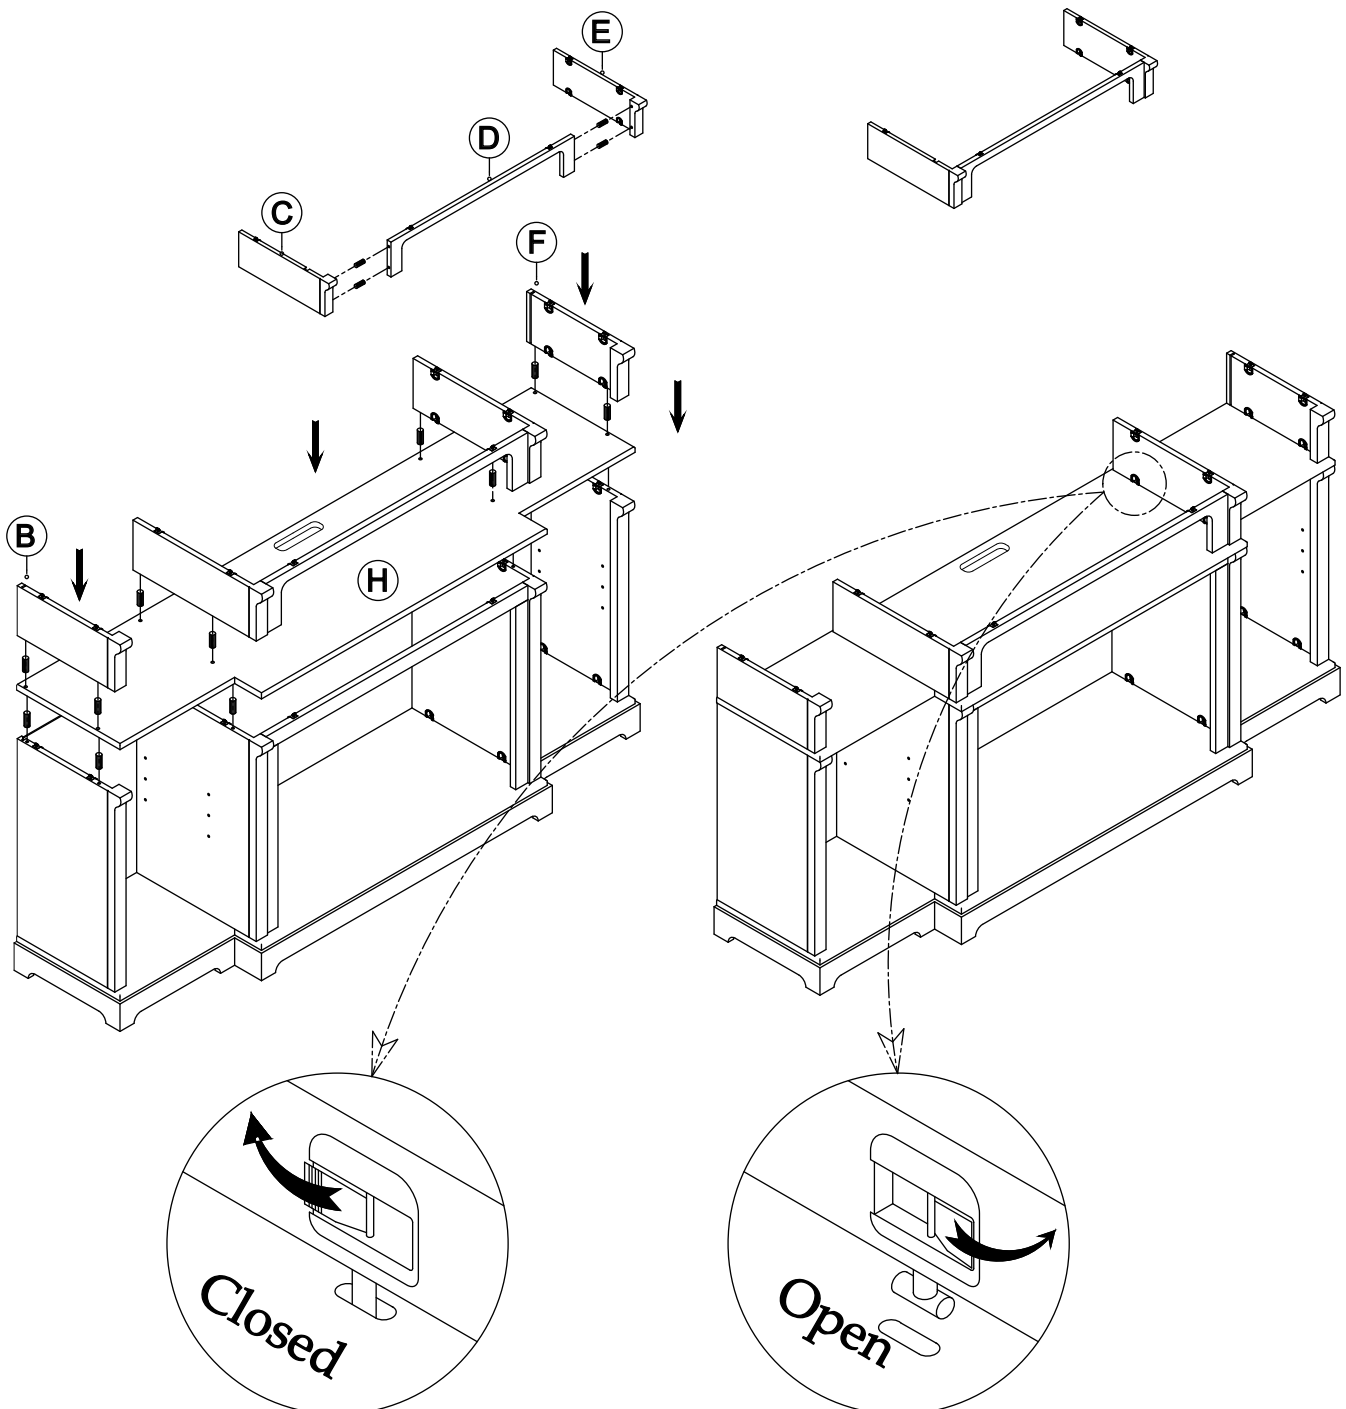

## STEP 6

### Hardware needed


**5**



x8

Insert Center Back Panel (G) down along the groove of Top Left Side Panel (B), Top Left Middle Panel (C), Top Right Middle Panel (E) and Top Right Side Panel (F).



Insert Wood Dowel (5) into holes of Top Left Side Panel (B), Top Left Middle Panel (C), Top Right Middle Panel (E) and Top Right Side Panel (F). With assistance, align the Top Panel (A) into place as shown. Make sure all the latches are in open position so the pins are aligned with their corresponding holes before inserting them. Once inserted, close all the latches until they are flush to fully secure the panels in place.

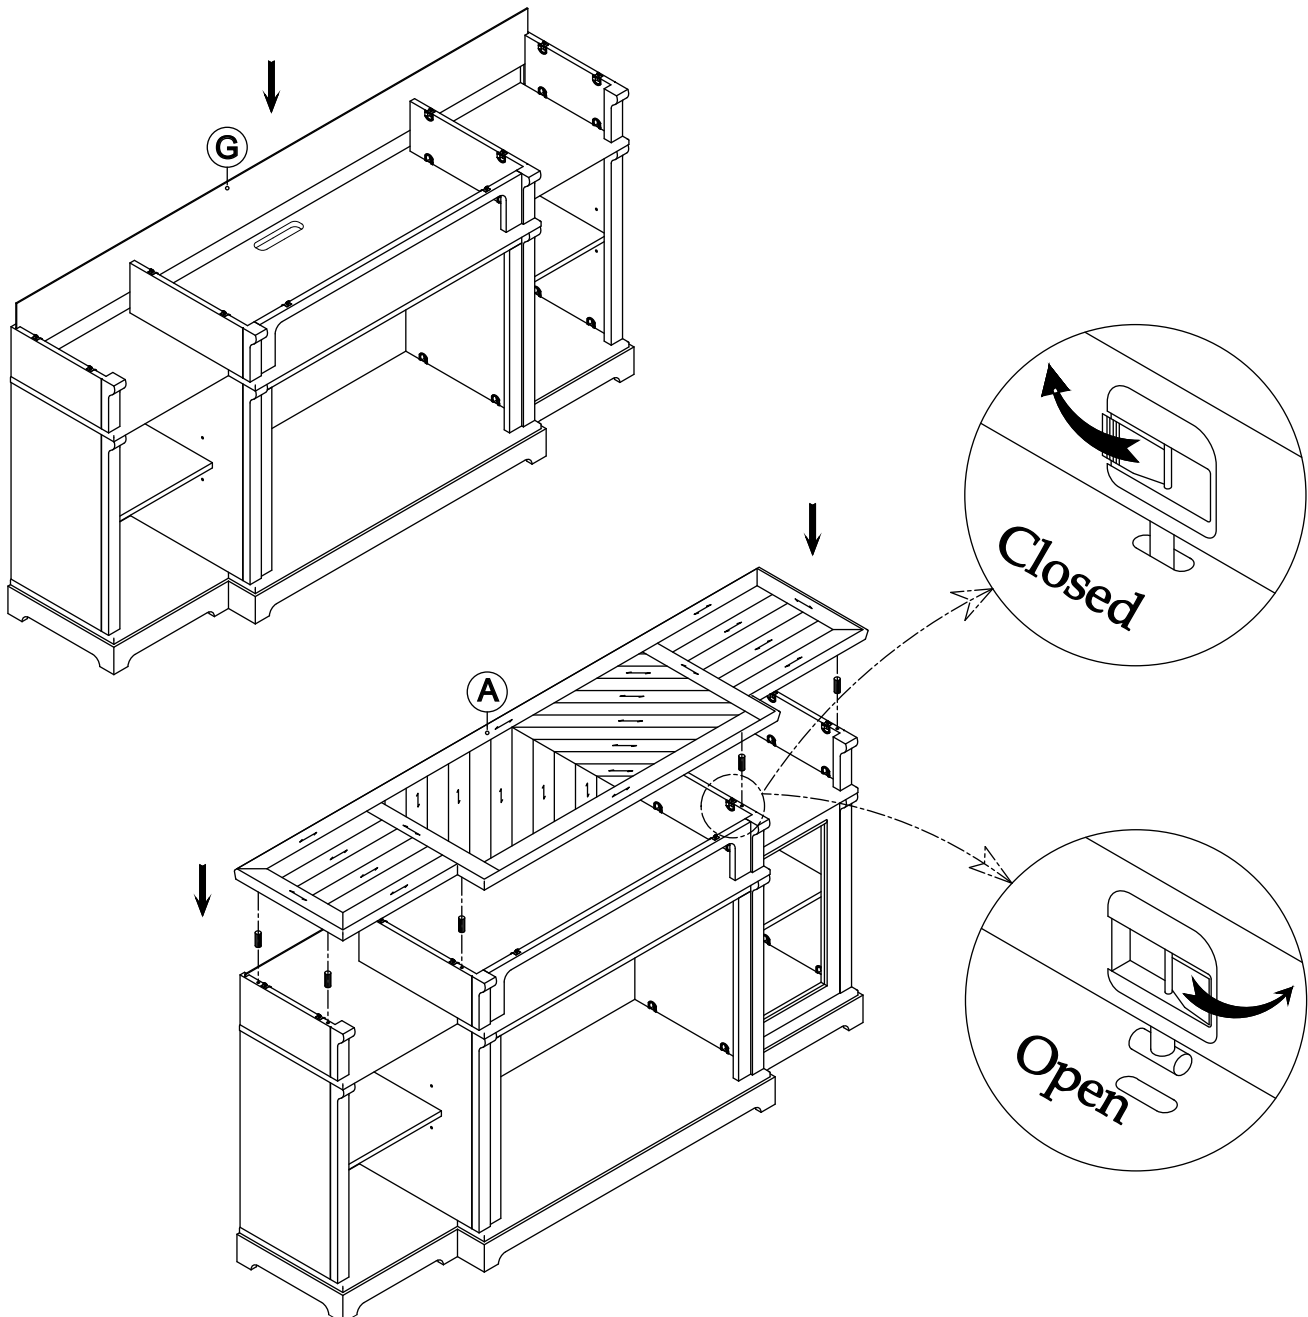

## STEP 7

Attach Hinge (9) to Door (O) with Flat Head Screw (10) using Phillips Screwsdriver. Fully tighten screws. With assistance, center the Door (O) along the edge of Bottom Right Side Panel (N). Attach Hinge (9) to Bottom Right Side Panel (N) with Screw (10). Fully tighten screws. Repeat the process to attach the remaining Door (O) to the Bottom Left Side Panel (J). Attach Door Handle (12) to Door (O) with Door Handle Bolt (11). Fully tighten bolts. Repeat step to attach remaining handle to remaining door.

### Hardware needed

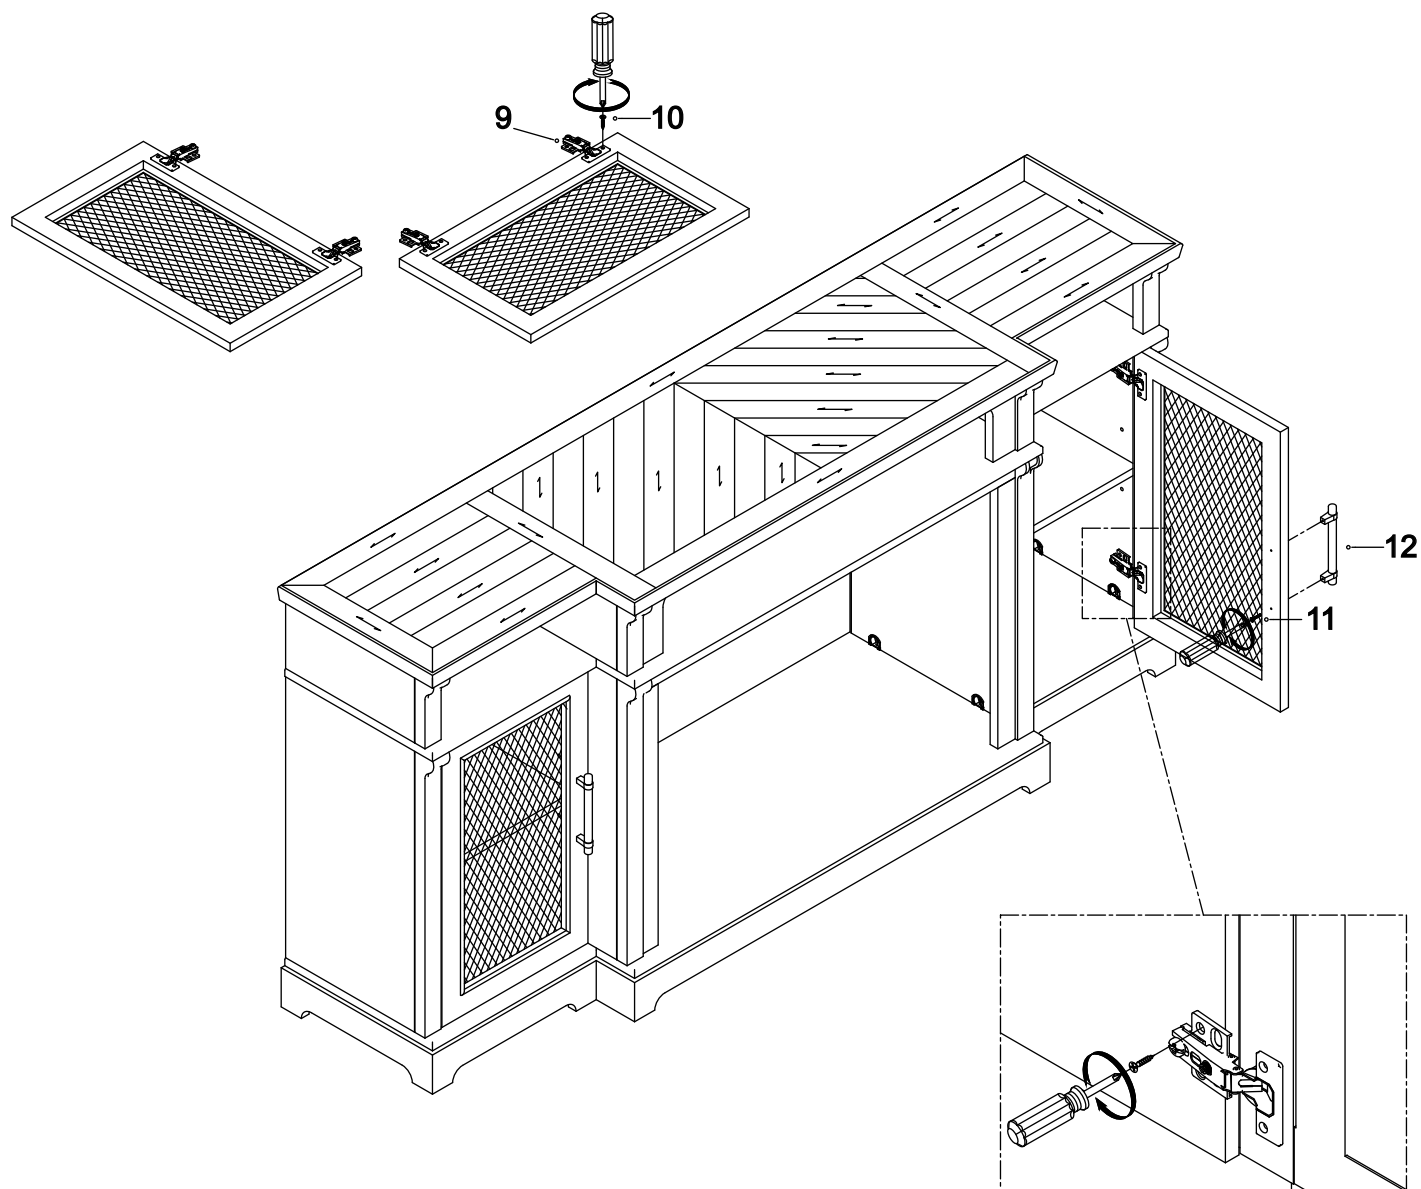
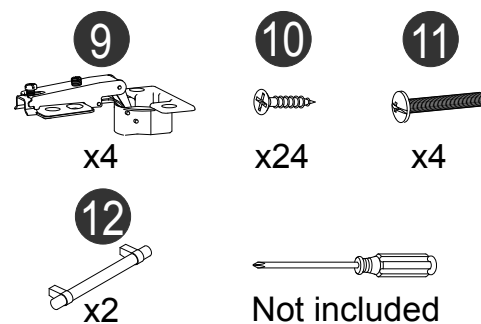


## STEP 8

Insert Shelf Pin (15) in to the pre-drilled holes as shown in diagram.

Place Adjustable Shelf (Q) onto the shelf pins.

You can adjust the position of shelf as needed.

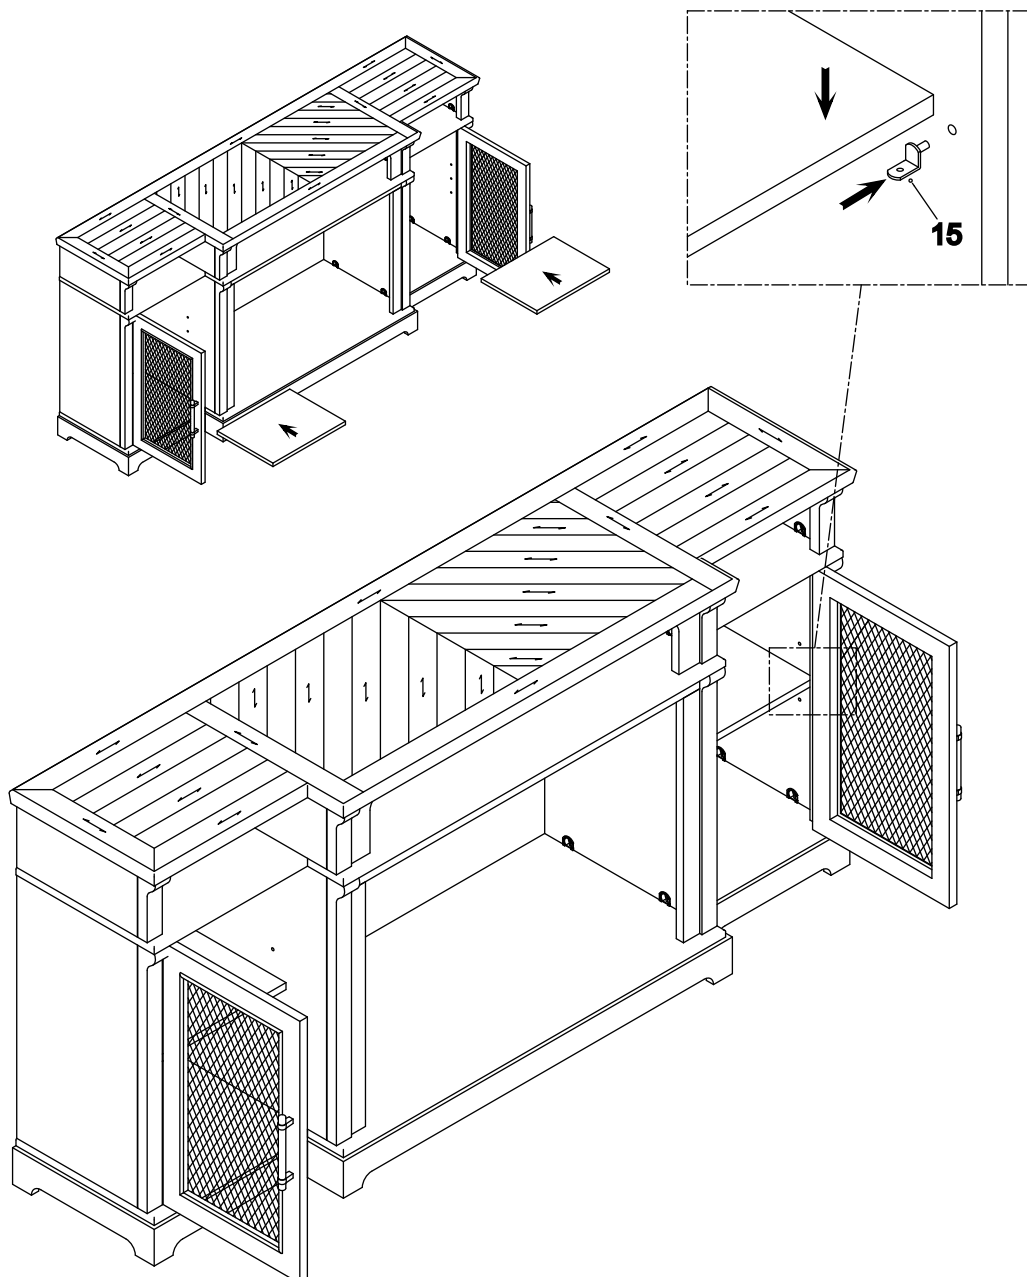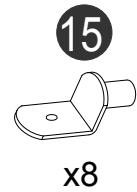

## STEP 9

Attach Knob (14) to Right Drawer (U) with Knob Bolt (13) using Phillips Screwdriver. Fully tighten bolts.


Repeat the process to attach Knob (14) to Left Drawer (T).

Attention: before assembly, please make sure to adjust the metal piece/ball bearing to the front of the drawer glide for both left and right side slider.

Align the track on the drawer with the track on the Mantel. Gently push drawer into position. Be sure to apply equal pressure to both sides while inserting the drawer. If drawer sticks or jams, then remove the drawer and reinsert it according to direction.

### Hardware needed

13

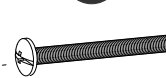

x2

 
 
 
 
 
 
14



x2




Not included

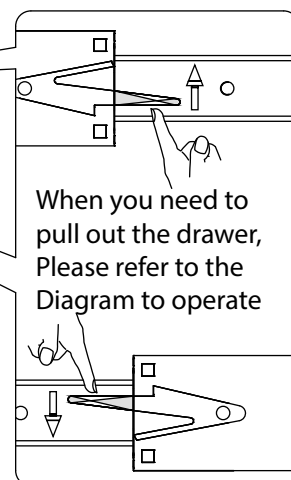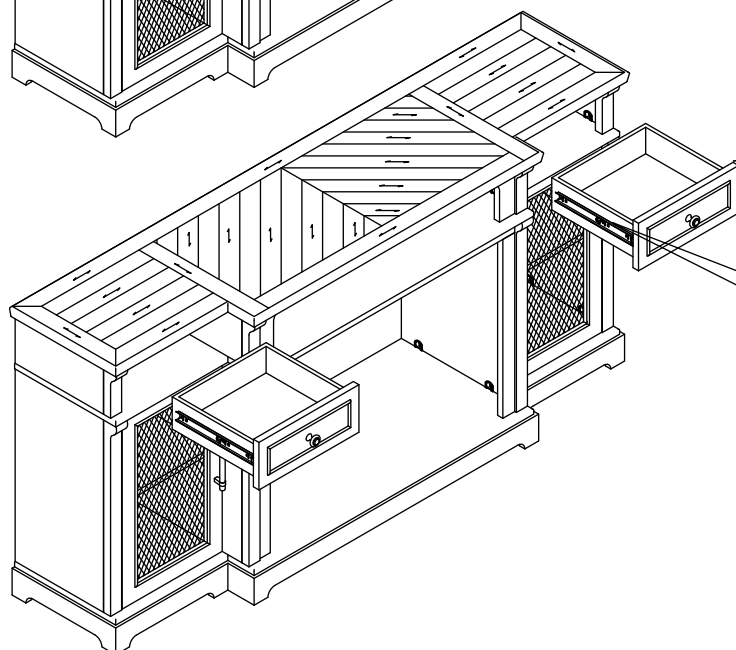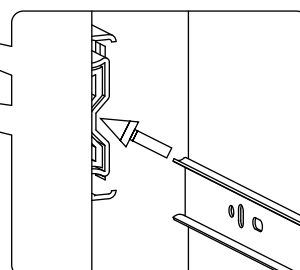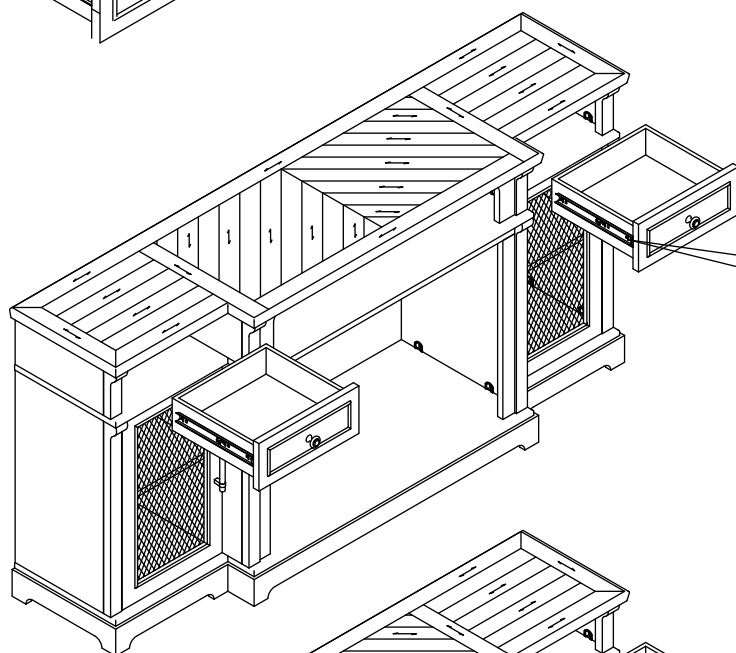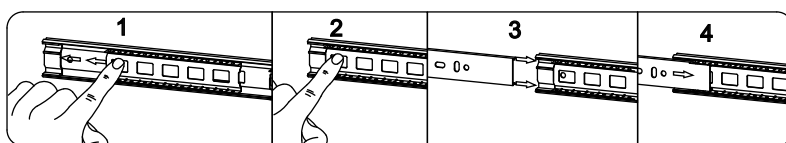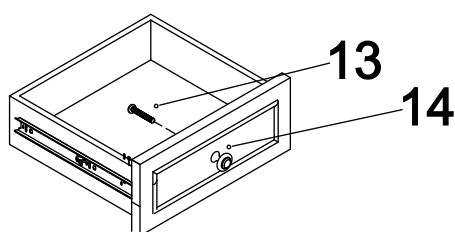


## STEP 10
 
### Hardware needed

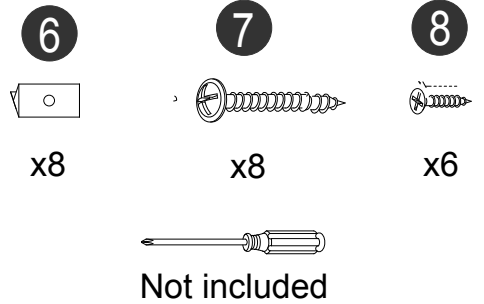

Place the Plastic Block (6) into the corner of Side back panel as shown, insert Screw (7) into the pre-drilled holes and secure with Phillips Screwdriver. Fully tighten screws. Repeat the step for the remaining Plastic Block (6). Insure all Plastic Blocks are used to secure both side back panels in place.

Insert the fireplace (K) into the opening in the back of assembled Mantel. With Assistance, center Fireplace (K) in the opening and secure to the Mantel with Screw (8) using Phillips Screwdriver. Fully tighten screws.

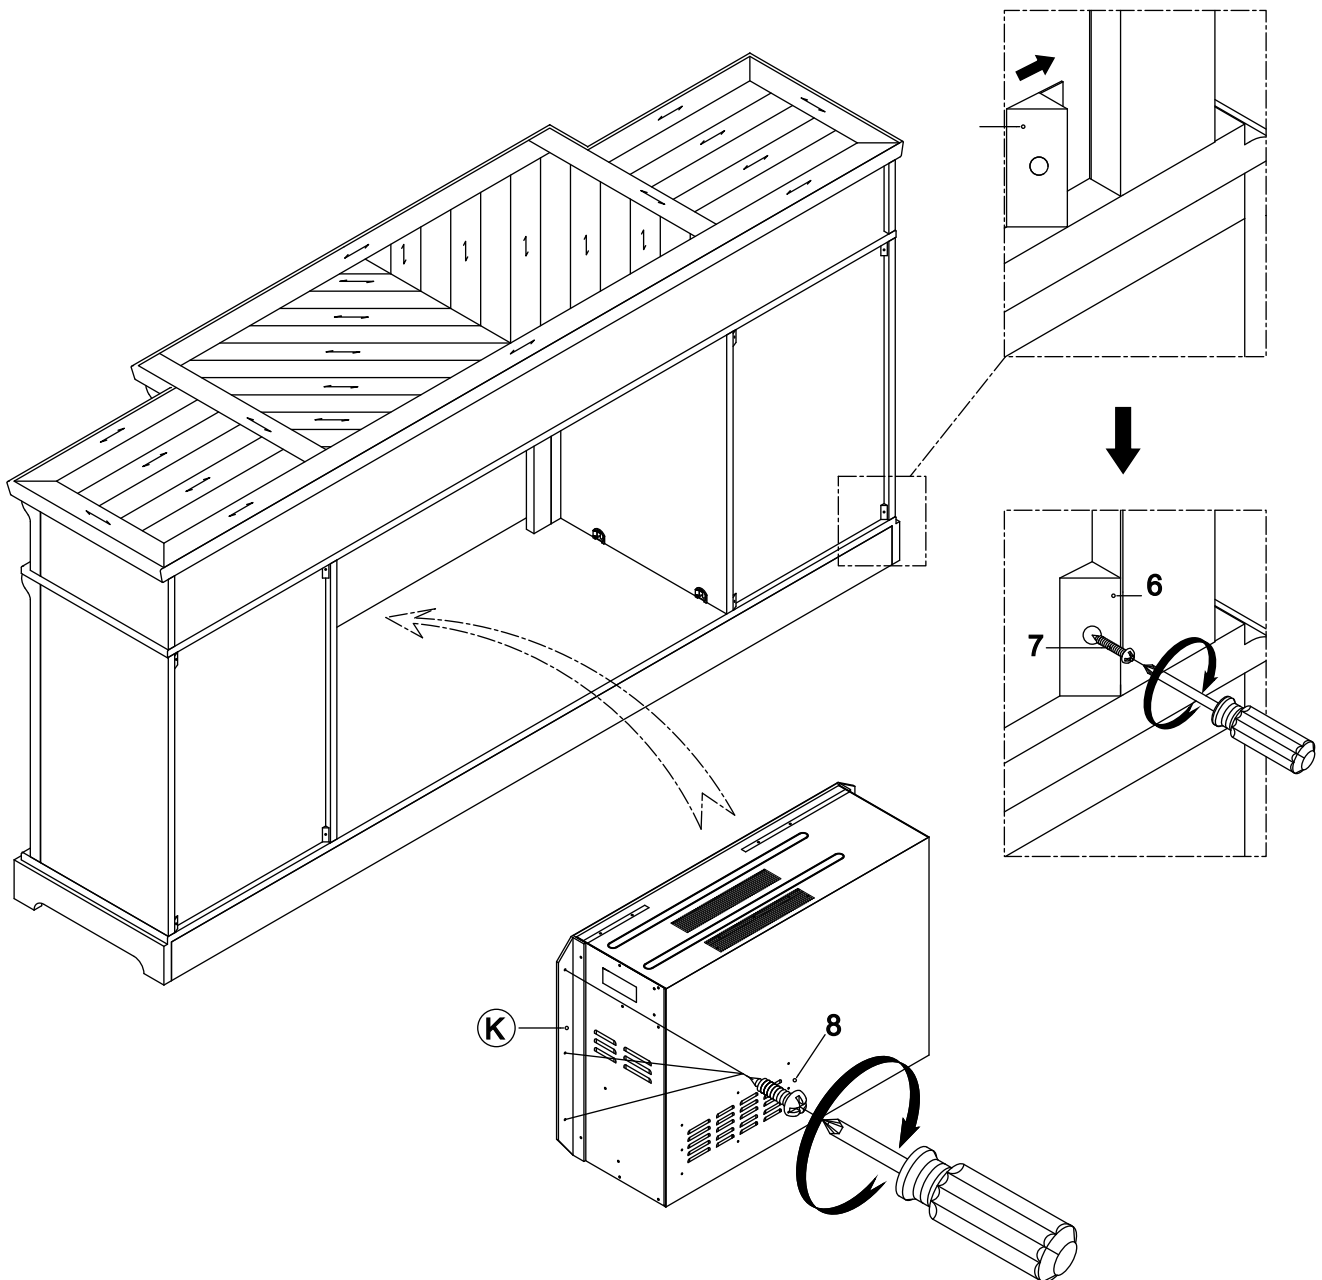

## STEP 11

Attach the Anti-tipping strips (16) to the back top of the mantel with Screw (18) and Flat Washer (3). With assistance, place the Mantel in the desired location and mark the wall just below the spot where the Anti-tipping Strips are attached to the mantel.



## Remove the Mantel.

Drill holes in the marked locations on the wall and insert the Wall Anchor (17). Place the Mantel back into position leaving room to attach the Anti-tipping Strips (16) to the Wall Anchor (17) with Screw (18) and Flat Washer (3). Fully tighten Screws.

Move the Mantel tight against the wall.

NOTE: Please insure Fireplace insert is plugged in and working correctly before securing the Anti-tipping Strips to the Wall Anchors.

## Hardware needed

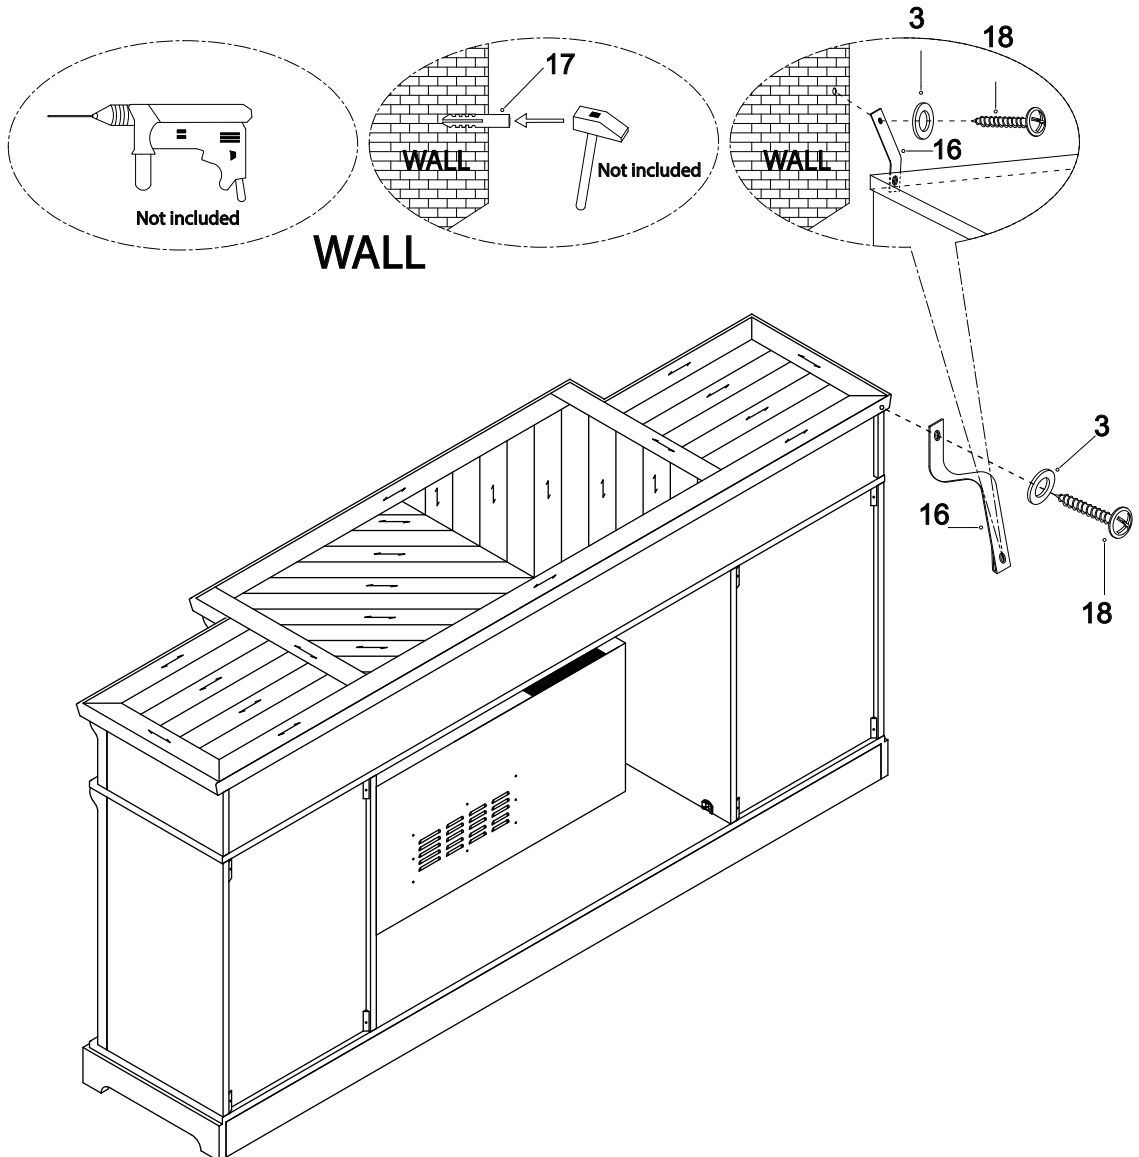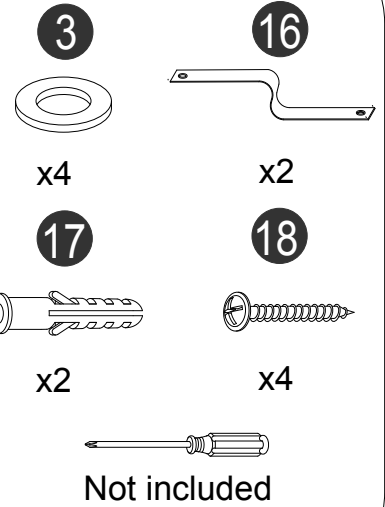


# ! WARNING

The maximum diagonal Plasma/LCD television screen size is 65inch (165.10cm). For use with televisions weighing 135 lbs. (61.23 kg) or less. Using larger or heavier televisions may cause instability or tip-over which lead to serious injury or even death.

**WARNING** - Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.


**WARNING** - Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

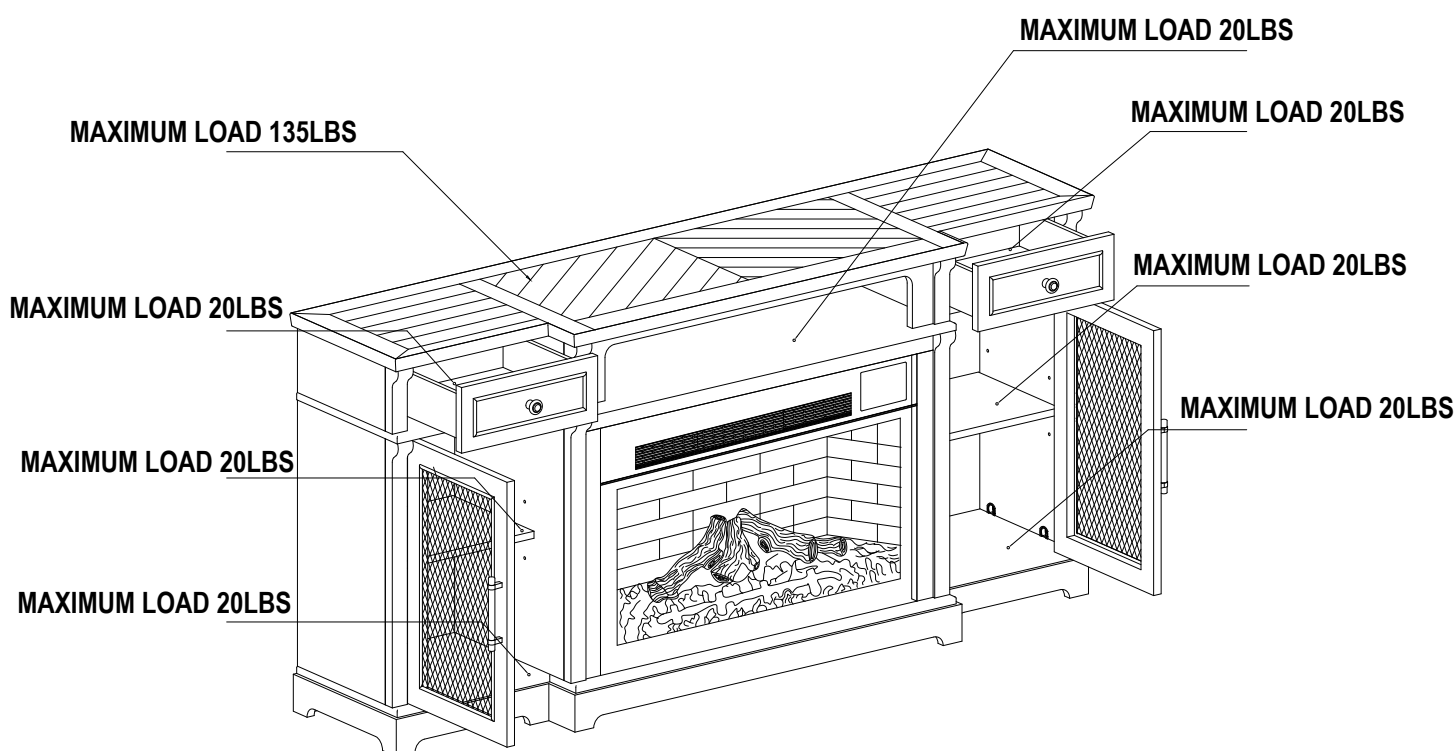

## GRAND ART FURNITURE CO., LTD

ADDRESS: D17 STREET, MY PHUOC I INDUSTRIAL PARK,  
BEN CAT DISTRICT, BINH DUONG PROVINCE, VIETNAM



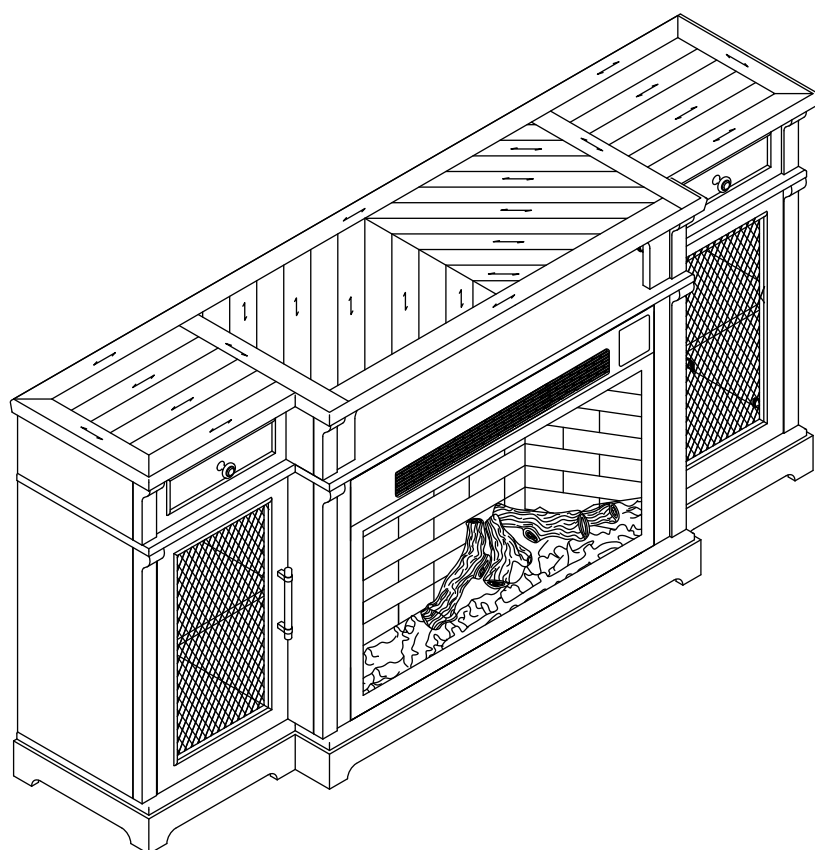

**ASSEMBLY IS COMPLETED**

**PRINTED IN VIETNAM**