



ASSEMBLY INSTRUCTIONS

ITEM#: A101017510

SKU#: 810580328

CRESTFIELD 11X13FT SOFT **TOP GAZEBO**

Need help? We are here for you! 1(866)578-6569 24/7 • Toll Free

Production number: 2023100875

GENERAL BEST PRACTICES FOR ASSEMBLY:

- Please read and understand this entire manual before attempting to assemble or install the product.
- Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.
- The assembled gazebo should be located at least 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry lines or electrical wires.
- Some parts may contain sharp edges. Wear protective gloves if necessary, during assembly.
- This unit is heavy. For safety, do not assemble this item alone. Four people are recommended for safe assembly.
- Check all nuts and bolts periodically for tightness and, when required, tighten them again.
- Pay attention to the parts orientation

WARNINGS:

- Install the gazebo on level ground. Stakes are provided to secure the gazebo to the ground.
- Do not assemble the gazebo on sandy, muddy or loose soil, as stakes do not have enough anchorage in these types of soil.
- If you wish to secure the gazebo to a wood deck or concrete surface, use anchors suited to these surfaces.
- Snow must be cleared off regularly during snowy days. Remove the snow at the roof top when it is thicker than 2 inches. In order to avoid damage, use a plastic snow rake to remove excessive snow and ice buildup from roof and keep away from falling debris.
- Any assembly or maintenance of the product must be carried out by adults only.
- Please check your state and local regulations prior to purchasing. Some jurisdictions may require permits for installation and use. Some special procedures may be valid in your area.
- If any scratch paint, please touch up to prevent rusting
- For outdoor use only.

WARRANTY:

WHAT IS COVERED?

The limited warranty is extended to the original purchaser and applies to material and manufacturer's defect provided the item is maintained with care and used only for personal, residential purposes.

Warranty: 12 Months

MAINTENANCE:


- Steel components for this gazebo are treated with rust inhibiting paint that protects it from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur if these protective coatings are scratched. This is not a defect and thus not covered by the warranty.
- To minimize this condition, it is recommended to use care when assembling and handling the product to prevent scratching the paint. Should any scratching or damage occur, it is recommended to cover the scratch immediately with rust inhibiting paint (not included).
- Surface rust can also be easily removed with a very light application of regular cooking oil or WD-40. If surface
 oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping onto deck or
 patio and caused damaging stains, which may be difficult to remove. This can be prevented if the above-mentioned
 measures are taken to keep the product from oxidizing.
- Do not use bleach, acid, or other abrasive cleaners on the roof or frame parts.
- Keep instruction manual for future reference.
- Keep the original packaging to store the gazebo.
- Periodically check and ensure that all bolts are well-tighten during use

LED LIGHT CAUTION:

- Place 3 AA batteries into each battery case on the post. Place 2 AAA batteries into the battery case of remote. 12AA & 2AAA batteries are needed. Batteries not included.
- Do not mix old and new batteries. Do not mix alkaline, standard (Carbon Zinc), or rechargeable (Nickel -Cadmium) batteries. If you find any noise, excessive temperature or leakage from a battery, please discard. When not using the unit for a considerable period of time, disconnect the batteries from the unit for storage. If battery power is weak during use, switch off the device and dispose of batteries.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that many cause undesired operation.
- Do not dispose of batteries in fire, batteries may explode or leak.

Responsible Party - U.S. Contact Information				
Company:	Broyhill, LCC			
Address:	P.O. Box 236, Summit Station			
Telephone or internet contact information:	1(866)578-6569			

EXPLODED DRAWING

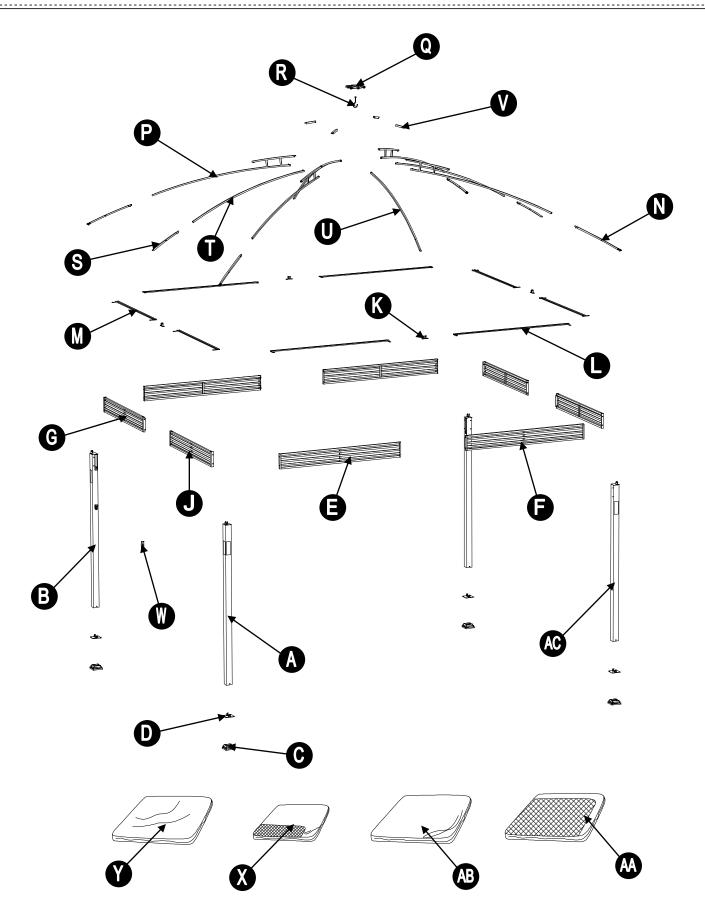

PARTS LIST

Label	Part Number	Description	Qty	Part Image
А	P00020078301	Post 1	2	=
В	P00020078401	Post 2	1	
С	P00610026001	Base Cover	4	
D	P00010025001	Post Cover	4	
E	P00040144901	Long Left Cross Beam	2	
F	P00040145001	Long Right Cross Beam	2	
G	P00040145101	Short Left Cross Beam	2	
J	P00040145201	Short Right Cross Beam	2	
К	P00050172601	Middle Connector	4	
L	P00570059101	Long Mosquito Netting Rod	4	
М	P00570059201	Short Mosquito Netting Rod	4	
N	P00060249401	Rafter Lower Tube	4	- NO
Р	P00060249301	Rafter	4	
Q	P00050172501	Big Roof Connector	1	
R	P005800001	Hook	1	
S	P00060249601	Long Middle Beam Lower Tube	2	
Т	P00060249501	Long Middle Beam	2	
U	P00060249701	Short Middle Beam	2	


V	P00570090101	Adjustable Tube	4	000
W	P00760021201	Remote Control	1	
Х	P00110071301	Small Canopy	1	
Υ	P00110071401	Big Canopy	1	
AA	P00120028201	Mosquito Netting	1	
АВ	P00130014901	Curtain	1	
AC	P00020080601	Post 3	1	E

HARDWARE LIST


Label	Part Number	Description	Qty	Add	Part Image
H1	H100010068	Bolt M6*15	56	З	
H2	H100010046	Bolt M6*40	8	1	
Н3	H050030001	Flat washer M6	16	1	
H4	H040010004	Nut M6	16	1	
HR	H990050001	Ring	104	6	
HS	H070010003	Stake Φ8*180	8	0	
HW	H090010017	Wrench M6	2	0	


HELPFUL HINTS


- Tools needed and not included:
- How many people needed for the installation work
- Estimate assemble time: 150~180 Minutes

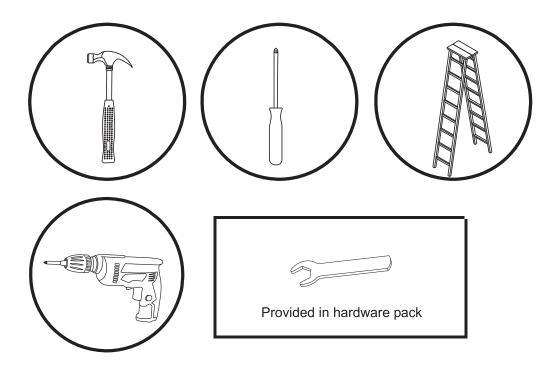



How many people needed for the installation

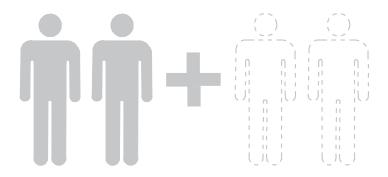


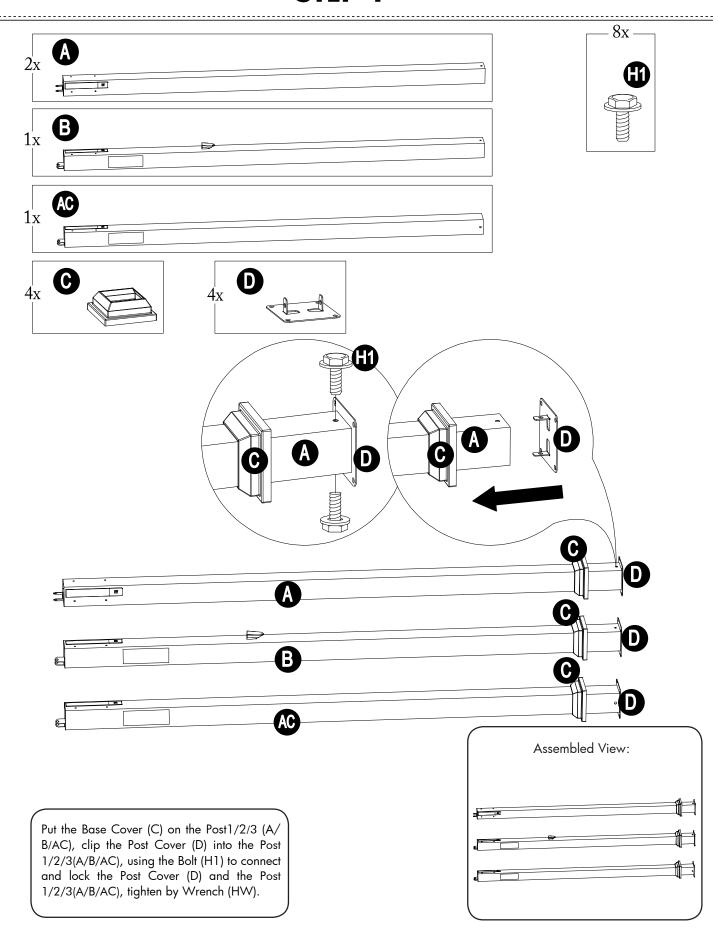 


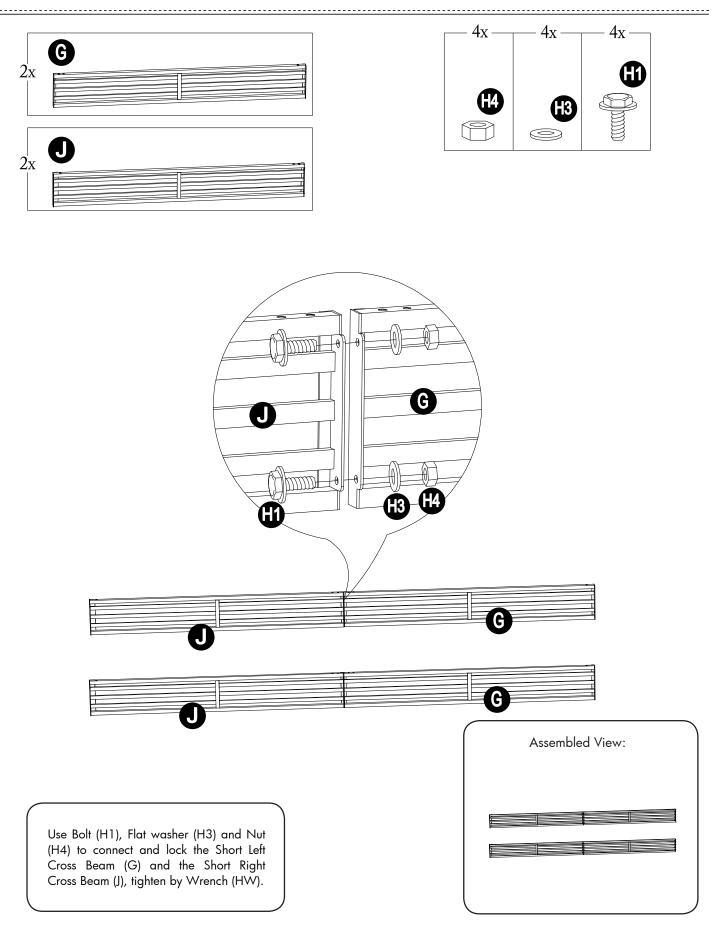

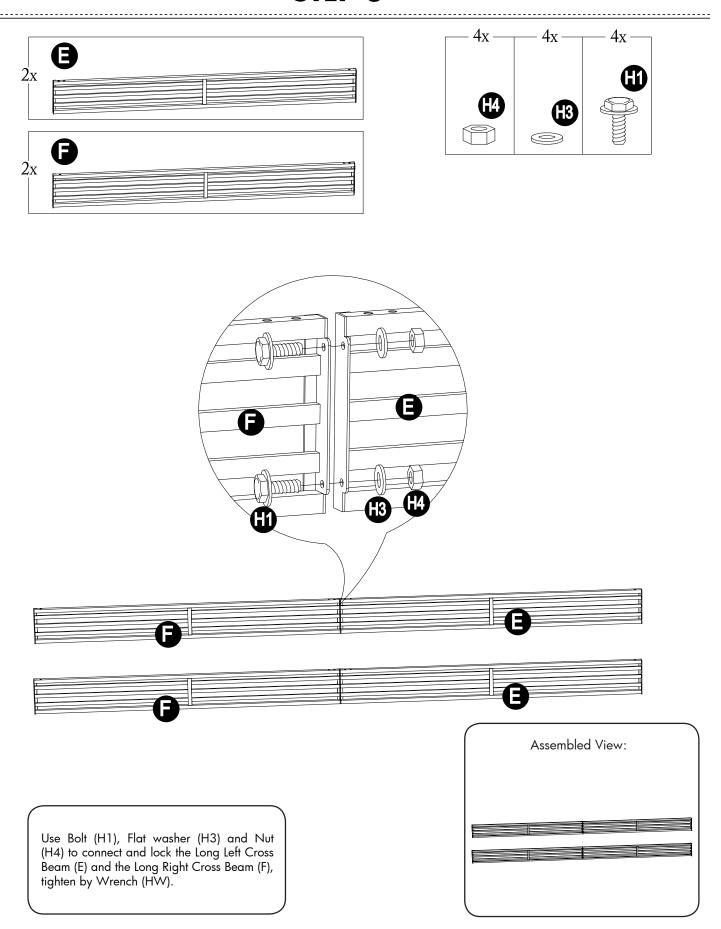


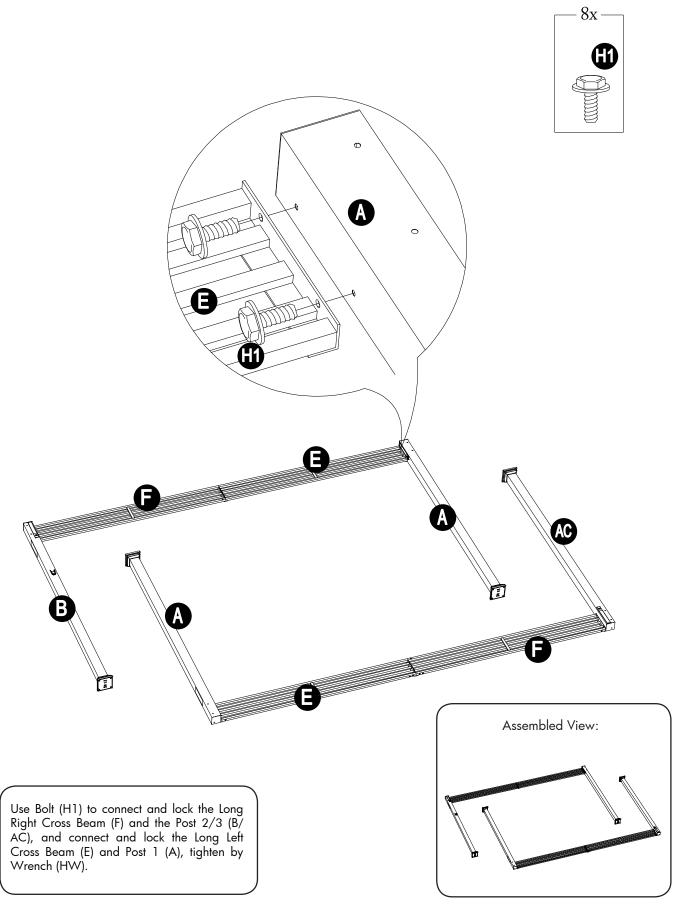

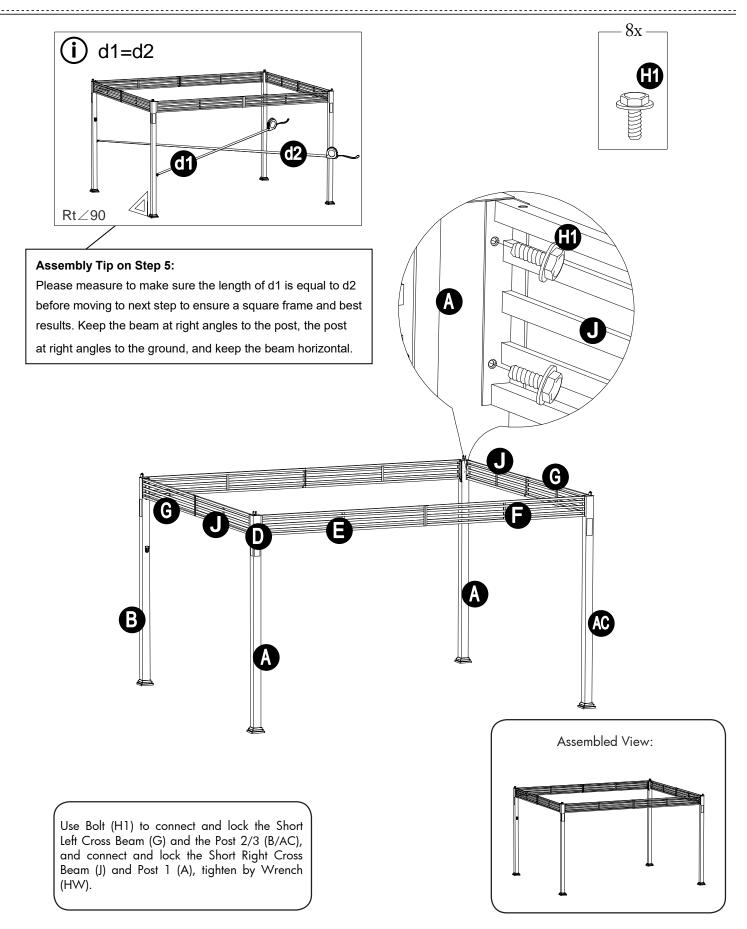


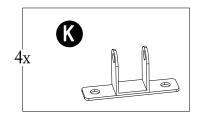





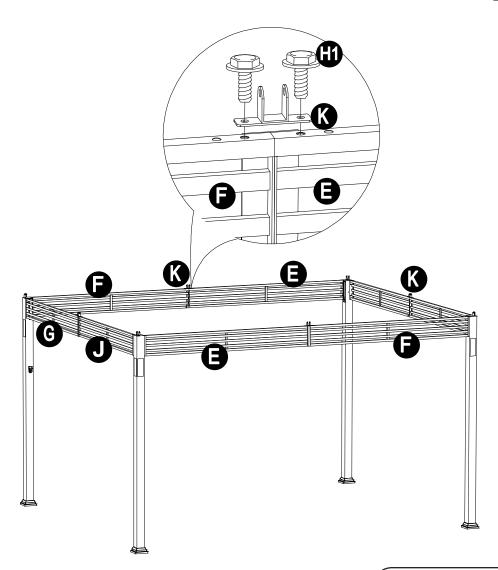


 
Use Bolt (H1) to connect and lock the Middle Connector (K), the Long Left Cross Beam (E) and the Long Right Cross Beam (F). Use Bolt (H1) to connect and lock the Middle Connector (K), the Short Left Cross Beam (G) and the Short Right Cross Beam (J), tighten by Wrench (HW).

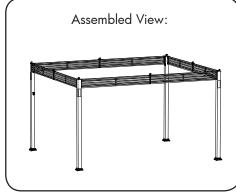

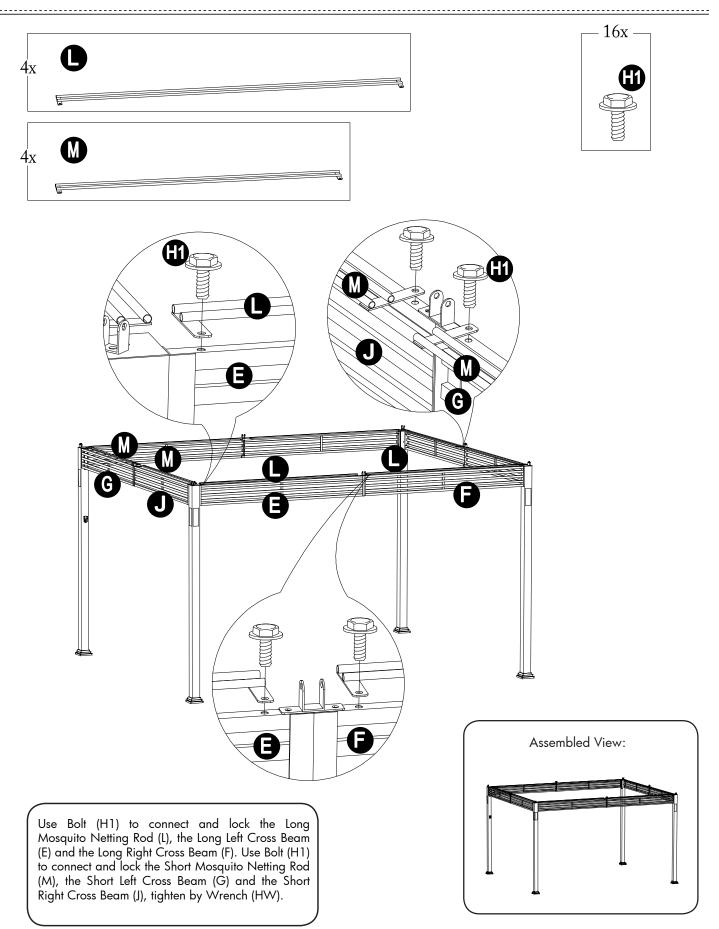


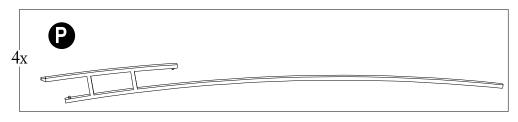


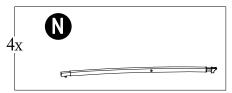


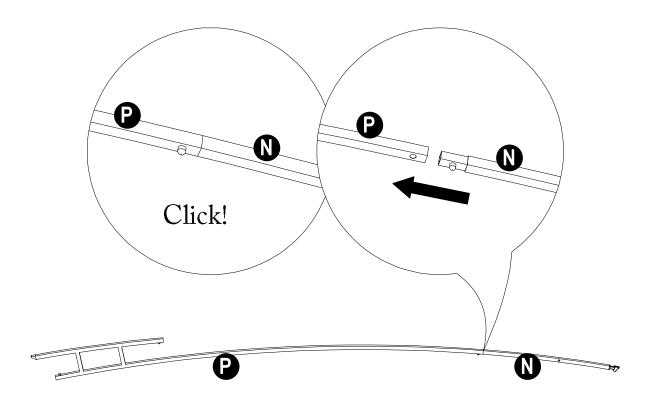


 
Insert the Rafter Lower Tube (N) into the Rafter (P) and snap the snap clip on the Rafter Lower Tube (N) into the hole of the Rafter (P).

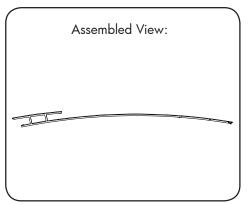

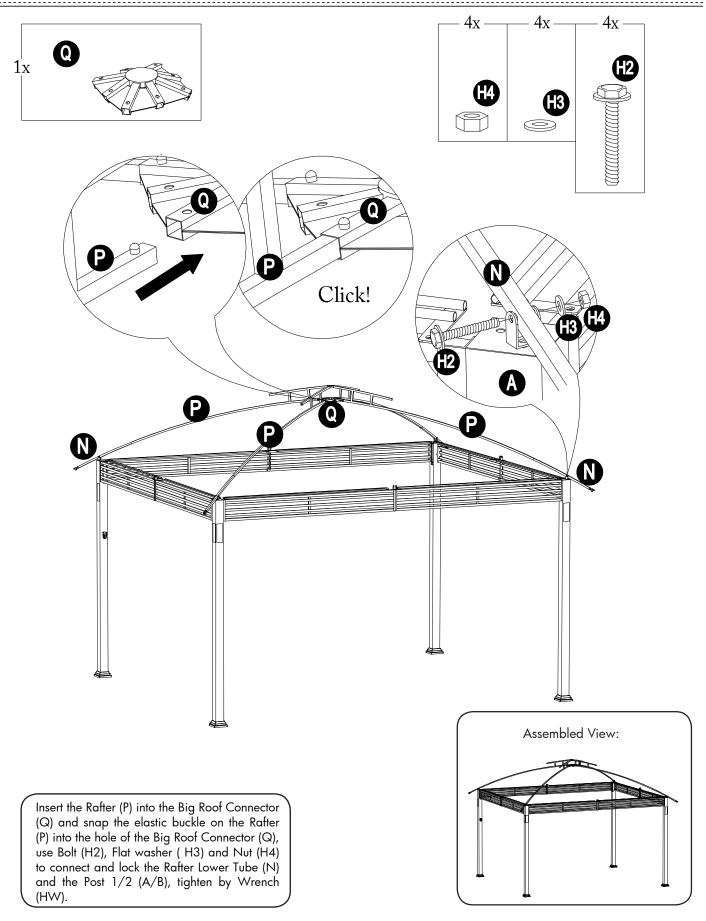

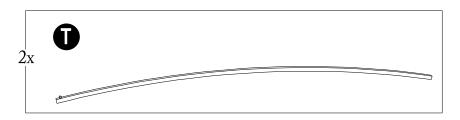


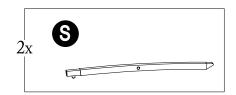


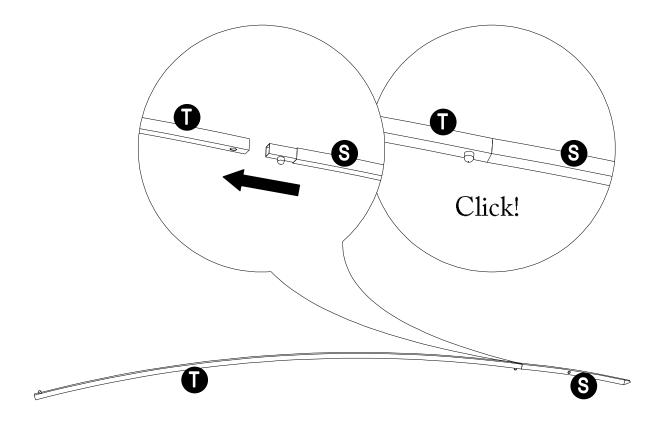



Insert the Long Middle Beam Lower Tube (S) into the Long Middle Beam (T) and snap the snaps on the Long Middle Beam Lower Tube (S) into the holes of the Long Middle Beam (T).

 
Assembled View:

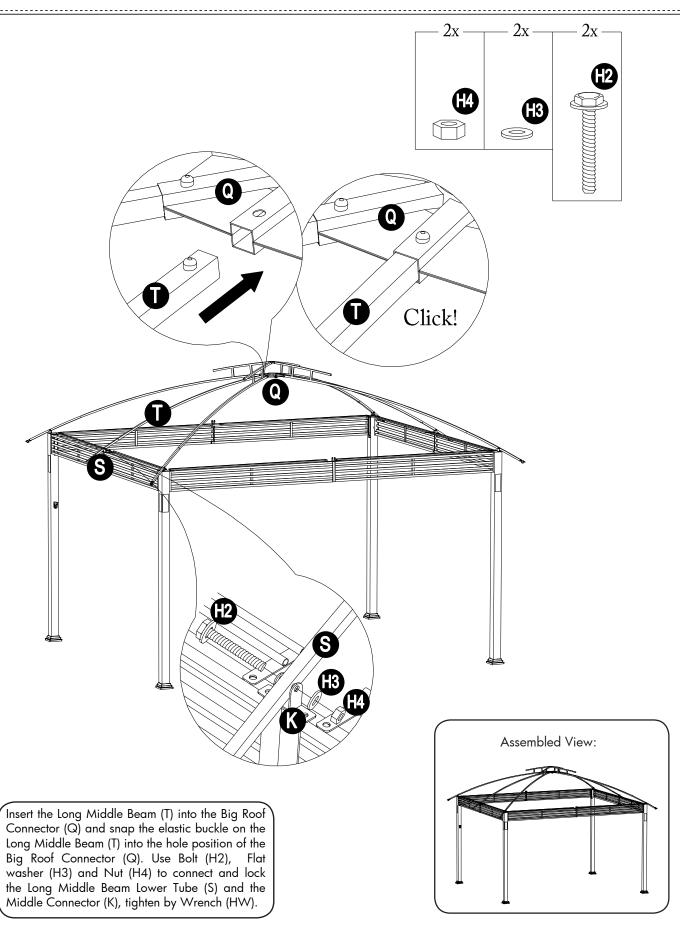

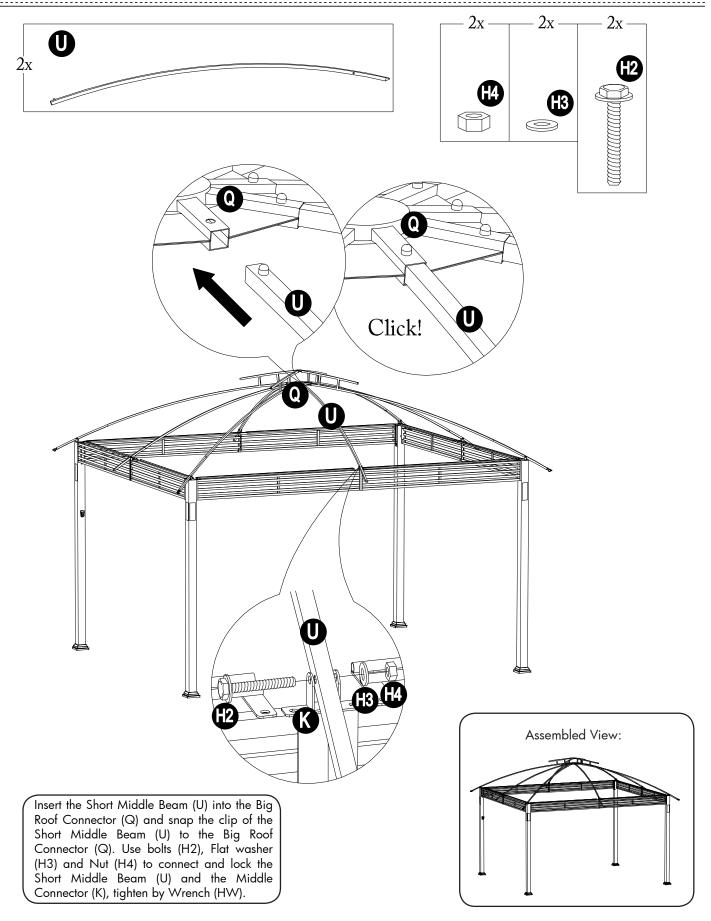


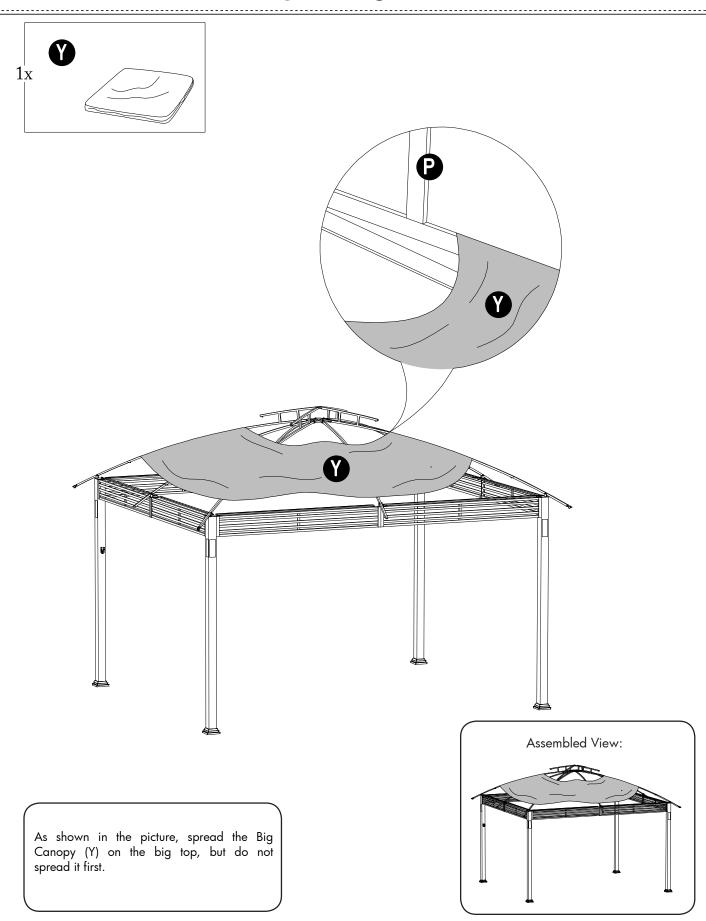


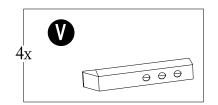

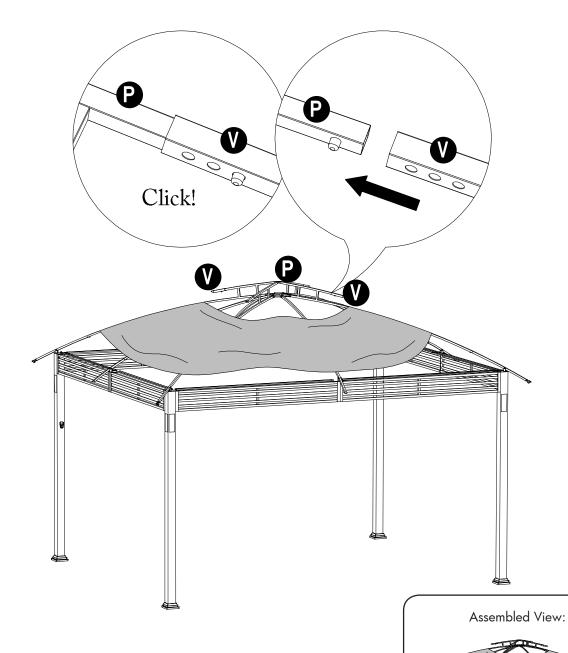



Assemble the Adjustable Tube (V) to the Rafter (P), and snap the elastic buckle of the Rafter (P) into the hole of the Adjustable Tube (V).

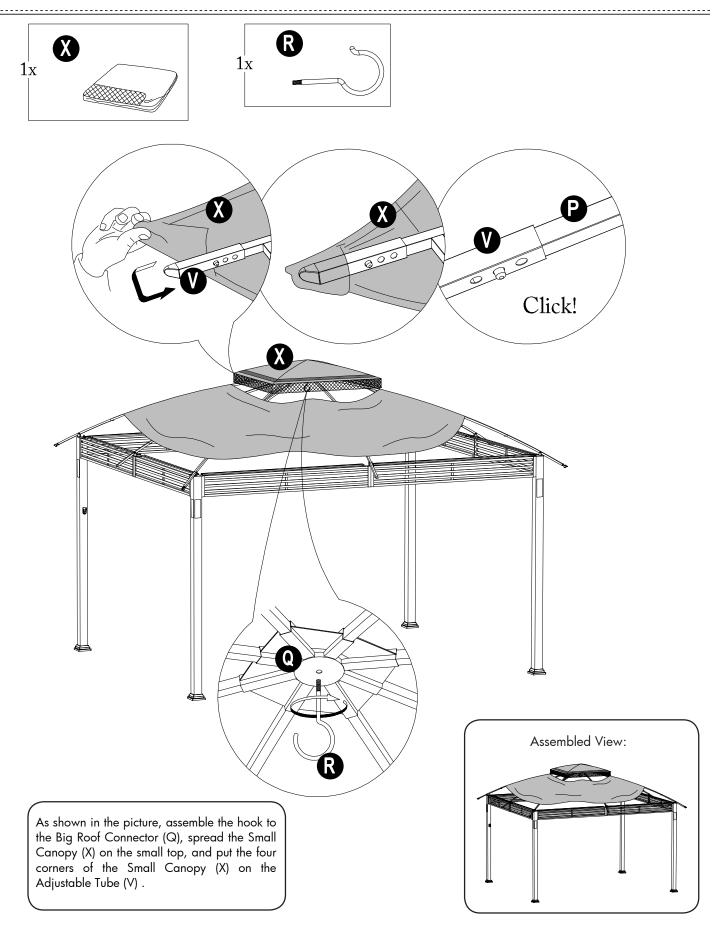


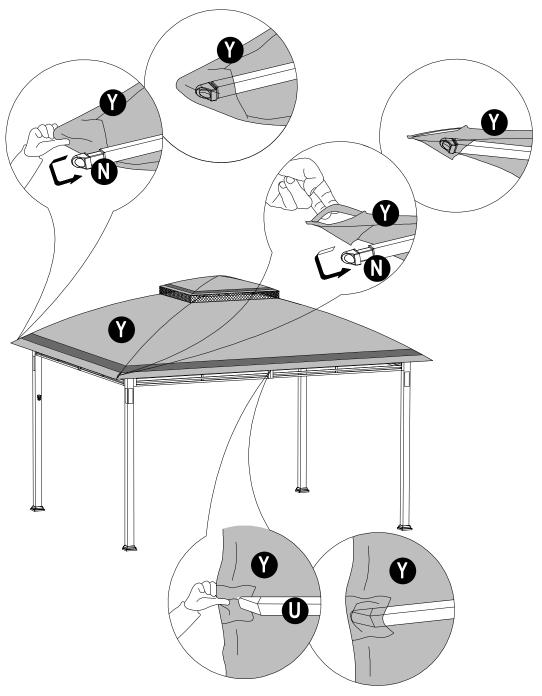



As shown in the picture, spread out the Big Canopy (Y), put it on the Rafter Lower Tube (N), and put it on the Long Middle Beam Lower Tube (S), on the Short Middle Beam (U).

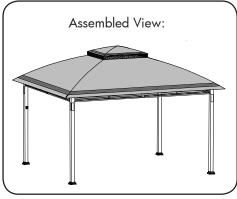

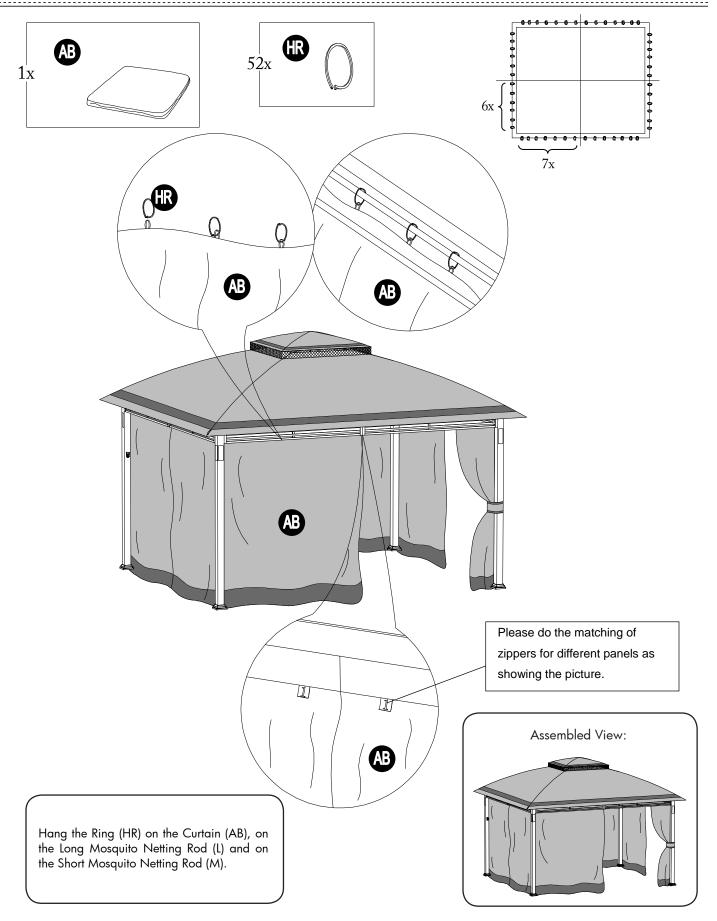

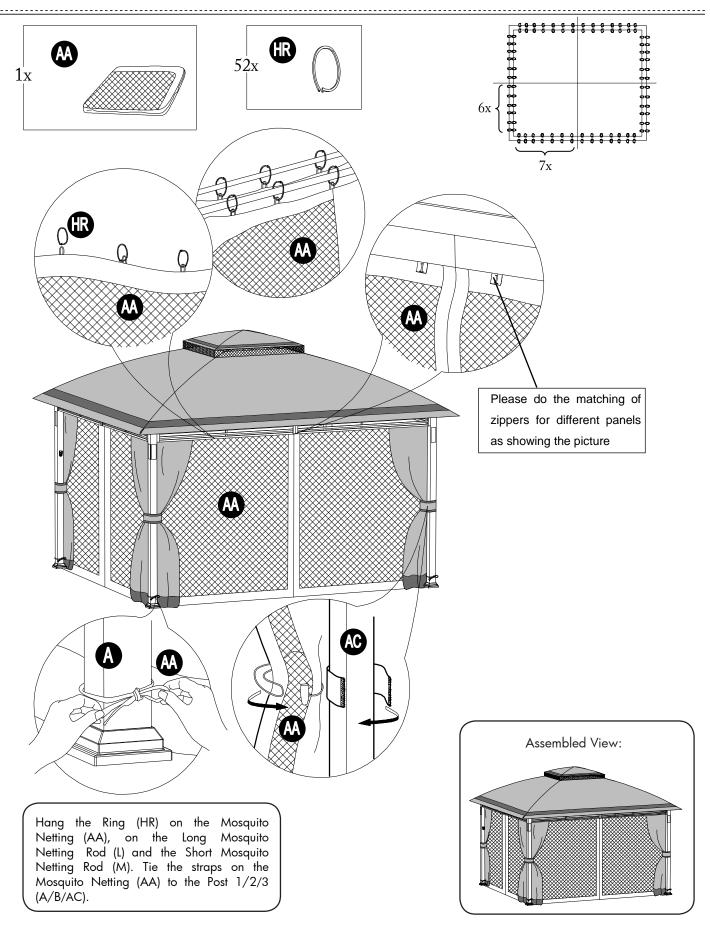

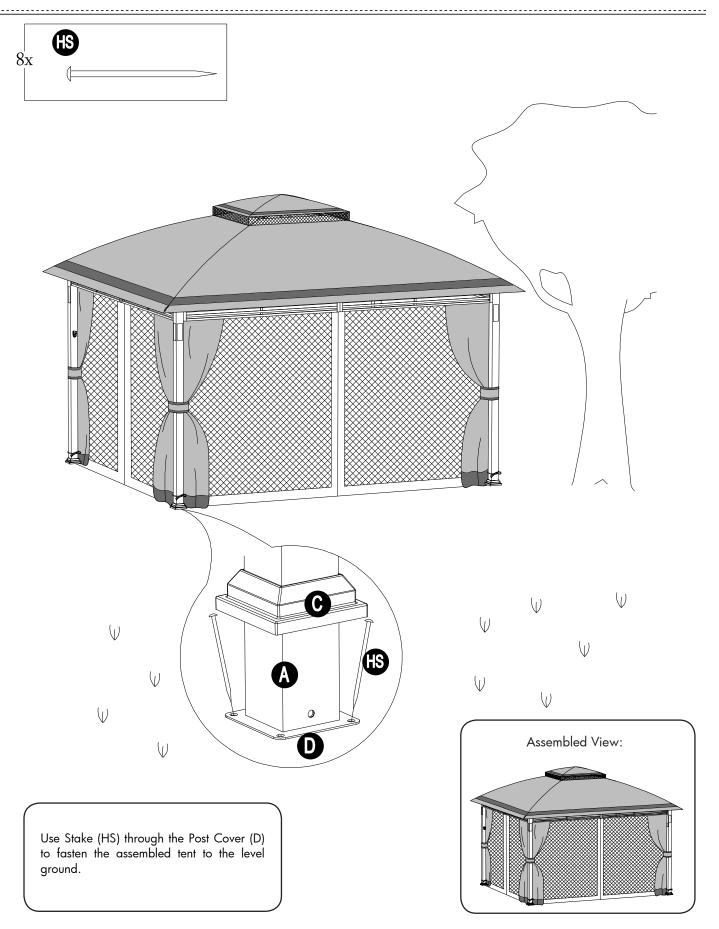

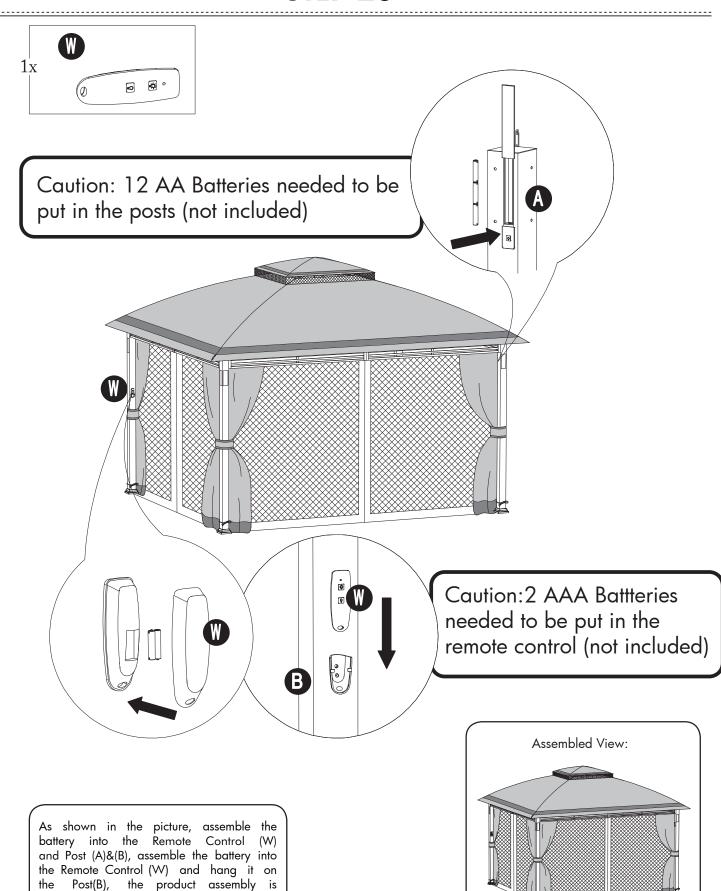

complete.