



ROCKBRIDGE ALL WEATHER WICKER 4PK DINING CHAIR WITH SEAT CUSHION AND LUMBAR PILLOW

ASSEMBLY INSTRUCTIONS

ITEM# : GBO23-901C4

SKU# : 810580329

Need help? We are here for you! 1-888-733-8169 Toll Free

Or email us at customerservice_01@yeah.net, customerservice_02@yeah.net

customerservice_03@yeah.net

GENERAL BEST PRACTICES FOR ASSEMBLY:

Read all instructions before starting

Clear a flat covered space to begin assembly

Always best to do it with a friend

Note that hardware required is provided for every step

Pay attention to orientation

Number of the hardware corresponds to its letter in the package

Helpful hints provided along the way

WARNINGS:

Use the correct screws as indicated. All screws should be hand tightened until the complete piece is assembled (This will make the assembly process much easier). Once the piece is fully assembled, then go back and tighten all screws with provided tool.

Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of the product construction.

Keep assembly area at least 6 feet from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.

Some parts may contain sharp edges. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the product. Please read all instructions before assembly and use.

The chairs are not to be used for standing purposes and will not function as a stool or step-ladder. Use on even surfaces only.

The chair is used at weight of 250lb (113kg). Improper use of this product or failure to use as directed may result in injury. Not intended for commercial use.

MAINTENANCE

STAIN RESISTANT CUSHIONS CARE — KEEP THE CUSHIONS IN STORAGE ON RAINY DAYS.

SPILLS: Immediately wipe up the spill using a white damp cloth. Repeat process if necessary until stain is gone. Allow cushions to air dry.

FABRIC CARE: Hand wash cold, non-chlorine bleach when needed, lay flat to dry. Cool iron if necessary. Do not dry clean.

ALL WEATHER WICKER PRODUCT CARE

Before using, clean the product completely with a soft dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water, rinse thoroughly and dry completely. Do not use strong detergent or abrasive cleaners. Screws can loosen over a period of usage, please check the screws occasionally and re-tighten if necessary.

PARTS LIST FOR 1 CHAIR



A1

1PC Left Arm



A2

1PC Right Arm



B

1PC Chair back



C

1PC Seat Panel



J

1PC Seat Cushion



K

1PC Lumbar Pillow

HARDWARE LIST FOR 1 CHAIR



D

2PC Big Washer



E

4PC Screw(φ8x35mm)



F

4PC Screw(φ6x35mm)



G

1PC Allen Wrench



H

4PC Spring Washer




I

4PC Small Washer


STEP 1

Secure chair back (B) to left arm (A1) with 1 screw (E) by using allen wrench (G). Do not fully tighten screws now.

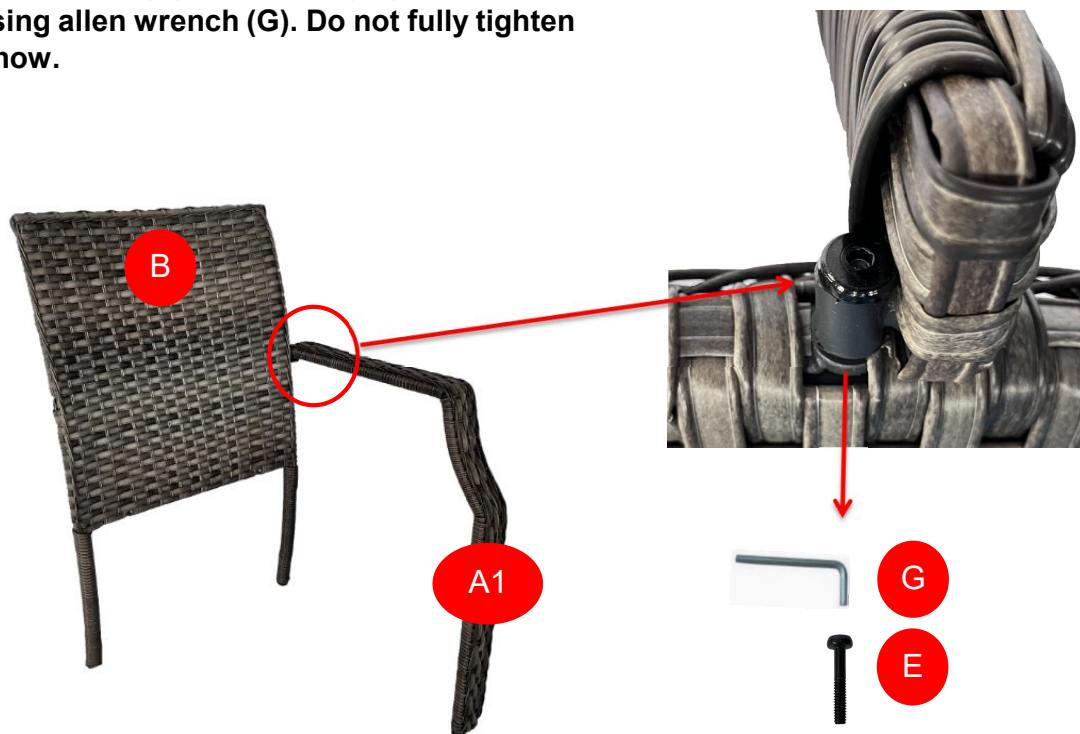


STEP 2

Secure right arm (A2) to the other side of assembled chair back (B) with 1 screw (E) by using allen wrench (G). Do not fully tighten screws now.

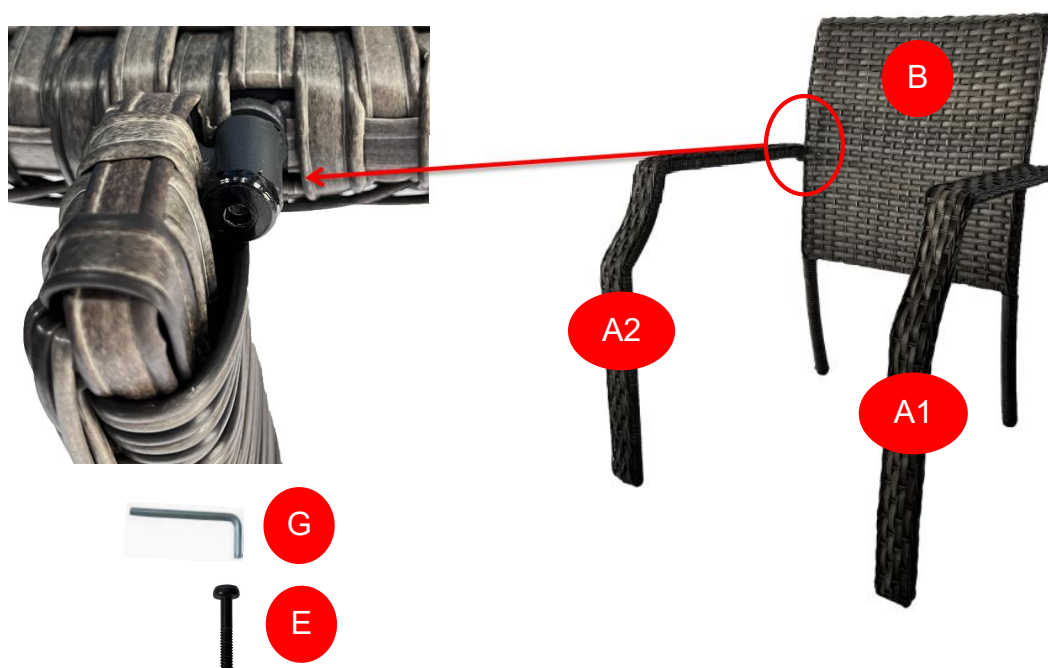



STEP 3

Secure seat panel (C) to assembled chair arms (A1, A2) with 4 screws (F), 4 small washers (I) and 4 spring washers (H) by using allen wrench (G). Do not fully tighten screws now.

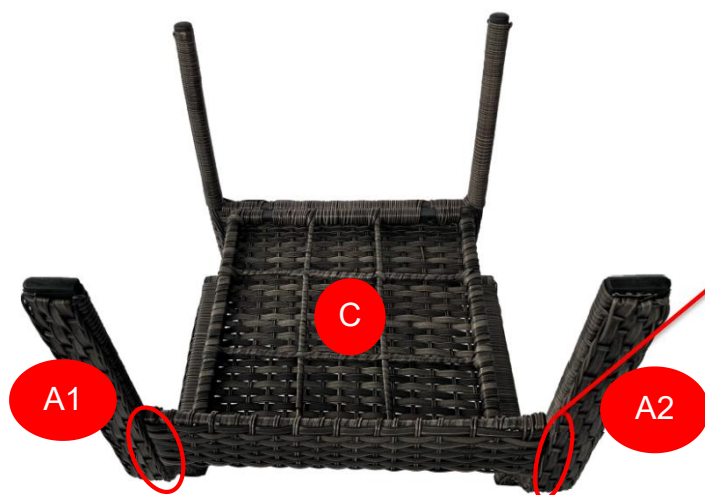

STEP 4

Secure seat panel (C) to assembled chair back (B) with 2 big washers (D) and 2 screws (E) by using allen wrench (G). Verify the alignment and adjust, then fully tighten all the screws.

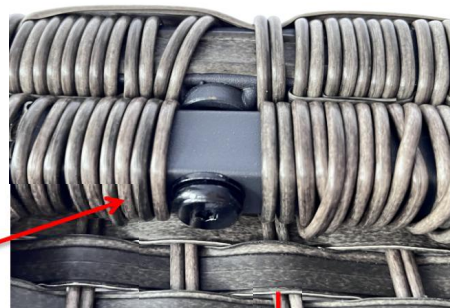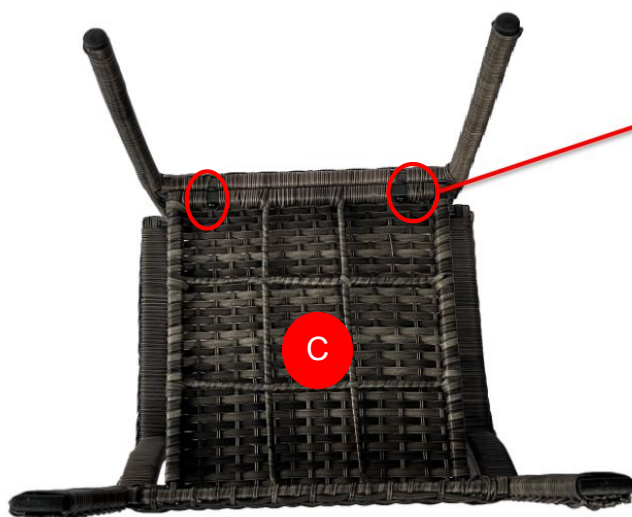

STEP 5

Put seat cushion (J) and lumbar pillow (K) on the chair. The chair is assembled.



Warranty

One year limited warranty.

Proof of purchase (dated register receipt) is required for warranty claims.

It remains the customer's responsibility for freight and packing charges to and from the service center.