



ASSEMBLY INSTRUCTIONS

ITEM# : GBO23-906SS-4

SKU# : 810580416

CHICO ALL WEATHER WICKER UMBRELLA SIDE TABLE

Need help? We are here for you! 1-888-733-8169 Toll Free

Or email us at customerservice_01@yeah.net, customerservice_02@yeah.net

customerservice_03@yeah.net

GENERAL BEST PRACTICE FOR ASSEMBLY:

Read all instructions before starting

Clear a flat covered space to begin assembly

Always best to do it with a friend

Note that hardware required is provided for every step

Pay attention to orientation

Number of the hardware corresponds to its letter in the package

Helpful hints provided along the way

Retain these assembly instructions for future reference

WARNINGS:

To avoid hazards caused to the product or people around it, make sure to have weights applied to the base of the table before you use umbrella with the table.

Fix the steel hoop plate underneath for better holding the weights for umbrella.

Use the correct bolts as indicated. All bolts should be hand tightened until the complete piece is assembled (This will make the assembly process much easier). Once the piece is fully assembled, then go back and tighten all bolts with provided tool.

Regularly check hardware and tighten if necessary.

Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.

Keep children and pets away during assembly. This item contains small parts that can be swallowed by children.

Children should always be under direct adult supervision while using this product.

The table is not to be used for standing purposes, standing on or misuse of ottoman may result in damage or injury.











MAINTENANCE:


We recommend the use of furniture covers when not in use.

Inspect and tighten all of the bolts and fasteners on a regular basis to ensure the proper performance and safety of your outdoor furniture.


In order to prolong the life and beauty of your outdoor furniture, we recommend that it be stored in a dry and protected area during off season periods.

PARTS LIST:

Part No.	Part	Qty	Image	Part No.	Part	Qty	Image
1	Table Top	1		6	Short Bolt (M6x12mm)	8	
2	Front Panel	2		7	Long Bolt (M6x30mm)	8	
3	Side Panel	2		8	Washer	16	
4	Steel Hoop Plate	1		9	Regulating Screw	1	
5	Umbrella Pole	1		10	Adjuster Knob	1	

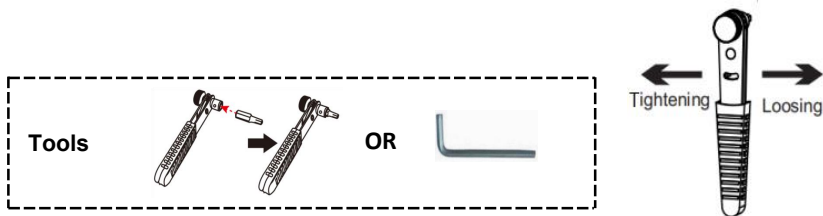


PRODUCT FRAME MAP

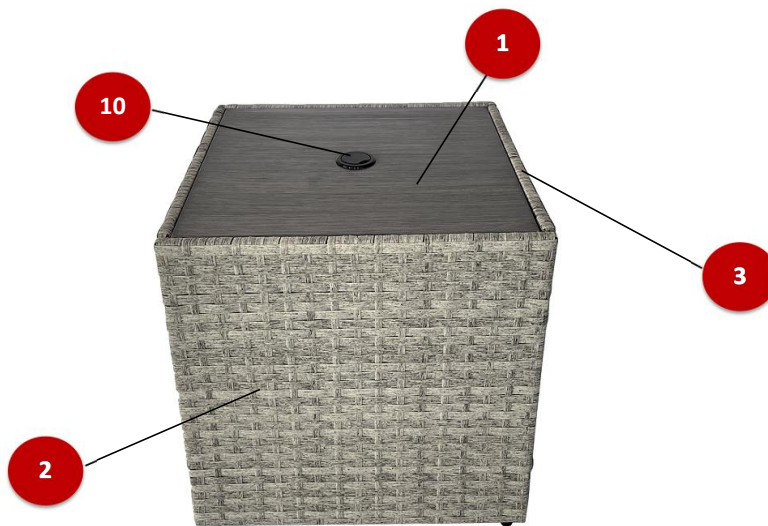


STEP 1

PART REQUIRED: 1, 1PC 2 & 1PC 3
Keep the bolts loose.

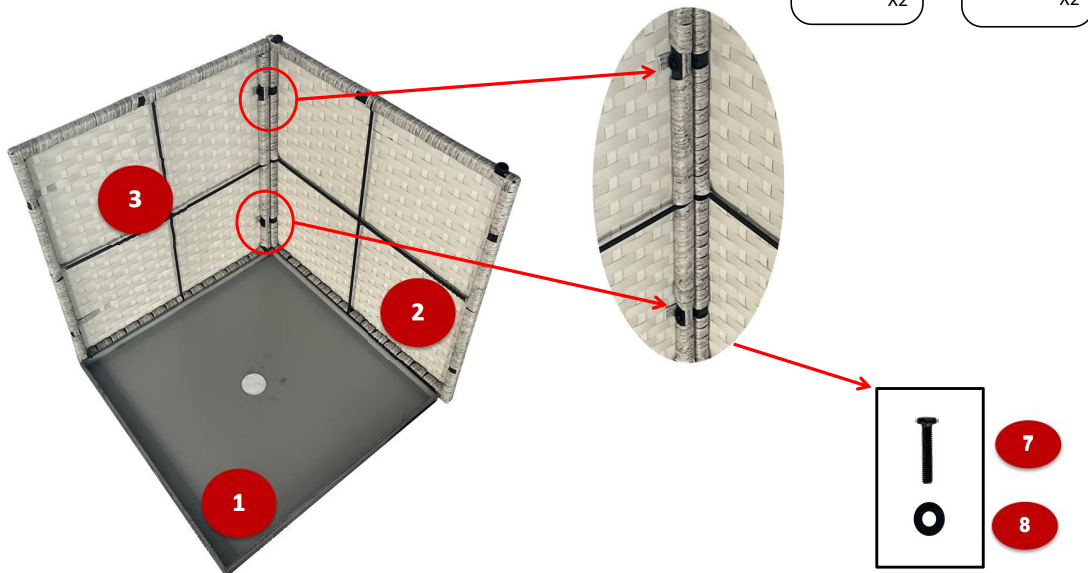

STEP 2


PART REQUIRED: 1, 2PC 2 & 1PC 3
Keep the bolts loose.

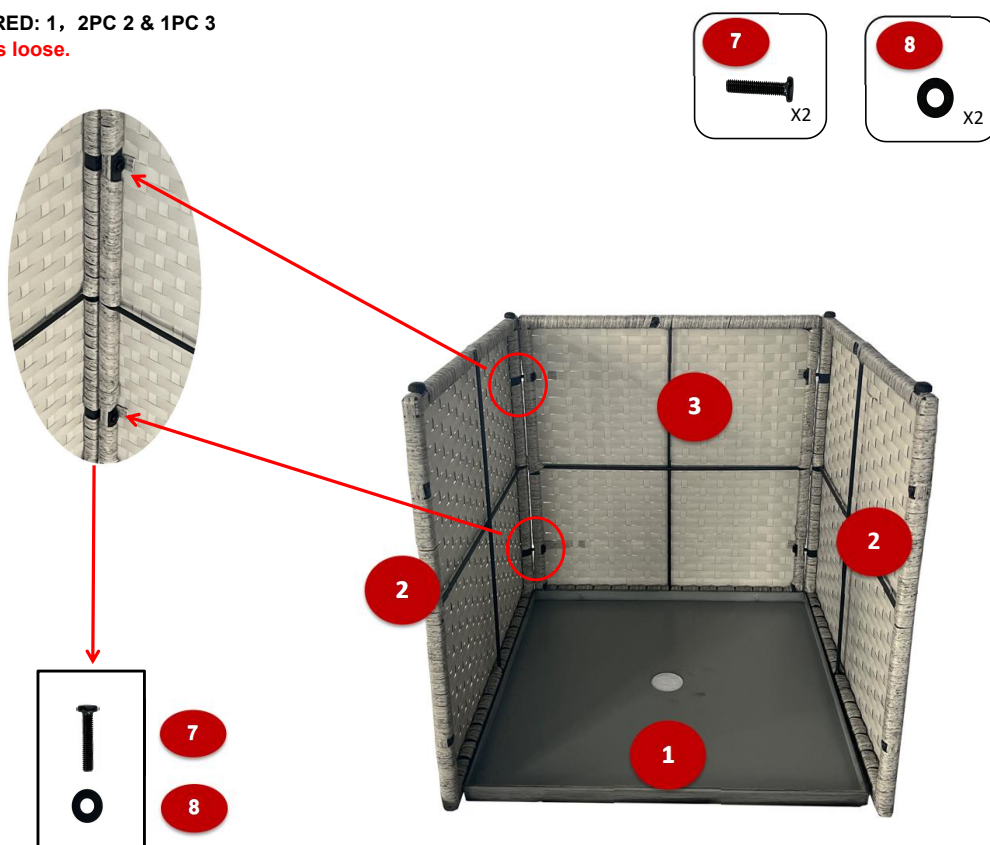

STEP 3

PART REQUIRED: 1, 2PC 2 & 2PC 3


Keep the bolts loose.

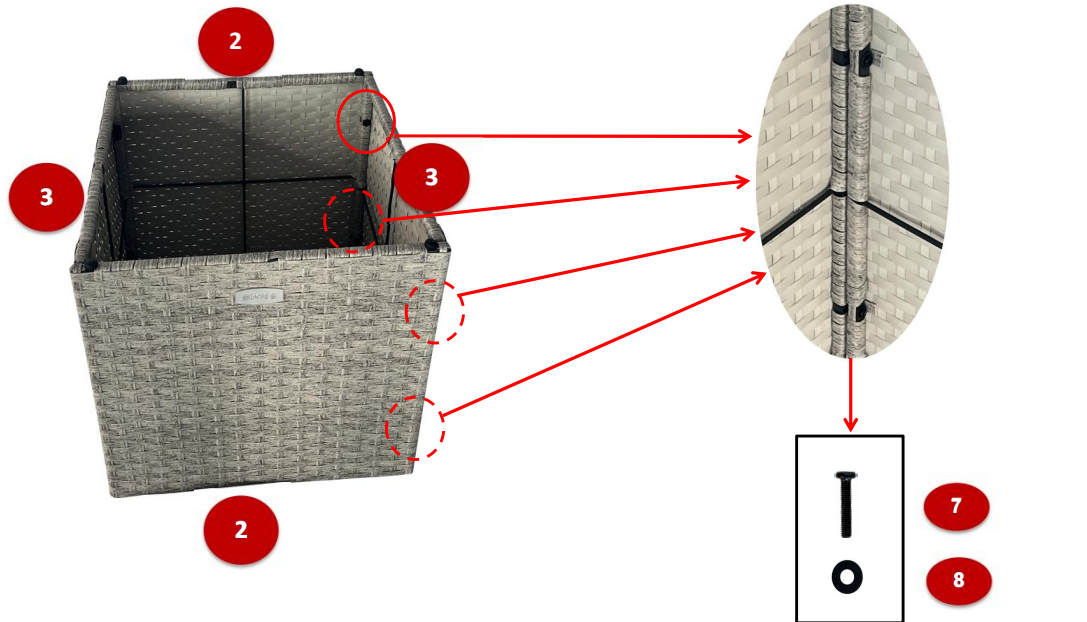

STEP 4

PART REQUIRED: 4, 5 & 9

Keep the bolts loose.

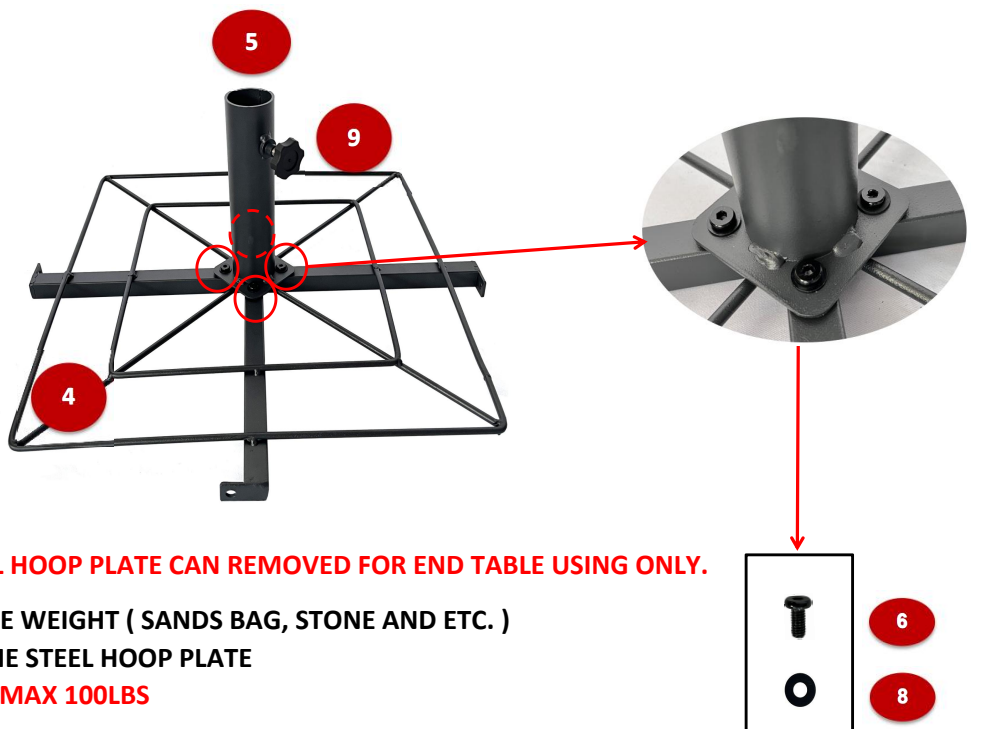

THE STEEL HOOP PLATE CAN REMOVED FOR END TABLE USING ONLY.

LOAD THE WEIGHT (SANDS BAG, STONE AND ETC.)
ONTO THE STEEL HOOP PLATE


WEIGHT MAX 100LBS

STEP 5

PART REQUIRED: 1, 2, 3 & 4

Turn over the assembled table frame.

Keep the bolts loose.

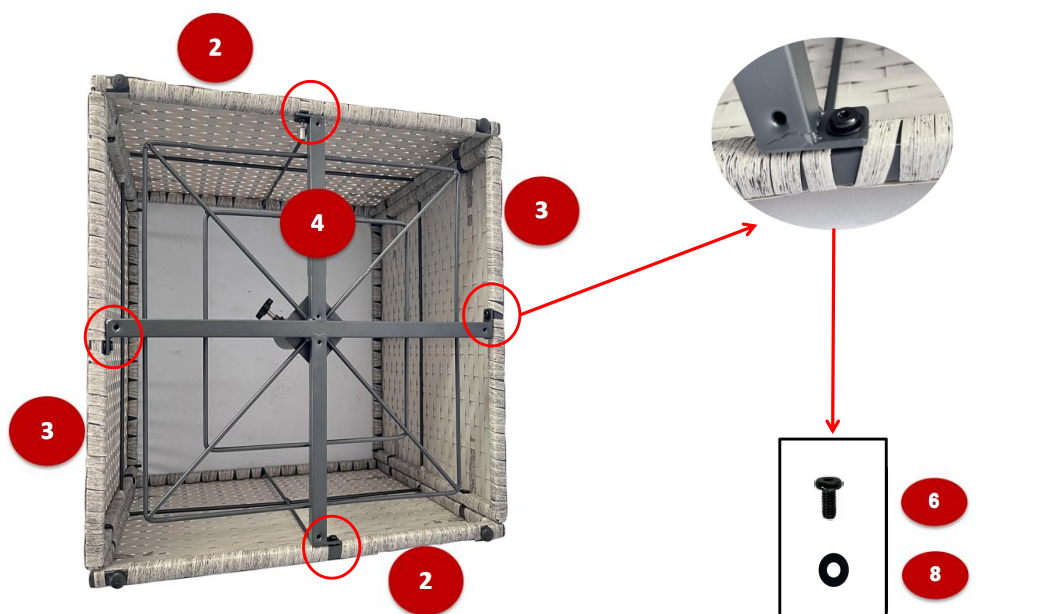

THE STEEL HOOP PLATE CAN REMOVED FOR END TABLE USING ONLY.

LOAD THE WEIGHT (SANDS BAG, STONE AND ETC.)

ONTO THE STEEL HOOP PLATE


WEIGHT MAX 100LBS

STEP 6

PART REQUIRED: 10

Tighen all the bolts, tight adjuster knob (10) to table top (1) ,

Finished!

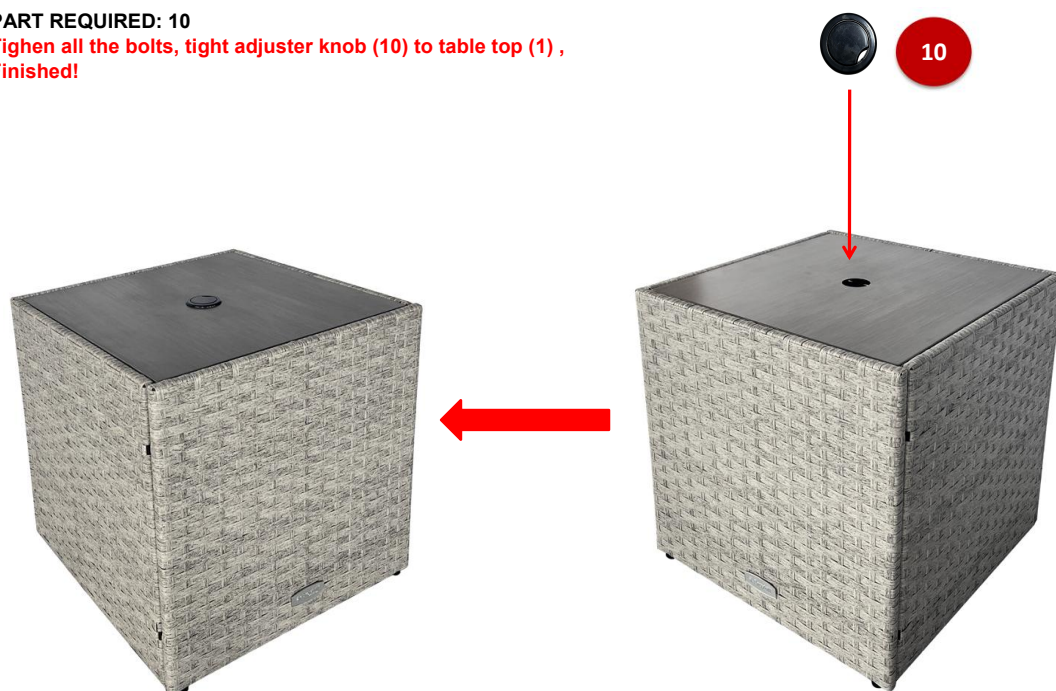

Warranty

One year limited warranty.

Proof of purchase (dated register receipt) is required for warranty claims.

It remains the customer's responsibility for freight and packing charges to and from the service center.