



ASSEMBLY INSTRUCTIONS

ITEM# : GBO23-932

SKU# : 810581105

CHICO ALL WEATHER WICKER SECTIONAL SET WITH CUSHIONS

Need help? We are here for you! 1-888-733-8169 Toll Free

Or email us at customerservice_01@yeah.net, customerservice_02@yeah.net

customerservice_03@yeah.net

GENERAL BEST PRACTICE FOR ASSEMBLY:

- Read all instructions before starting
- Clear a flat covered space to begin assembly
- Always best to do it with a friend
- Note that hardware required is provided for every step
- Pay attention to orientation
- Number of the hardware corresponds to its letter in the package
- Helpful hints provided along the way
- Retain these assembly instructions for future reference

WARNINGS:

Use the correct bolts as indicated. All bolts should be hand tightened until the complete piece is assembled (This will make the assembly process much easier). Once the piece is fully assembled, then go back and tighten all bolts with provided tool.

Regularly check hardware and tighten if necessary.

Do not discard of any of the packaging until you have checked that you have all of the parts and fittings required.

Keep children and pets away during assembly. This item contains small parts that can be swallowed by children.

Children should always be under direct adult supervision while using this product.

The sofa, chaise and ottoman are not to be used for standing purposes, standing on or misuse of ottoman may result in damage or injury.

Weight limit for sofa and chaise is 500 lbs (227.3 kg), weight limit for ottoman is 250 lbs (113.6 kg). Not intended for commercial use.

MAINTENANCE:

Wash frame and fabric parts with mild soap and water, rinse thoroughly, and dry completely. Do not use bleach, acid, or other solvents on the frame or fabric parts.

The cushions may be washed on the surface only by using mild soap and water or a commercial foaming upholstery cleaner if necessary.







If washed, rinse well and hang to dry. Do not machine wash or dry.

We'll recommend the use of furniture covers when not in use.

 
 
Inspect and tighten all of the bolts and fasteners on a regular basis to ensure the proper performance and safety of your outdoor furniture.

In order to prolong the life and beauty of your outdoor furniture, we recommend that it be stored in a dry and protected area during off season periods.

PARTS LIST FOR OTTOMAN:


| Part No. | Part | Qty | Image | Part No. | Part | Qty | Image |
|----------|--------------------|-----|---|----------|----------------------|-----|---|
| 1 | Ottoman Top | 1 |  | 4 | Short Bolt (M6x20mm) | 8 |  |
| 2 | U-shaped Short Leg | 2 |  | 5 | Washer | 12 |  |
| 3 | Ottoman Cushion | 1 |  | 6 | Nut | 4 |  |

Tools

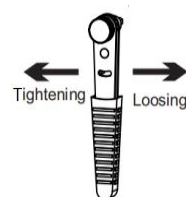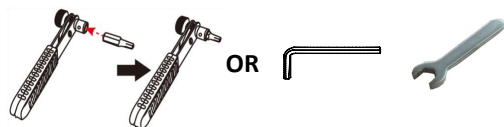


STEP 1

 PART REQUIRED: 1 & 2
Keep all bolts loose.

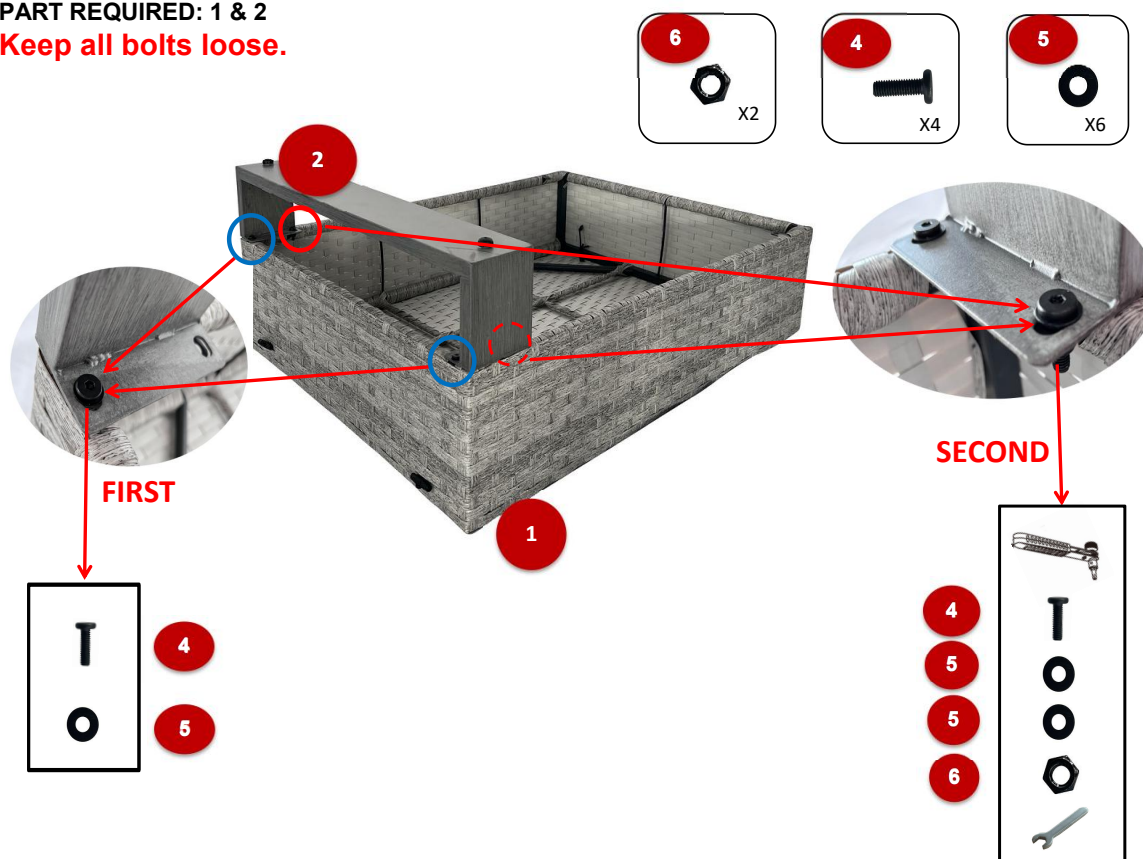

STEP 2

 Tighten all bolts by using the supplied Tool.

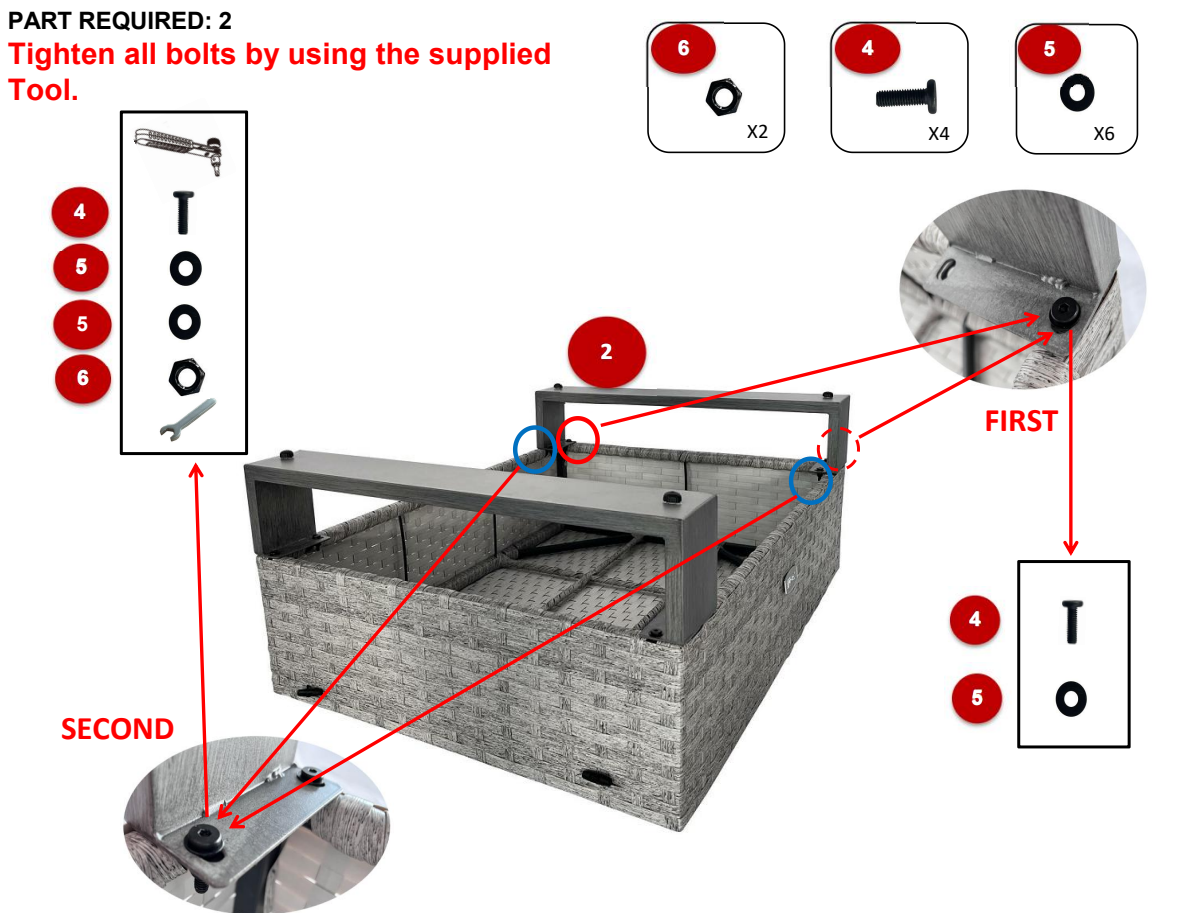

STEP 3















Make sure the ottoman stand on the ground stable, put the cushion. Finished!





One year limited warranty.

It remains the customer's responsibility for freight and packing charges to and from the service center.


PARTS LIST FOR RIGHT ARM SOFA:

| Part No. | Part | Qty | Image | Part No. | Part | Qty | Image |
|----------|---------------------|-----|---|----------|----------------------|-----|---|
| 9 | Sofa Back | 1 |  | 4 | Short Bolt (M6x20mm) | 13 |  |
| 10 | Sofa Seat Panel | 1 |  | 5 | Washer | 26 |  |
| 11 | Right Arm | 1 |  | 6 | Nut | 6 |  |
| 12 | U-shaped Long Leg | 2 |  | 16 | Seat Cushion | 2 |  |
| 13 | Support Pipe | 1 |  | 17 | Back Cushion | 2 |  |
| 14 | Steel Plate | 1 |  | 18 | Connection Lock | 1 |  |
| 15 | Long Bolt (M6x35mm) | 7 |  | 24 | Bolt (M6x25mm) | 1 |  |

  Tools

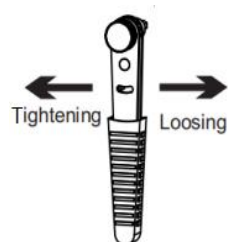


PRODUCT FRAME MAP

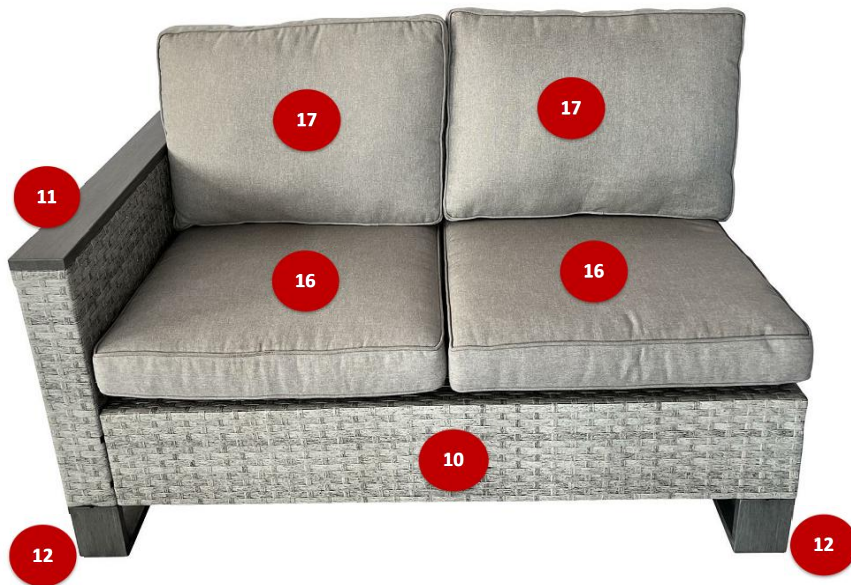 




STEP 1

 PART REQUIRED: 9 & 11
Fully tighten the bolt.

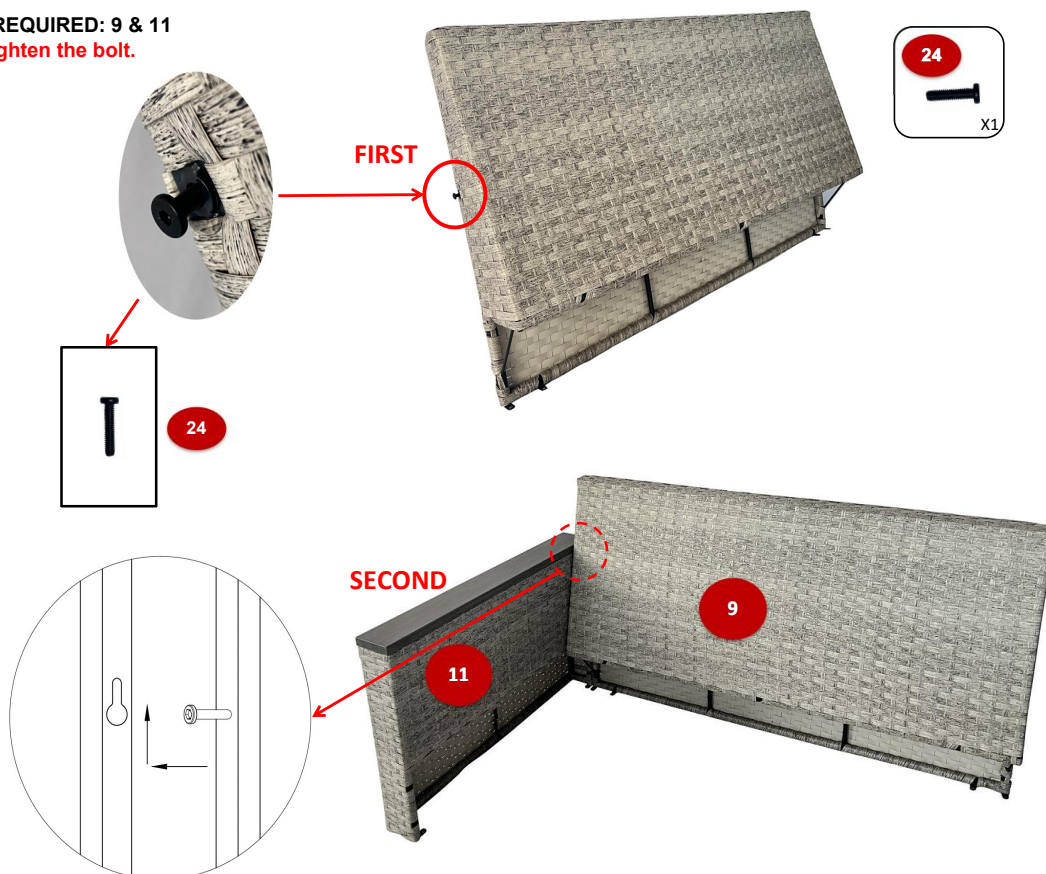


STEP 2

   PART REQUIRED: 9 & 11
Keep the bolts loose.

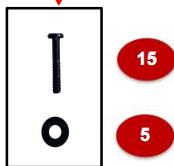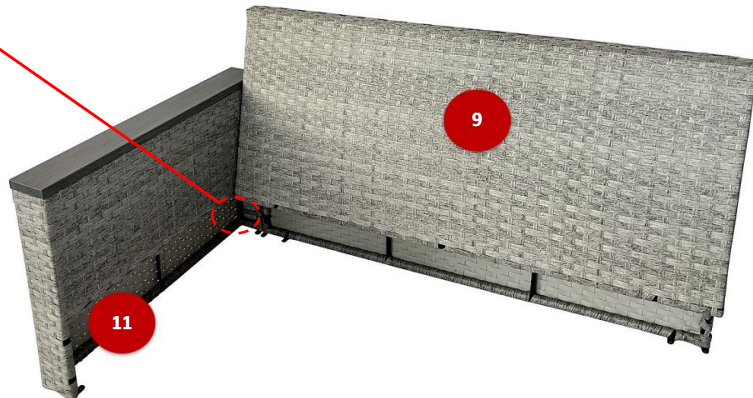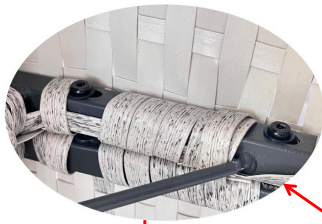


STEP 3

 PART REQUIRED: 10
Keep the bolts loose.

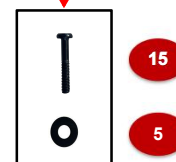


STEP 4

 PART REQUIRED: 9 & 10
Keep the bolts loose.

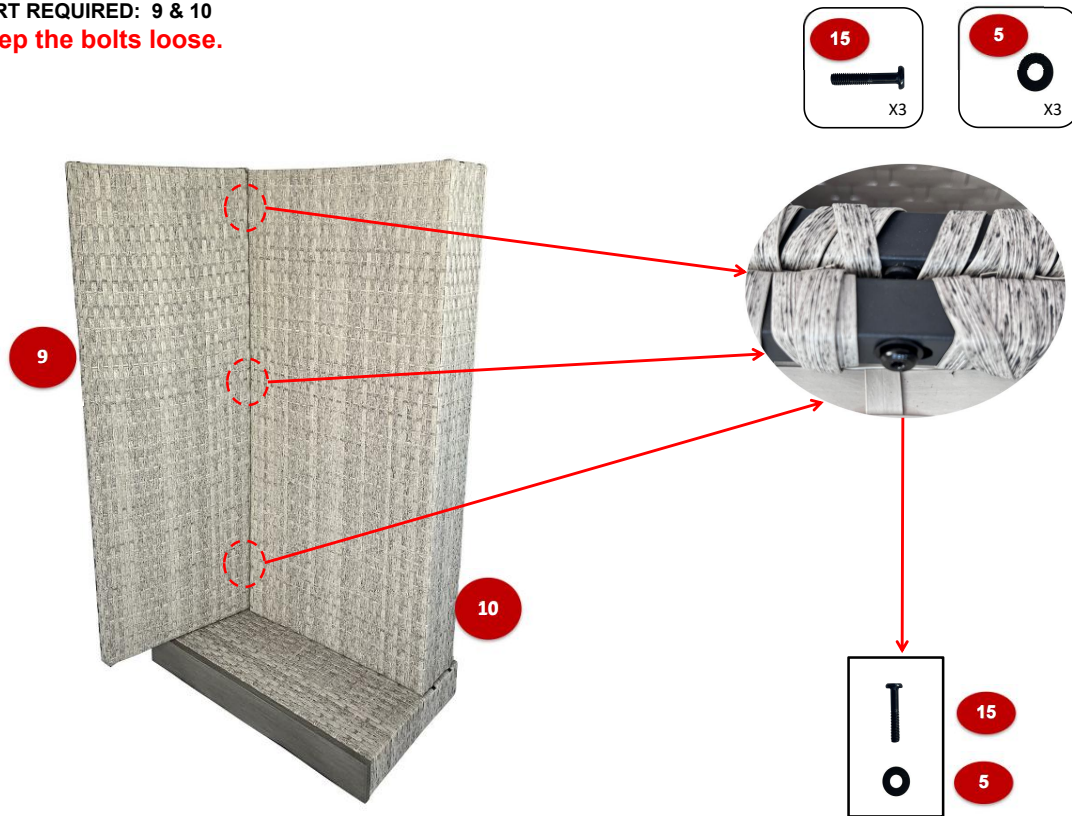


STEP 5

 PART REQUIRED: 14
Keep the bolts loose.

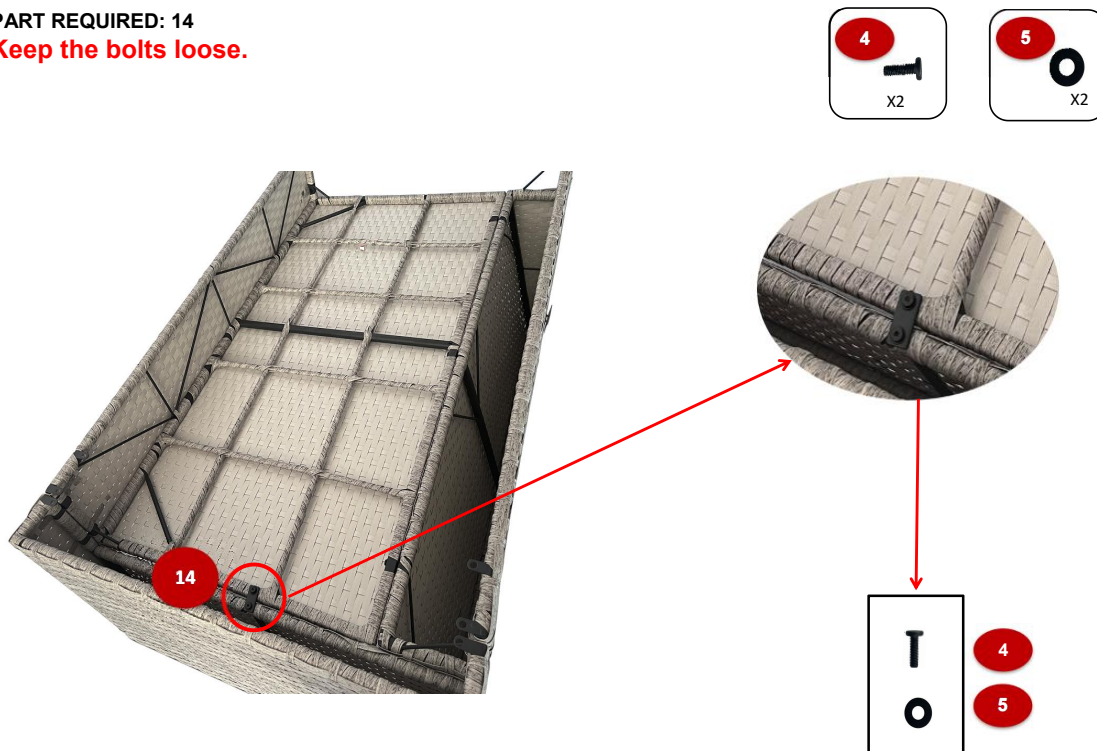


STEP 6

 PART REQUIRED: 1PC 12
Keep the bolts loose.

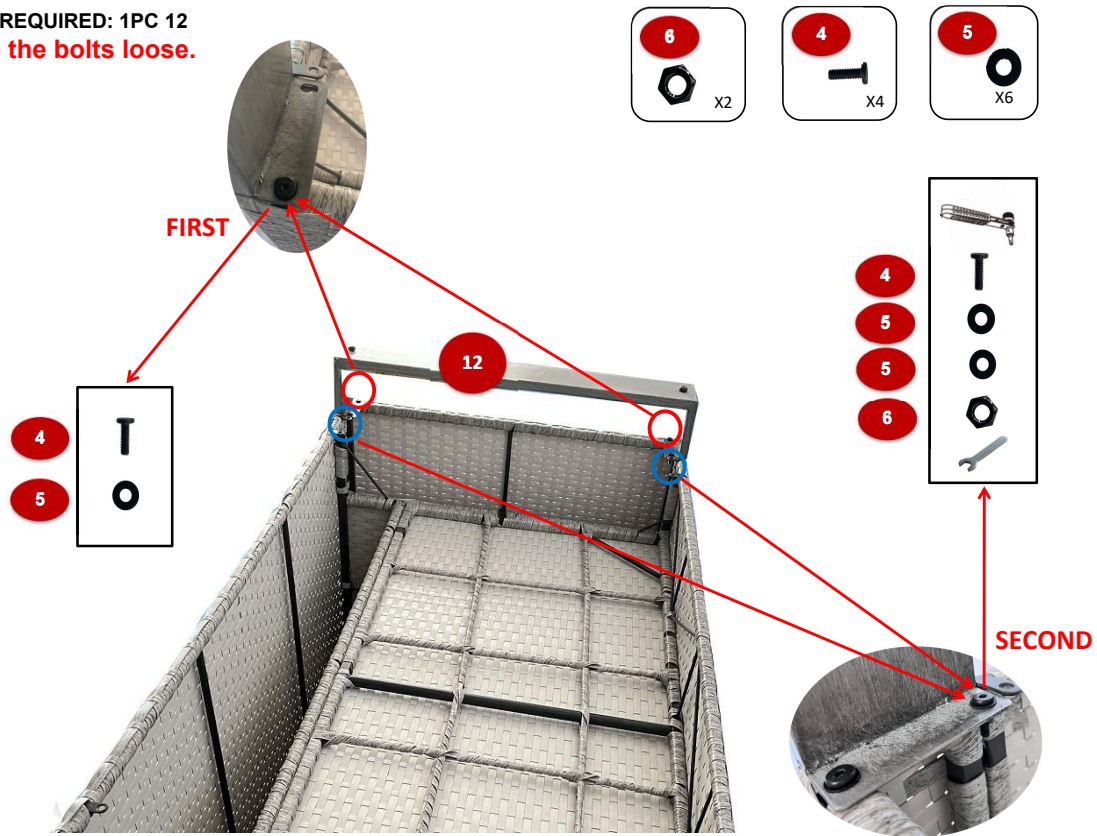


STEP 7

 PART REQUIRED: 13
Keep the bolts loose.


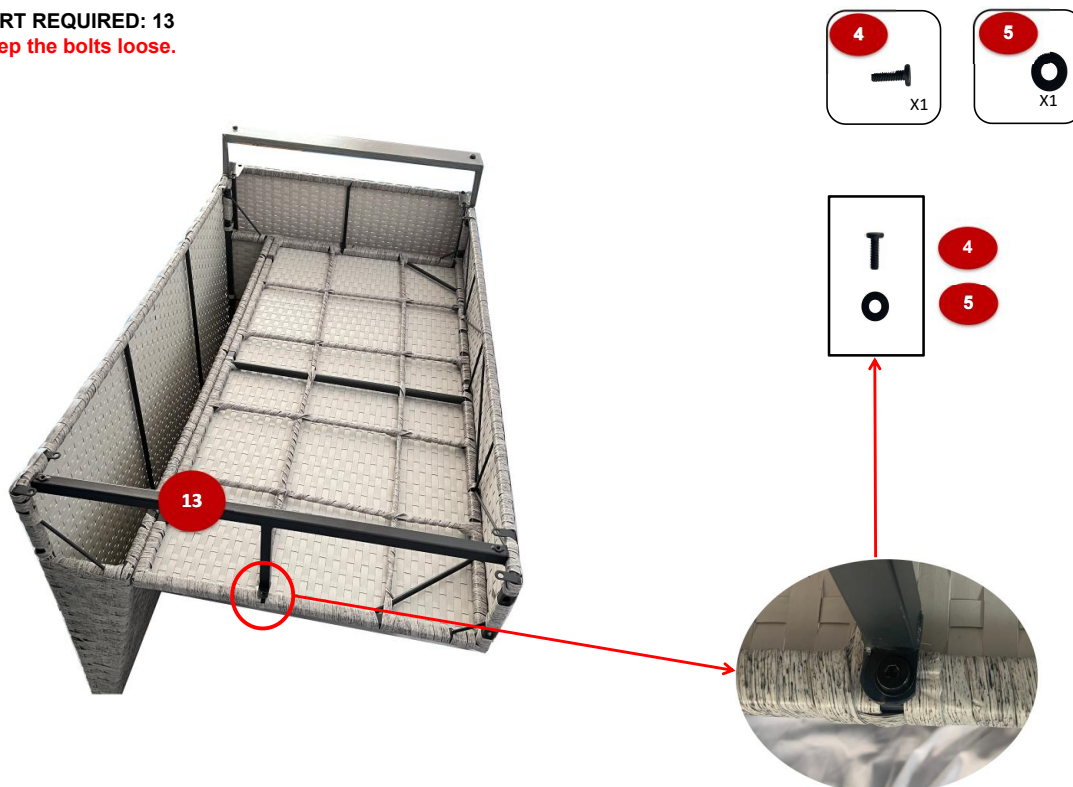


STEP 8

 PART REQUIRED: 1PC 12
Keep the bolts loose.

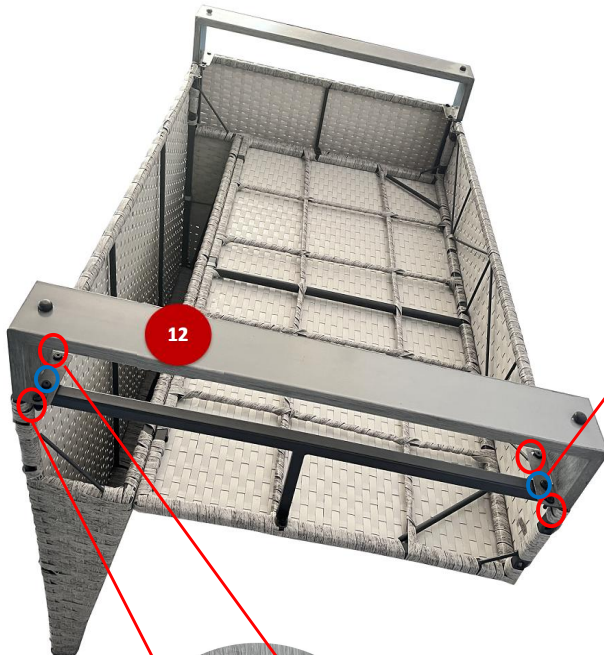


FIRST

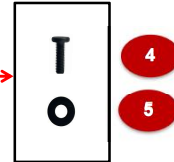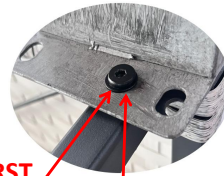  

The position for this hole is not centered completely, should be trend outside a little for assembling.

 SECOND

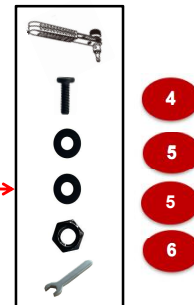

STEP 9

PART REQUIRED: 16 & 17
Make sure the sofa stand on the ground stable, then tighten all the bolts.
Put the cushions on the seat.
















Warranty



One year limited warranty.

Proof of purchase (dated register receipt) is required for warranty claims.

It remains the customer's responsibility for freight and packing charges to and from the service center.

PARTS LIST FOR CHAISE LOUNGE:

| Part No. | Part | Qty | Image | Part No. | Part | Qty | Image |
|----------|---------------------|-----|---|----------|----------------------|-----|---|
| 19 | Lounge Back | 1 |  | 4 | Short Bolt (M6x20mm) | 11 |  |
| 20 | Lounge Seat Panel | 1 |  | 5 | Washer | 23 |  |
| 21 | Left Arm | 1 |  | 6 | Nut | 6 |  |
| 12 | U-shaped Long Leg | 2 |  | 22 | Seat Cushion | 1 |  |
| 2 | U-shaped Short Leg | 1 |  | 23 | Back Cushion | 1 |  |
| 15 | Long Bolt (M6x35mm) | 6 |  | 24 | Bolt (M6x25mm) | 1 |  |
| 18 | Connection Lock | 1 |  | | | | |

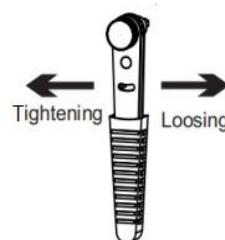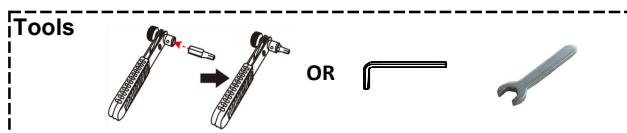  


PRODUCT FRAME MAP





STEP 1

 PART REQUIRED: 19 & 21
Fully tighten the bolt.

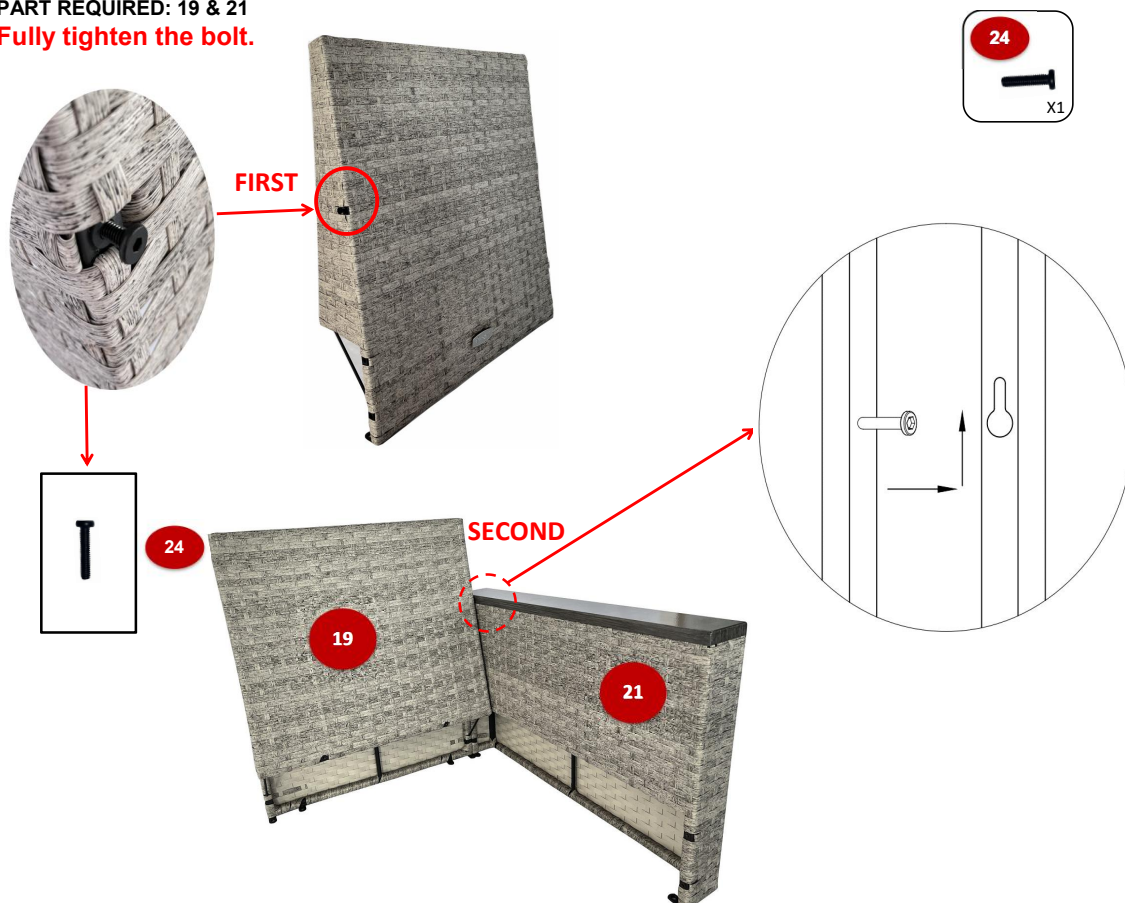



STEP 2

  PART REQUIRED: 19 & 21
Keep the bolts loose.

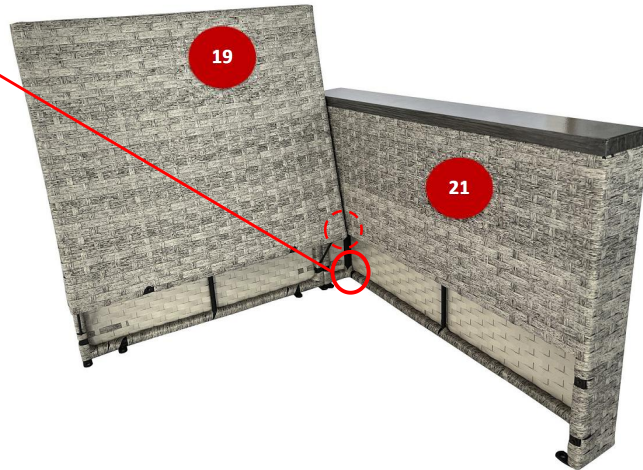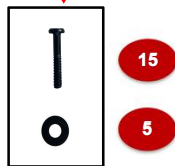


STEP 3

  PART REQUIRED: 20
Keep the bolts loose.

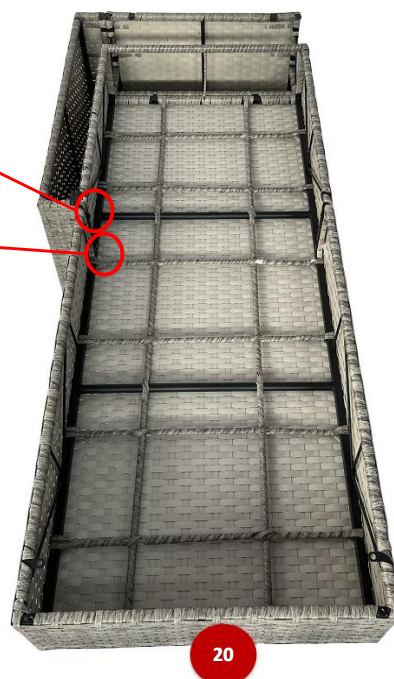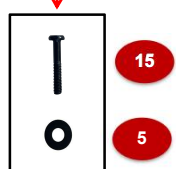


STEP 4

 PART REQUIRED: 19 & 20
Keep the bolts loose.

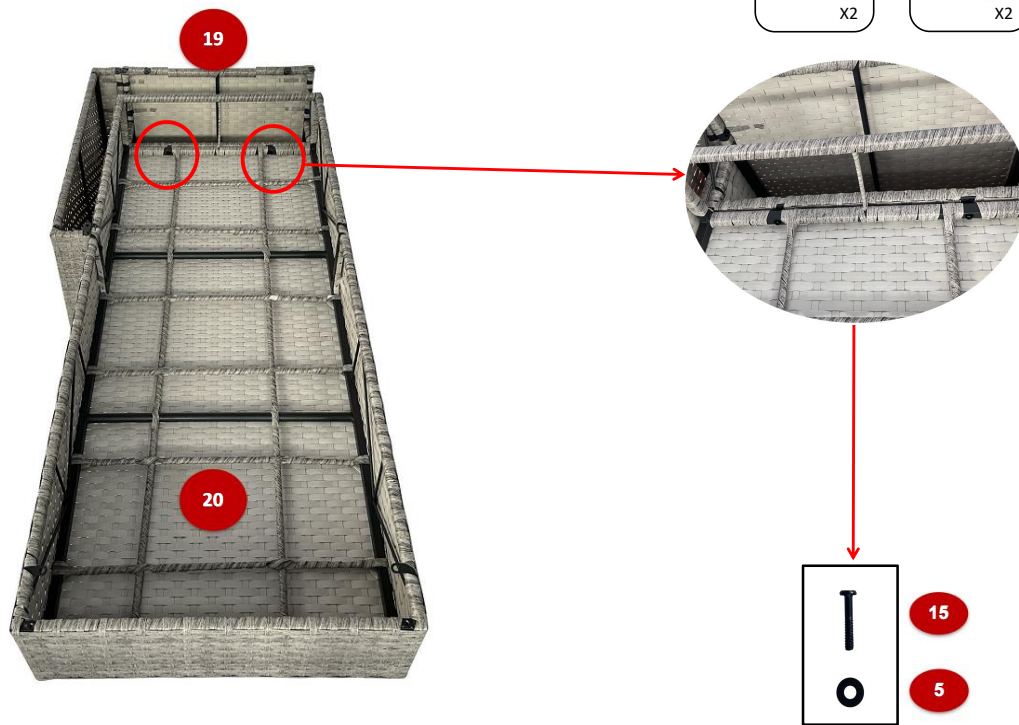


STEP 5

 PART REQUIRED: 2
Keep the bolts loose.

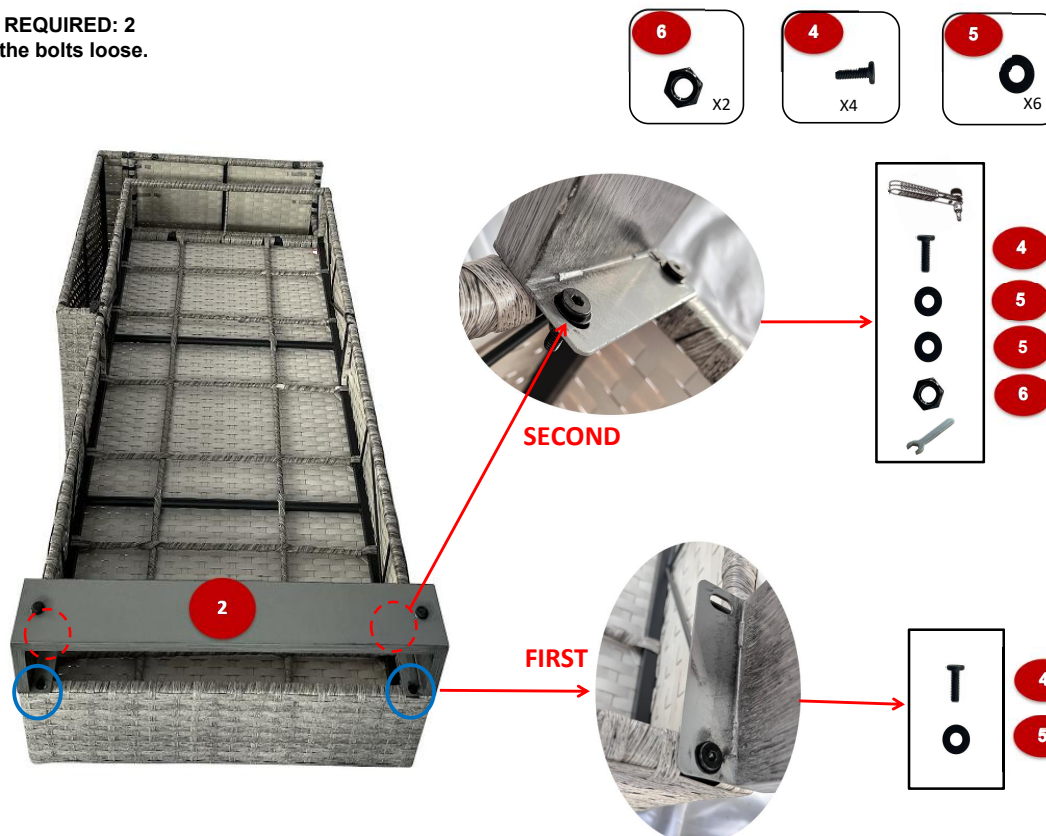


STEP 6

 PART REQUIRED: 1PC 12
Keep the bolts loose.

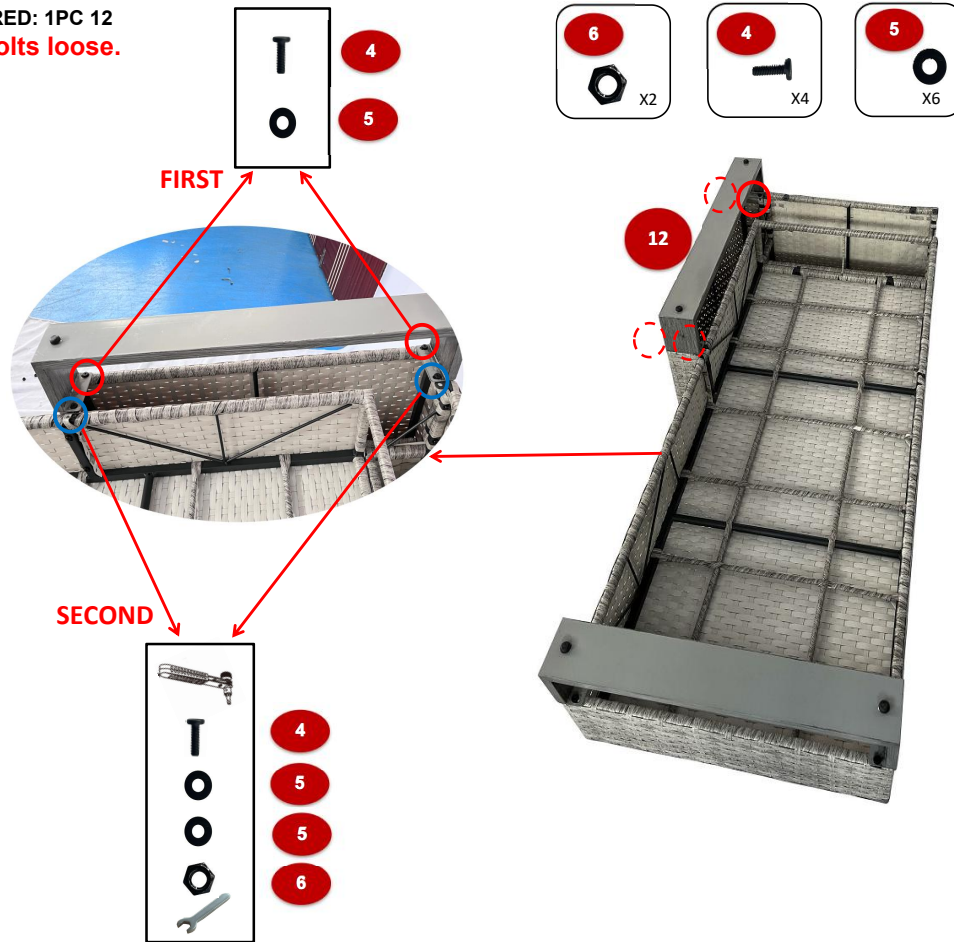

STEP 7

 PART REQUIRED: 1PC 12
Keep the bolts loose.

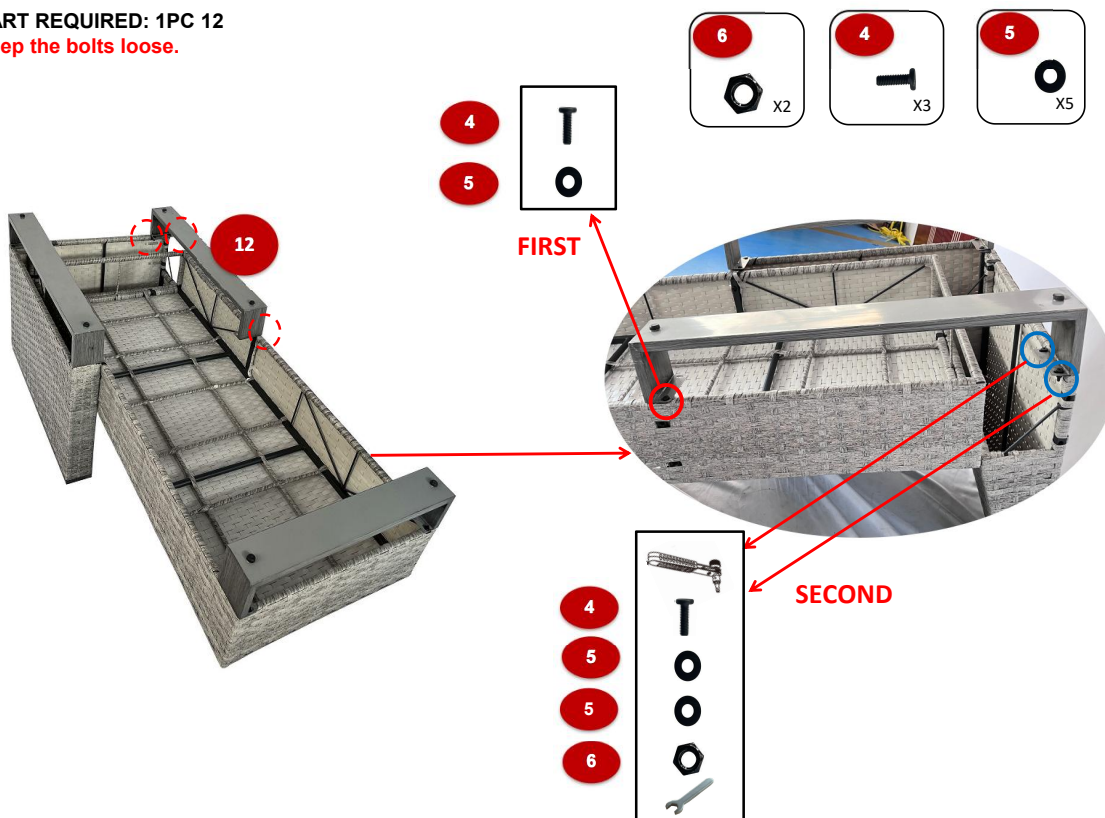

STEP 8

PART REQUIRED: 22 & 23

Make sure the sofa stand on the ground stable, then tighten all the bolts.
Put the cushions on the seat.



Warranty

One-year limited warranty.

Proof of purchase (dated register receipt) is required for warranty claims.

 
It remains the customer's responsibility for freight and packing charges to and from the service center.

REMINDER

REQUIRED: Right Arm Sofa and Chaise Lounge

Another connection lock is included in the hardware pack for right arm sofa.

PLEASE FIX SOFA AND CHAISE LOUNGE TOGETHER WITH PROVIDED

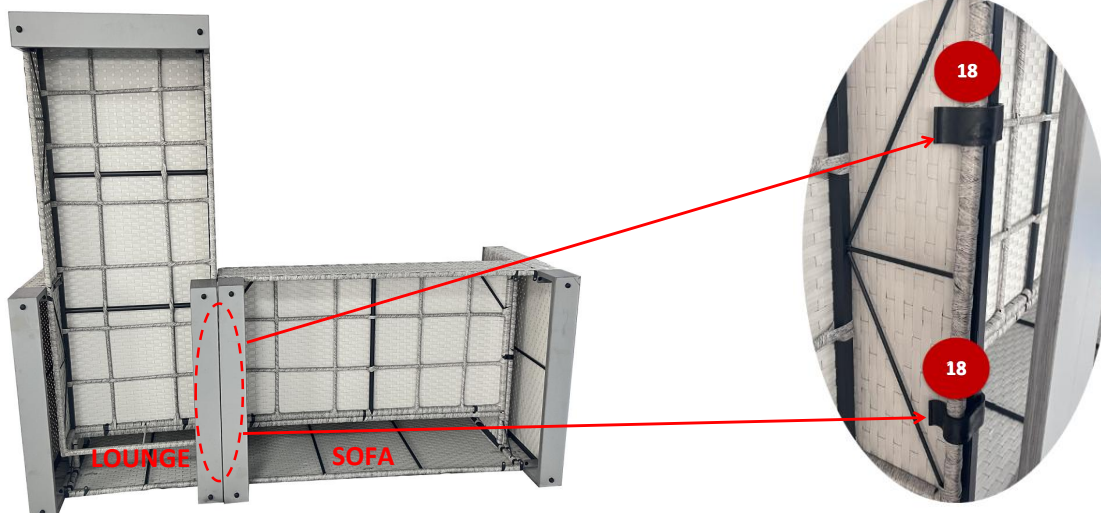

REMINDER

CHICO ALL WEATHER WICKER CHAISE SOFA & OTTOMAN WITH CUSHION - 1 SOFA + 1 CHAISE LOUNGE + 1 OTTOMAN

The instructions are for 1 right arm sofa and 1 left arm lounge, also it's OK to change into 1 left arm sofa and a right arm

The assemble steps are the same, the only difference is the left arm and right arm as below.

