

#### ASSEMBLY INSTRUCTION

ITEM#: GAT17002BL

SKU# 810582920



#### **DANGER**

#### FIRE OR EXPLOSION HAZARD

If you smell gas:

- Shut off gas to appliance.
- · Extinguish any open flame.
- . If odor continues, leave the area immediately.
- After leaving the area, call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.



# WARNING FOR YOUR SAFETY:


Do not store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



# WARNING FOR OUTDOOR USE ONLY.

Installation and service must be performed by a qualified installer, service agency or gas supplier.

- A INSTALLER: Leave this manual with the appliance.
  A CONSUMER: Retain this manual for future reference.
- WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

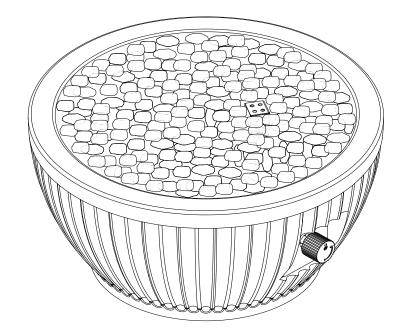

#### **A** DANGER



#### **CARBON MONOXIDE HAZARD**

- This appliance can produce carbon monoxide which has no odor.
- Using it in an enclosed space can kill you.
- Never use this appliance in an enclosed space such as a camper, tent, car or home.

# TABLETOP GAS FIREBOWL

#### GENERAL BEST PRACTICES FOR ASSEMBLY:

Read all instructions before starting

Clear a flat covered space to being

Always best to do it with a friend

Note that hardware required is provided for every step

Pay attention to orientation

Number of the hardware corresponds to its letter in the package

Helpful hints provided along the way

### **WARNINGS:**

DANGER: Failure to follow the dangers, warnings and cautions in this manual may result in serious bodily injury or death, or in a fire or an explosion causing damage to property.

Do NOT use this outdoor fire pit without reading the entire owner's manual.

This appliance is for outdoor use only, and should NOT be used in a building, garage or any other enclosed area.

Do NOT operate, light or use this appliance within ten feet (3.05 m) of walls, structures or buildings.

For residential use only. This outdoor fire pit is NOT for commercial use.

Do NOT use this outdoor fire pit for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.

This outdoor fire pit is safety certified for use in the United States and/or Canada only. Do NOT modify for use in any other location. Modification will result in a safety hazard and will void your warranty.

Apartment dwellers: Check with management to learn the requirements and fire codes for using a liquid propane (LP) gas outdoor fire pit in your apartment complex. If allowed, use outside on the ground floor with a ten foot (3.05 m) clearance from any structure. Do NOT use on or under balconies.

This outdoor fire pit, from the factory, is for use with LP gas only. The conversion to or attempted use of natural gas in this outdoor fire pit is dangerous, may cause bodily harm and will void your warranty.

LP gas characteristics:

- a. LP gas is flammable and hazardous if handled improperly. Become aware of the characteristics before using any LP gas product.
  - b. LP gas is explosive under pressure, heavier than air, and settles/pools in low areas.
  - c. LP gas in its natural state has no odor. For your safety, an odorant is added that smells like rotten cabbage.
  - d. Contact with LP gas can cause freeze burns to skin.

LP gas tank needed to operate. Only tanks marked "propane" may be used.

- a. The LP gas cylinder must be constructed and marked in accordance with the U.S. Department of Transportation (D.O.T.) Specifications for LP-Gas Cylinders, or the Standard for Cylinders, Spheres and Tubes for the Transportation of Dangerous Goods and Commission, CAN/CSA-B339 as applicable.
  - b. LP gas tank must be arranged for vapor withdrawal.
- c. The LP gas tank must have a listed overfilling prevention device (OPD) and a QCCI or Type I (CGA810) LP gas tank connection.
  - d. The LP gas tank must have a tank collar to protect the tank valve.
  - e. Never use an LP gas tank with a damaged body, valve, collar or footing.
  - f. Dented or rusted LP gas tanks may be hazardous and should be checked by your LP gas supplier prior to use.
  - g. The LP gas tank should not be dropped or handled roughly.
- h. Tanks must be stored outdoors, out of the reach of children and must not be stored in a building, garage or any other enclosed area. Your LP gas tank must never be stored where temperatures can reach over 125°F.
- i. Do NOT insert any tool or foreign object into the valve outlet or safety relief valve. You may damage the valve and cause a leak. Leaking propane may result in explosion, fire, severe personal injury or death.
- j. Never keep an LP gas tank in a hot car or trunk. Heat will cause the gas pressure to increase, which may open the relief valve and allow gas to escape.
- k. Place dust cap on cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve outlet that is provided with the cylinder valve. Other types of caps or plugs may result in leakage of propane.
  - 1. Do NOT store a spare LP gas tank under or near this appliance.
  - m. Never fill the cylinder beyond 80 percent full.
  - n. A fire causing serious injury or damage to property may occur if the above is not followed exactly.

Your outdoor fire pit has been checked at all factory connections for leaks. Recheck all connections as described in the "Operating Instructions" section, as shipping can loosen connections.

Check for leaks even if your unit was assembled for you by someone else.

Do NOT operate if a gas leak is present. Gas leaks may cause a fire or explosion.

You must follow all instructions in the "Checking for Leaks" section before operating. To prevent a fire or explosion when testing for a leak:

- a. Always perform a leak test before lighting this outdoor fire pit and each time the tank is connected for use.
- b. No smoking. Do NOT use or permit sources of ignition in the area while conducting a leak test.
- c. Conduct the leak test outdoors in a well-ventilated area.

- d. Do NOT use matches, lighters or a flame to check for leaks.
- e. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance.
- f. Strong odors, colds, sinus congestion, etc. may prevent the detection of propane. Use caution and common sense when testing for leaks.
- g. Do NOT use this outdoor fire pit until any and all leaks are corrected. If you are unable to stop a leak, disconnect the LP gas supply. Call a gas appliance serviceman or your local LP gas supplier.

Do NOT store or use gasoline or other flammable liquids or vapors within 25 feet (7.62 m) of this appliance.

Do NOT use in an explosive atmosphere. Keep outdoor fire pit area clear and free from combustible materials, gasoline and other flammable vapors and liquids.

This outdoor fire pit is NOT to be operated by children.

This outdoor fire pit is NOT to be used in or on boats or recreational vehicles.

Do NOT connect to a remote gas supply.

Never attempt to attach this outdoor fire pit to the self-contained LP gas system of a camper trailer, motor home or house.

Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.

When using this outdoor fire pit, exercise the same precautions you would with any open fire.

Do NOT burn solid fuels such as: wood, charcoal briquettes, lump charcoal, manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, painted/stained/pressure treated wood in this outdoor fire pit.

It is essential to keep the outdoor fire pit's valve compartment, burners, and circulating air passages clean. Inspect outdoor fire pit before each use.

Do NOT use this outdoor fire pit until it is COMPLETELY assembled and all parts are securely fastened and tightened.

Do NOT use this outdoor fire pit near automobiles, trucks, vans or recreational vehicles.

Do NOT use this outdoor fire pit under any overhang or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.

Always use this outdoor fire pit on a hard, level, non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose.

Do NOT use this outdoor fire pit for cooking.

Do NOT use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part or control system and any gas control which has been under water.

Do NOT wear flammable or loose clothing when operating this outdoor fire pit.

Do NOT use in windy conditions.

Never lean over this outdoor fire pit when lighting or when in use.

Do NOT use this outdoor fire pit unless burner is securely in place.

Keep all electrical cords away from this outdoor fire pit during use.

Certain areas of this outdoor fire pit when in use will become too hot to touch. To avoid burns, do not touch hot surfaces until the unit has completely cooled (about 45 minutes), unless you are wearing protective gear (such as insulated pot holders or heat-resistant gloves/mittens).

Do NOT leave a lit outdoor fire pit unattended, especially around children and pets.

Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition.

Young children should be carefully supervised when they are in the area of the appliance.

Do NOT hang or place clothing or other flammable material on or near this appliance.

Any guard or other protective device removed for servicing the appliance must be replaced prior to operating the appliance.

If applicable, protective cover must be removed when burner is in operation.

Do NOT attempt to move outdoor fire pit when in use. Allow the outdoor fire pit to cool before moving or storing.

This outdoor fire pit should be thoroughly cleaned and inspected on a regular basis. Clean and inspect the hose before each use of the appliance. If there is evidence of abrasion, wear, cuts, or leaks, the hose must be replaced prior to the appliance being operated.

This outdoor fire pit should be inspected at least annually by a qualified service person. Depending on amount of use, more frequent cleaning may be required. Do NOT operate until all parts have been repaired or replaced.

Use only the regulator and hose assembly provided. Use only the replacement regulator and hose assembly specified by Mr. Bar-B-Q Products LLC.

Use only Mr. Bar-B-Q Products LLC factory-authorized parts. The use of any part that is not factory-authorized can be dangerous and will void your warranty.

Use only Mr. Bar-B-Q Products LLC factory-authorized lava rock/fire glass. The use of any lava rock/fire glass that is not factory-authorized can be dangerous and will void your warranty.

Do NOT operate this appliance without reading "Operating Instructions" in this manual.

Storage of this outdoor fire pit indoors is permissible only if the tank is disconnected, removed from the outdoor fire pit and properly stored outdoors.

Do NOT attempt to disconnect the gas regulator from the tank or any gas fitting while the outdoor fire pit is in use. The cylinder must be disconnected when the appliance is not in use.

CAUTION: The gas pressure regulator provided with this appliance must be used. This regulator is set for an outlet pressure of 11 inches water column.

The minimum inlet gas supply pressure for the purpose of input adjustment is 277 in.wc (69 kPa).

The maximum inlet gas supply pressure is 6927 in.wc (1724 kPa).

Before pressure testing, close LP gas tank valve and disconnect gas regulator. The gas supply piping system must test at pressures equal to or less than 1/2 psi (3.5 kPa).

Do NOT sit or stand on the mantle or any part of this appliance.

Do NOT throw anything onto the fire when the unit is in operation.

Lava rock/fire glass are very hot. Keep children or pets at a safe distance from this appliance.

When heated, lava rock/fire glass may pop.

The opening of the tank collar should face toward the door side for easy access.


Do NOT store any combustible materials in the base enclosure.

Use protective gloves when assembling this product.

Do NOT force parts together as this can result in personal injury or damage to the product.


Death, serious injury or damage to property may occur if the above is not followed exactly.

# **EXPLODED VIEW**

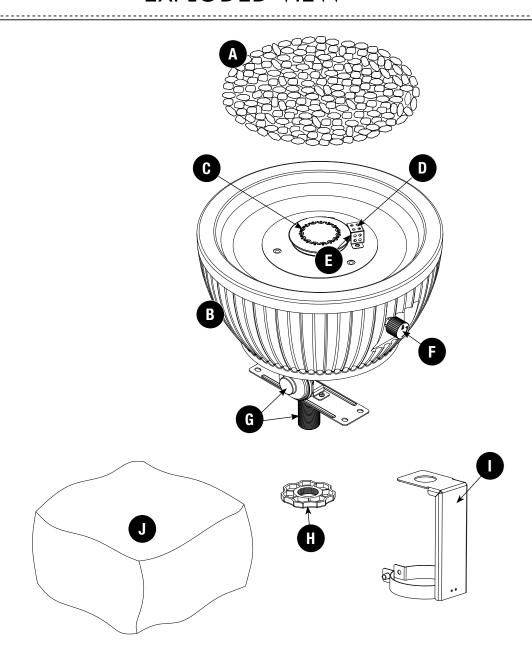


# HARDWARE LIST



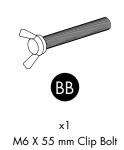

### **PARTS LIST**

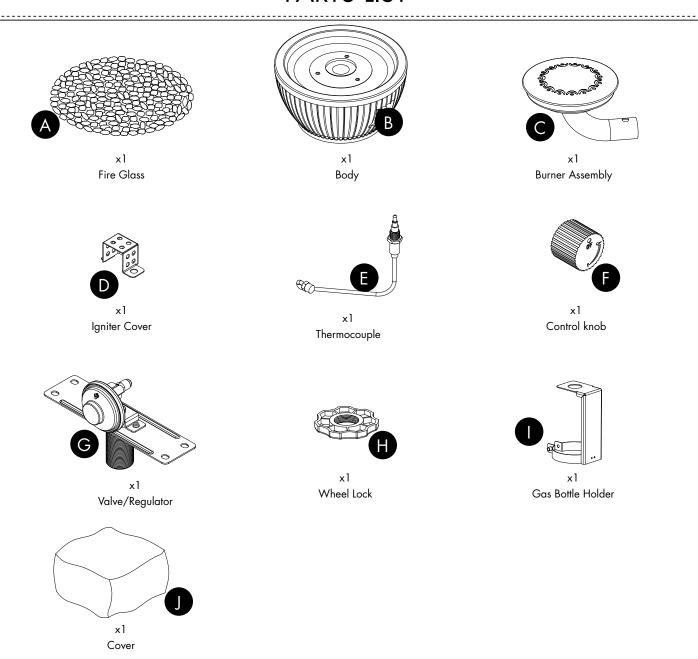

## PREPARATION:

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

#### Estimated Assembly Time: 5 minutes

Tools Required for Assembly (not included): Phillips Screwdriver, Work Gloves.


### PREPARATION:


- \*\*Caution: Use only Mr. Bar-B-Q Products LLC factory-authorized fire glass. The use of any fire glass that is not factory-authorized can be dangerous and will void your warranty.
- \*\*DO NOT RETURN TO PLACE OF PURCHASE.
- \*For assistance, call 1.888.398.8643 toll-free. Please have your owner's manual and model number available for reference.
- \*\*Assembly Tips:
- \*Select an area where you will assemble this product. To protect components, choose a smooth surface that's free of cracks or openings.
- \*Spread out all parts.
- \*Tighten all hardware connections by hand first. Then, before completing each step, go back and fully tighten all hardware. Be careful not to over-tighten. That could damage surfaces or strip threads.
- \*For best results, complete each step in the order presented.

Assemble The Holder

Use 2 M4 X 10 mm Screw (AA) attach the Attach the gas bottle clamp( I ) together with the frame. .



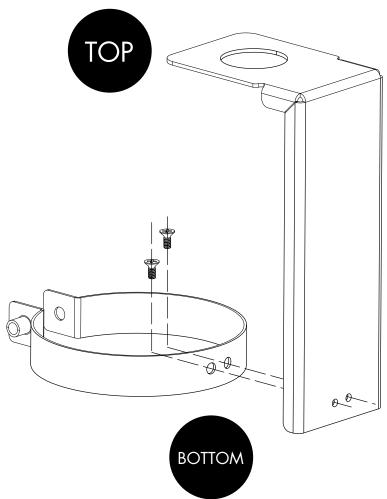


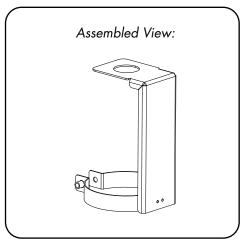


Assemble Holder Onto Regulator/Valve and Table

- 1. Mount the body into standard table umbrella hole;
- 2. Attach and screw the gas bottle holder into valve/regulator, where is to be attached onto table.




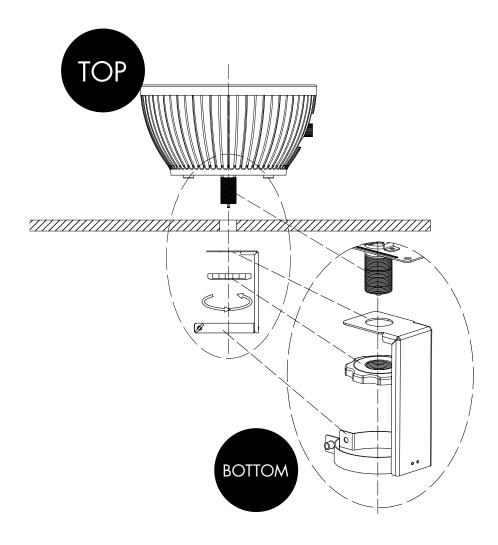

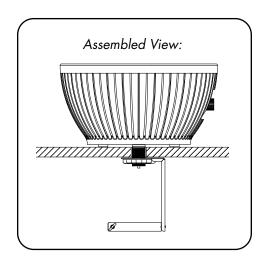

Connect Gas Bottle Into Regulator


- 1. 1. Before connecting, be sure there is no debris caught in the head of the LP gas tank, head of the regulator valve or in the head of the burner or burner ports.;
- 2. Make sure the control knob is in the "OFF" position;.
- 3. Insert and Rotate gas bottle clockwise until they fit snugly together. HAND TIGHTEN ONLY. Be careful not to crossthread when screwing in tank.

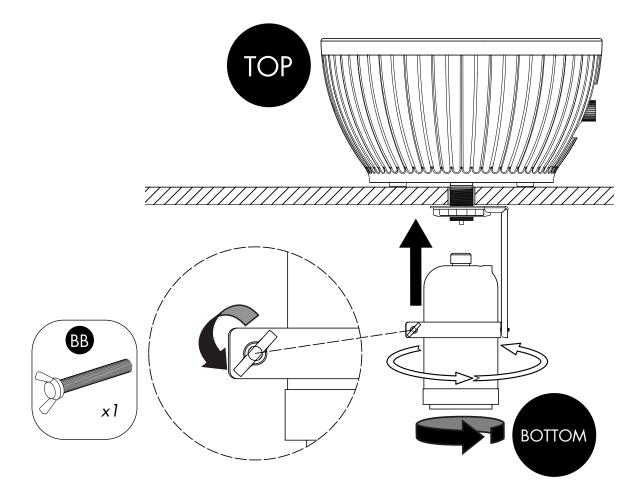

Caution: Only cylinders marked "propane" may be used. Some 1-lb cylinders may form frost when near empty.

To complete assembly you will need:


- (1) 16.4 oz LP gas tank (not included).
- (2) Check for Leaks before operating.

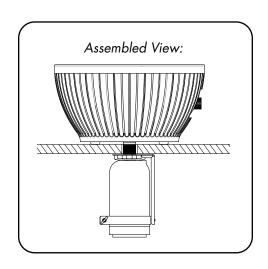


Screw Clip Bolt to Clamp Bottle Tightenly

- 1. Insert the clip bolt into gas bottle clamp;
- 2. Rotate clockwise to screw the clip bolt until the gas tank/gas bottle is Clipped Tightly.



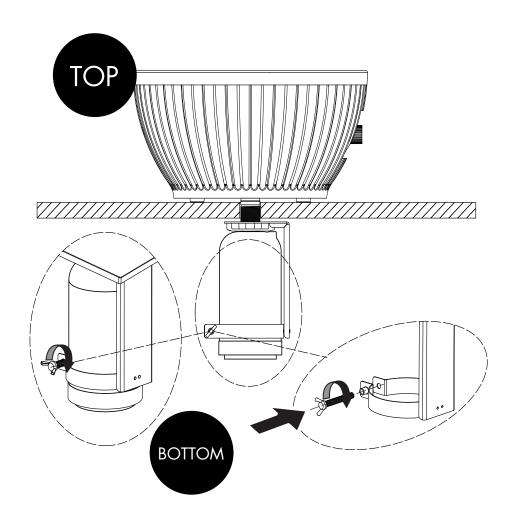

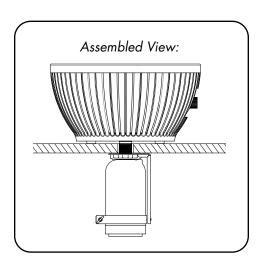


Place Fire Glass Into Burner


CAUTION: Do NOT dump fire glass out of package. Carefully place fire glass by hand so dust does not clog burner.

CAUTION: Use only Mr.Bar-B-Q Products LLC. factory-authorized fire glass. The use of any fire glass that is not factory-authorized can be dangerous and will void your warranty.

Caution: Do NOT cover igniter.

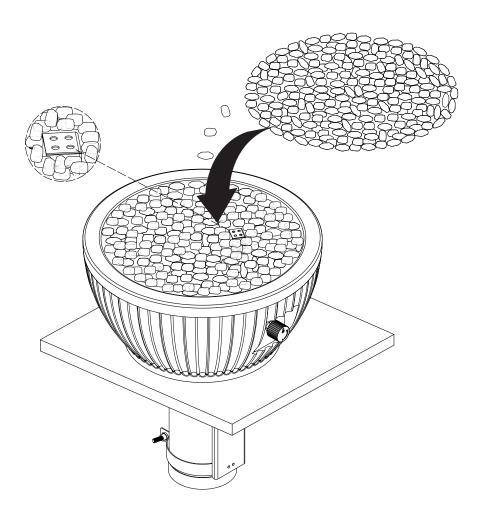


WARNING: To ensure proper function, the igniter cover on this burner shall be free of fire glass at all times.

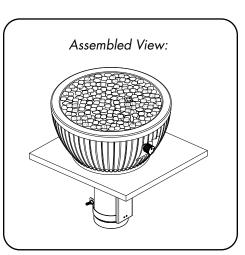


#### Disconnect LP Gas Tank

- 1. Turn the control knob to the "OFF" position.
- 2. Rotate counterclockwise to screw the clip bolt loosely.
- 3. Rotate LP gas tank counterclockwise until it is loose.Remove LP gas tank.
- 4. Place the protective cap cover.
- 5. Store the LP gas tank in a proper location, per LP gas tank instructions.

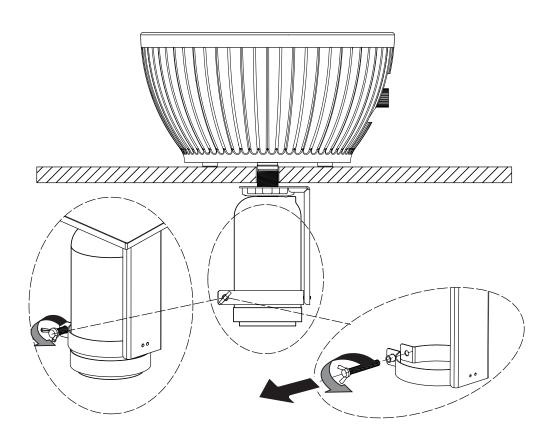


CAUTION: LP gas tank must be properly disconnected and removed prior to moving this fire pit.

Do NOT attempt to disconnect the gas tank or any gas fitting while the outdoor fire pit is in use.

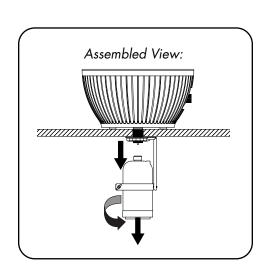

#### Light Burner

- 1. Push and turn the control knob to (HIGH).
- 2. Use a long match to light the burner.
- 3. Turn control knob counterclockwise to adjust flame to desired height.
- 4. Specify a 5-minute complete shutoff period before the appliance is re-lighted.

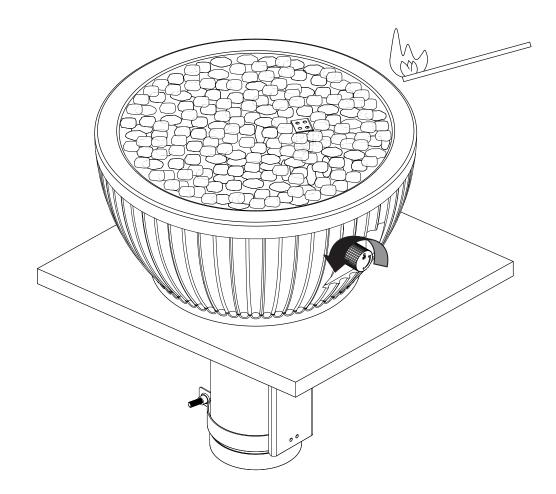


WARNING: Always perform a leak test before lighting this outdoor fire pit and each time the tank is connected for use.

Leak Test: Spoon several drops of solution, or use a squirt bottle to check all gas connections for leaks.

Caution: Do NOT light until any and all leaks are corrected.


Caution: Keep outdoor gas appliance area clear and free from combustible materials, gasoline and other flammable.

Do NOT use in windy conditions. Thermocouple safety feature automatically shall shut off gas flow;

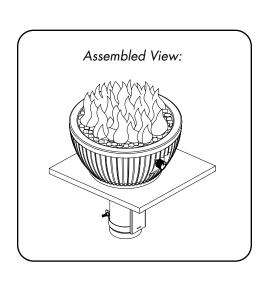


#### Turn Off and Extinguishing

- Turn control knob to the "OFF" position and allow fire to burn itself out.
   Note: A "poof" sound is normal as the last of the LP gas is burned.
- 2. Disconnect LP gas tank per "Disconnecting LP Gas Tank" section.

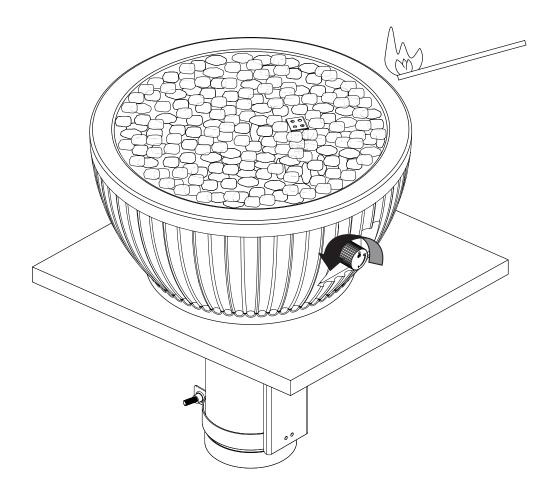

Caution: Do NOT use water to extinguish the fire. This can be dangerous and cause damage.

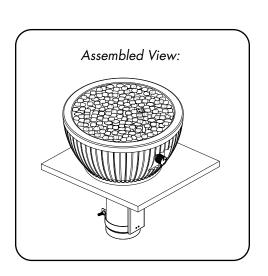

## CARE AND MAINTENANCE:

- 1. All cleaning and maintenance should be done when appliance is cool and with the fuel supply removed.
- 2. This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life.
- 3. Check components for any signs of damage or rust.
- 4. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
- 5. For stubborn stains, use a citrus-based degreaser and a nylon scrubbing brush.
- 6. Rinse clean with water. NEVER use oven cleaner to clean any part of this outdoor fire pit.
- 7. Remove built-up creosote from components with a chimney cleaning product.
- 8. Warning: The burner shall be inspected at intervals as recommended by the manufacturer. The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. The replacement burner shall be that specified by the manufacturer;
- 9. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that has been under water;

Tip: Keeping the outdoor fire pit covered when cooled and not in use will help protect it from the elements.

CAUTION: Do NOT move or store this outdoor fire pit until the fire is COMPLETELY out and the fire pit has cooled.

Helpful hints provided along the way

## **WARRANTY:**

We warrant to the original retail purchaser of this product, and to no other person, that if this product is assembled, maintained, and operated in accordance with the printed instructions accompanying it, then for a period of one (1) year from the date of purchase, all parts in such product shall be free from defects in material and workmanship. We may require reasonable proof of your date of purchase. Therefore, you should retain your sales slip or invoice. This Limited Warranty shall be limited to replacement parts, which prove defective under normal use and service and which we shall determine in its reasonable discretion upon examination to be defective. Before returning any parts, you should contact our customer service department using the contact information listed on the cover of this manual. If we confirm, after examination, a defect covered by this Limited Warranty in any returned part, and if we approve the claim, we will replace such defective part without charge. If you return defective parts, transportation charges must be prepaid by you. We will return replacement parts to the original retail purchaser, freight or postage prepaid.

This Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance or service by you or any third party, or failure to perform normal and routine maintenance on the product as set out in this owner's manual. In addition, the Limited Warranty does not cover damage to the finish, such as scratches, dents, discoloration, rust or other weather damage, after purchase.

This Limited Warranty is in lieu of all other expressed warranties. We disclaim all warranties for products that are purchased from sellers other than authorized retailers or distributors, including the warranty of merchantability or the warranty of fitness for a particular purpose. WE ALSO DISCLAIM ANY AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. WE SHALL HAVE NO LIABILITY TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT,

PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. We further disclaim any implied or express warranty of, and assumes no responsibility for, defects in workmanship caused by third parties.

This Limited Warranty gives the purchaser specific legal rights; a purchaser may have other rights depending upon where he or she lives. Some jurisdictions do not allow the exclusion or limitation of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitations may not apply to everyone.

We do not authorize any person or company to assume for it any other obligation or liability in connection with the sale, installation, use, removal, return, or replacement of its equipment, and no such representations are binding on us. This warranty gives you specific legal rights, and you may also have the other rights that vary from state to state. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply.