



HARVEST RUN ALL WEATHER WICKER SIDE TABLE WITH STORAGE

ASSEMBLY INSTRUCTIONS

ITEM# GB23-544

SKU# 810588110

DO NOT RETURN THIS PRODUCT TO THE STORE. FOR MISSING PARTS OR QUESTIONS TO THIS PRODUCT PLEASE CALL US AT 1-888-733-8169 OR EMAIL US AT customerservice_01@yeah.net, customerservice_02@yeah.net, customerservice_03@yeah.net

IMPORTANT:

Please read all the instructions and warnings before assembling.

Please install all the screws on the product before fully tightened, and note to put the washer to the screw before putting the screw into the screw hole.

WARNING:













● **Use the correct screws as indicated. All screws should be hand tightened until the complete piece is assembled (This will make the assembly process much easier). Once the piece is fully assembled, then go back and tighten all screws with provided tool.**

- Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of the product construction.
- Keep assembly area at least 6 feet from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
- Some parts may contain sharp edges. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the product. Please read all instructions before assembly and use.
- The table is not intended for sitting on and will not function as a stool or step-ladder. Place and use table on flat surface only. Please be sure that all screws are securely tightened before use. Improper use of this product or failure to use as directed may result in injury. Not intended for commercial use.

CARE & MAINTENANCE

- Before using, clean the product completely with a soft dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water, rinse thoroughly and dry completely. Do not use strong detergent or abrasive cleaners. Screws can loosen over a period of usage, please check the screws occasionally and re-tighten if necessary.

PARTS LIST

| NO. | Part | Qty | Image | NO. | Part | Qty | Image |
|-----|-----------------------|-----|---|-----|----------------------|-----|---|
| A | Table Top | 1 |  | F | Washer | 8 |  |
| B | Bottom Board | 1 |  | G | Long Screw (M5x44mm) | 2 |  |
| C1 | Front Board | 1 |  | H | Nut | 2 |  |
| C2 | Back Board | 1 |  | I | Iron Chain | 2 |  |
| D | Side Board | 2 |  | J | Allen Wrench | 1 |  |
| E | Short Screw (M6x15mm) | 8 |  | K | Open End Wrench | 1 |  |

STEP 1

Hook Side Boards (D) by Front Board (C1) and Back Board (C2) shown in Diagram above. Then assemble Side Boards (D) to Front Board (C1) and Back Board (C2) by using 4 Short Screws (E) and 4 Washers (F) with Allen Wrench (J). Do not fully tighten screws now.

STEP 2

Assemble Bottom Board (B) to table frame by using 4 Short Screws (E) and 4 Washers (F) with Allen Wrench (J). Do not fully tighten screws now.

STEP 3




Place the assembled table frame on a flat surface to make sure that it is balanced and stable.
FULLY TIGHTEN ALL SCREWS.

STEP 4



Assemble Table Top (A) to assembled table frame by using 2 Long Screws (G) and 2 Nuts (H) with Allen Wrench (J) and Open End Wrench (K).

STEP 5

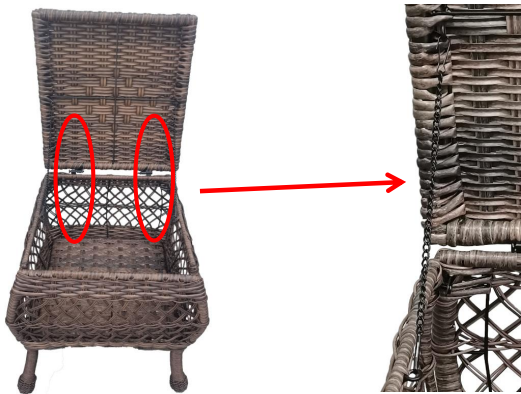

Lock 2 Iron Chains (I) on 2 Side Board (D) and Table Top (A).

STEP 6



Cover Table Top (A) and complete the assembly.