



ASSEMBLY INSTRUCTIONS

ITEM#:D203019501

SKU#:810588674

PENNER CHANDELIER

Need help? We are here for you! 1(866)578.6569 24/7 • Toll Free

Production number: 2023100621

GENERAL BEST PRACTICES FOR ASSEMBLY:

- Please read and understand this entire manual before attempting to assemble or install the product.
- Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.
- Do not place the product on a damp or conductive subsurface.

WARNINGS:

- The manufacturer does not accept any responsibility for injuries or damage resulting from improper use of the product. If in doubt, consult a qualified electrician.
 - Do not mix old and new batteries. Do not mix alkaline, standard (Carbon - Zinc), or rechargeable (Nickel - Cadmium) batteries. If you find any noise, excessive temperature or leakage from a battery, please discard. When not using the unit for a considerable period of time, disconnect the batteries from the unit for storage. If battery power is weak during use, switch off the device and dispose of batteries.
 - Do not dispose of batteries in fire, batteries may explode or leak.
 - This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
 - Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARRANTY:

WHAT IS COVERED?

The limited warranty is extended to the original purchaser and applies to material and manufacturer's defect provided the item is maintained with care and used only for personal, residential purposes.


Warranty: 6 months

MAINTENANCE:




 
- Place 3 AA batteries into the battery case. Batteries not included.
- Maintenance/cleaning of the lights is limited to the surface exterior, using a dry cloth only.
- Steel components for this table are treated with rust inhibiting paint that protects it from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur if these protective coatings are scratched. This is not a defect and thus not covered by the warranty.

Responsible Party - U.S. Contact Information	
Company:	Broyhill, LCC
Address:	P.O. Box 236, Summit Station
Telephone or internet contact information:	1(866)578-6569

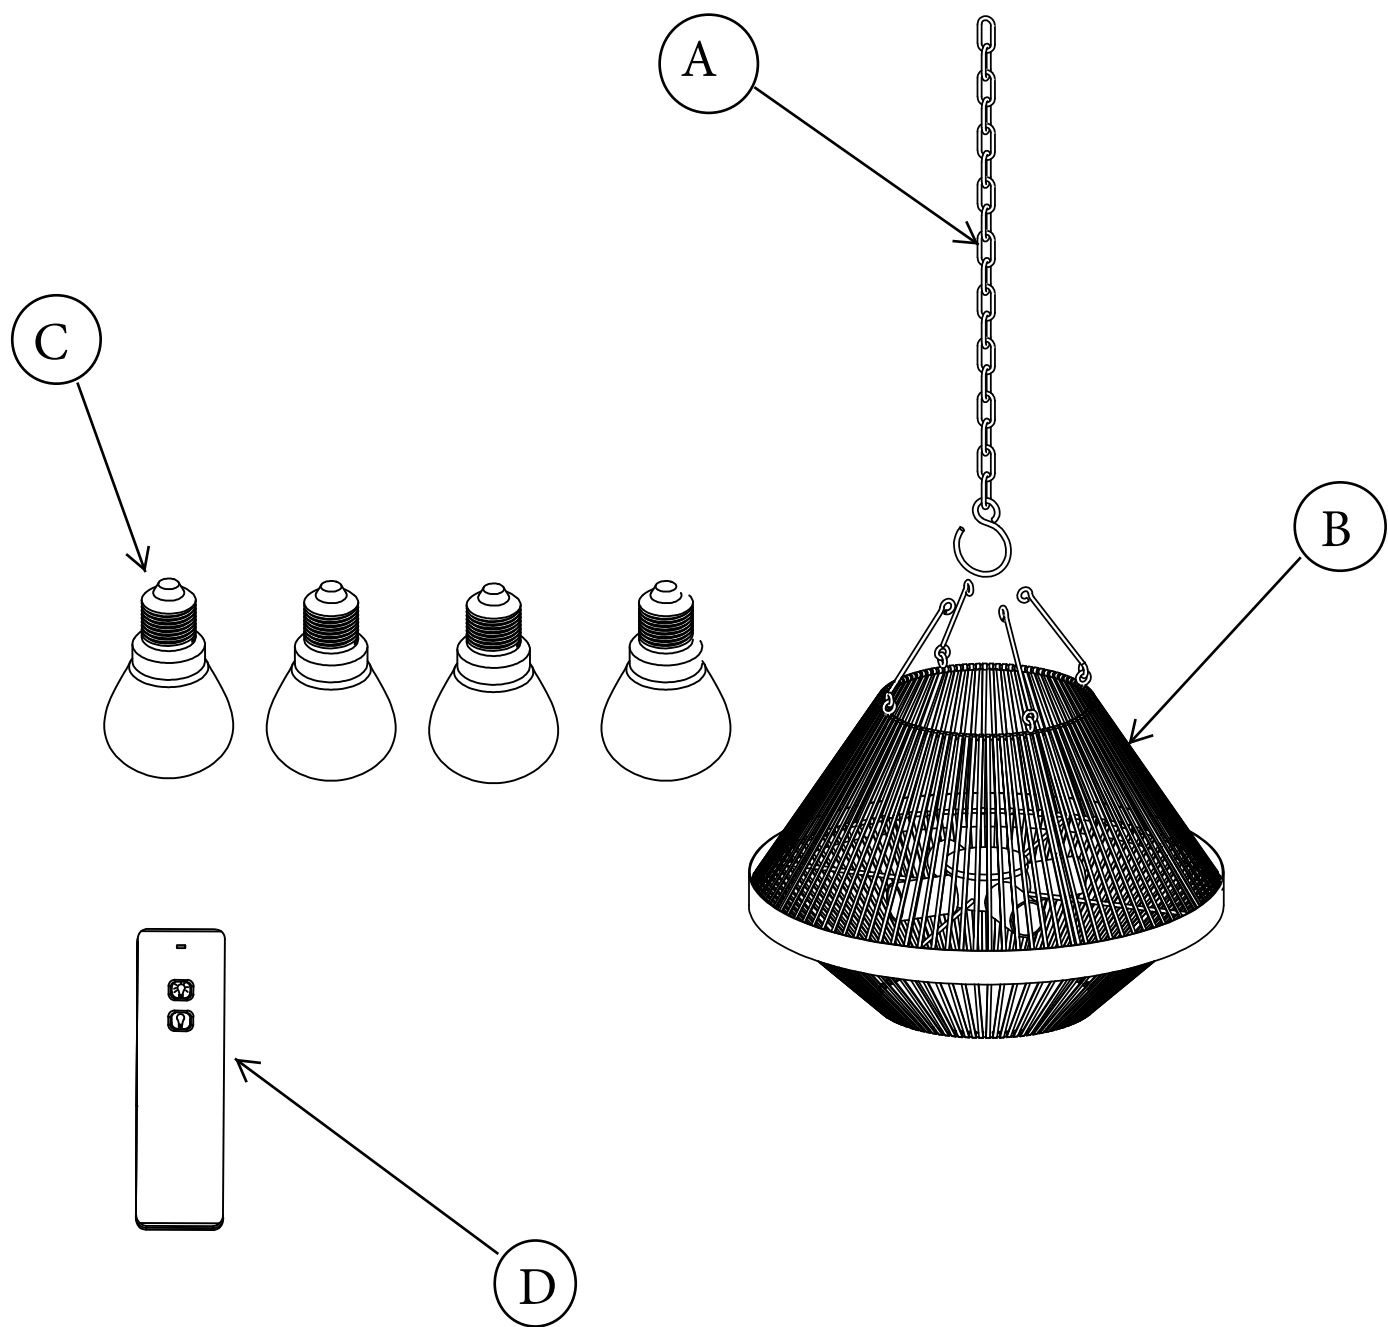EXPLODED DRAWING





PARTS LIST

Label	Part Number	Description	Qty	Part Image
A	P00680000501	Chain	1	
B	P00790018901	Lamp	1	
C	P00600003601	Bulb	4	
D	P00760011101	Remote control	1	


How many people are needed for the installation



STEP 1

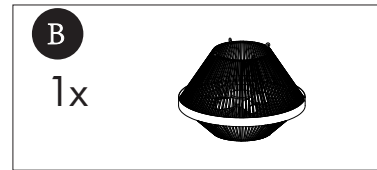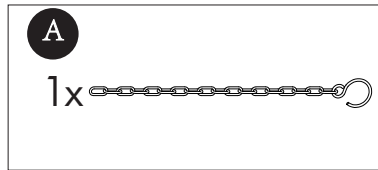





Hook the lamp on the chain in the order of 1,2,3,4.

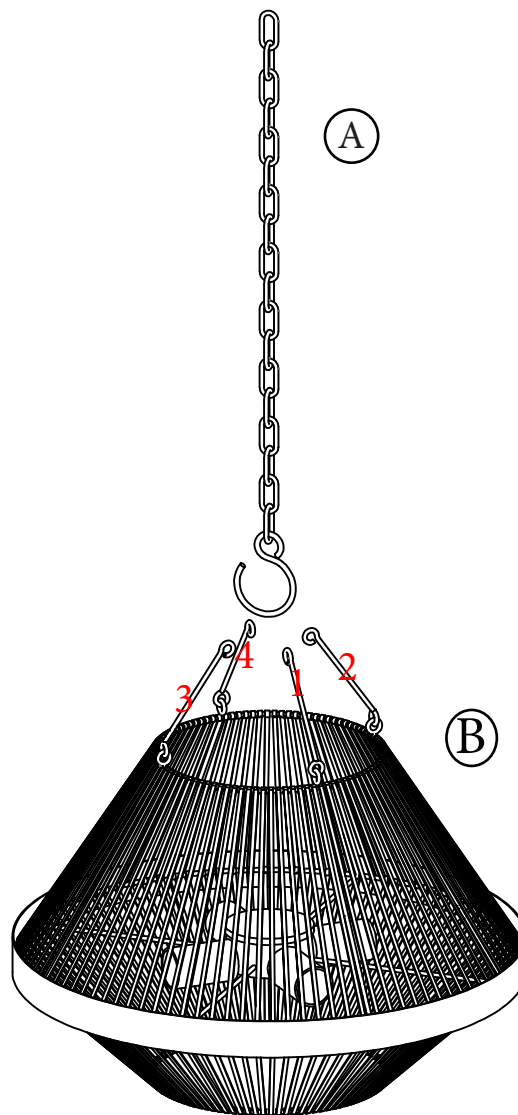

Assembled View:



 STEP 2

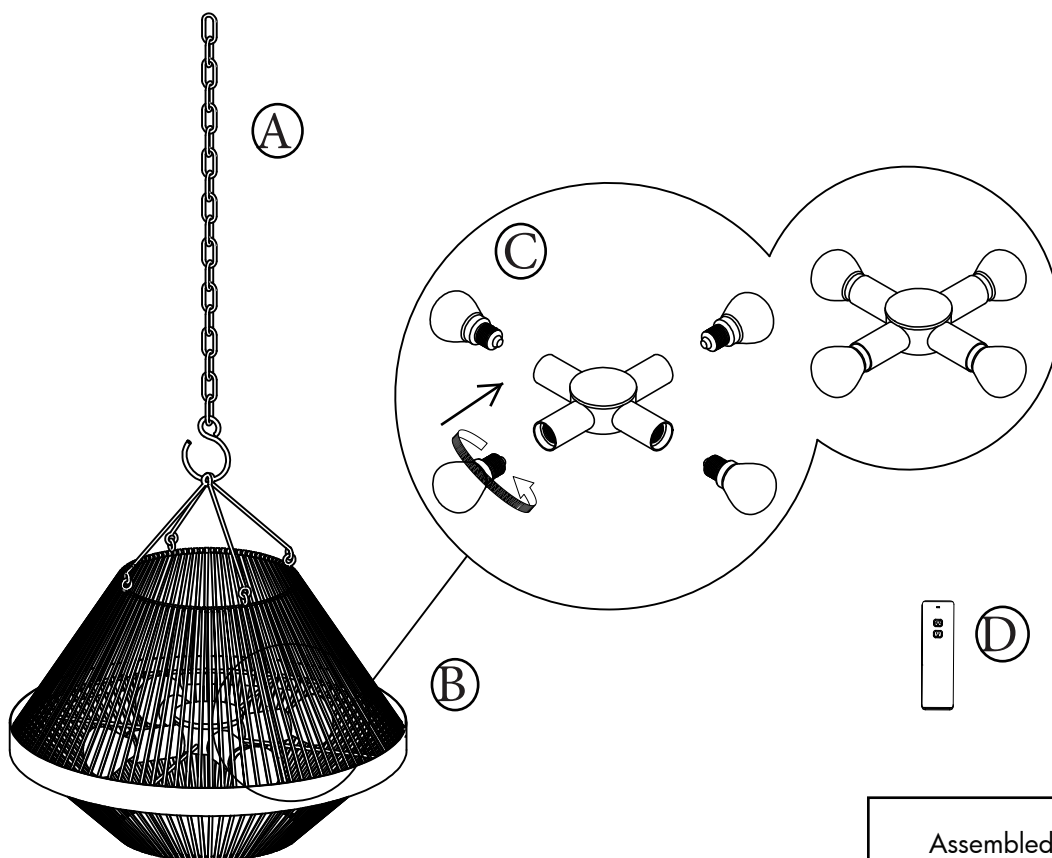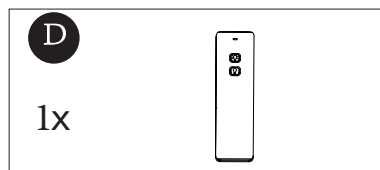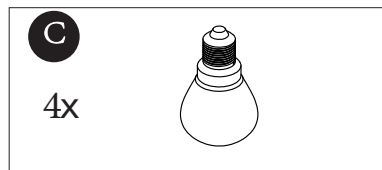

Assembled View:

