

ASSEMBLY INSTRUCTIONS

4' Pre-Lighted Porch Tree

1. Gently remove the product from the box and place it on the ground.
2. Place the product on a level surface.
3. Secure bottom section to the base.(see illustration)
4. Secure top section to the middle section.(see illustration)
5. Insert plug into the wall outlet.(see illustration)
6. After the plugs are plugged into the wall outlet, your entire tree should be lit. If some bulbs do not light, search for any loose plugs broken, loose or missing bulbs that may have caused the problem.



Figure 1

Shaping Required:

1. Shape the tree by gently pressing each layer downwards.Start with the bottom layer.
2. Adjust the tips evenly throughout the tree for a natural look.

Fuse Replacement:

1. Unplug power cord plug when replacing fuses.
2. Slide open the fuse slot in power cord plug.
3. Replace new fuse and slide close the fuse slot.

Storage Tips:

- 1.Working from top to bottom, press all branches tips against the stem.
- 2.Remove each section of tree separately, replace all parts back in carton.
- 3.Pull gently when separating the top and bottom parts to avoid damaging the wire connected in between.
- 4.Store carton away from heat in a cool and dry place.
- 5.Do not store tree in a damp area or in an area where the temperature exceeds 40 °C or 105 °F .

Please save these instructions.

Warning: Keep tree away from flames and extreme heat. This is not a toy.

FOR INDOOR USE

MADE IN CHINA

For Customer Service Please Call: 1-800-833-3390
Distributed By Everstar Merchandise Co., Ltd.
7180 Troy Hill Drive, Suite E., Elkridge, MD. 21075