
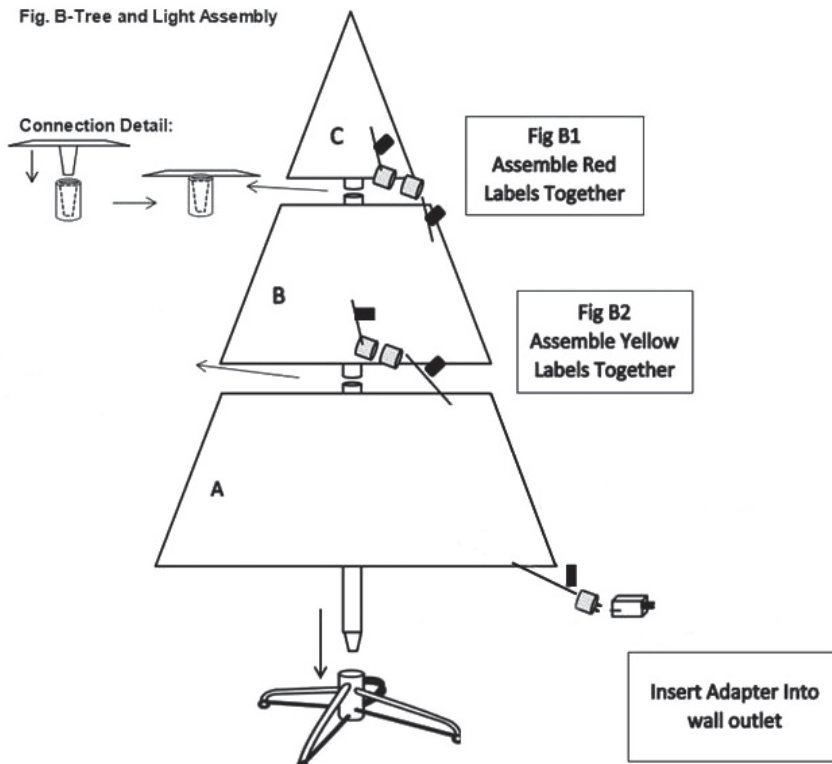


7.5FT (225CM) FLOCKED TREE LED DUAL LIGHTS

Thank you for purchasing this prelit tree. Carefully follow the instructions below on how to quickly and easily set up your new tree.

TREE ASSEMBLY INSTRUCTIONS

1. Before you start to assemble your tree, choose a location near a wall outlet.
2. Assemble the tree stand and place on a level surface. Screw eyes bolt through the holes on the tree stand. (See Fig. A)

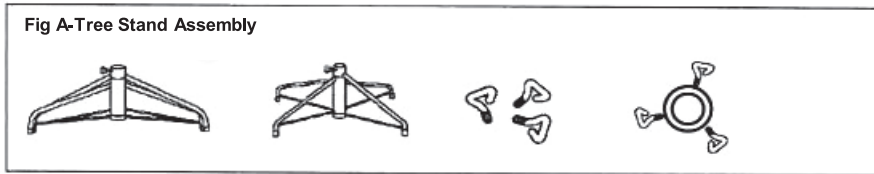

3. Each tree section has a letter tag. Please identify all sections before assembling.
4. Since you have the tree sections laid out in alphabetical order, we will start assembling from the bottom up. Locate the bottom section of the tree. It will have a pointed, tapered pole.
5. Place the bottom section A into the stand and secure by tightening the eyebolts so that the section stands straight. The pointed end of the bottom section should fit firmly in the bottom of the stand. Insert light plug into the adapter.
6. Connect section B to Section A, lights per Fig B2, Next connect section C to Section B. lights per Fig. B1
7. Allow branches to fall into place or gently pull up and out. When adjusting branches be sure that all wires are free of branch hinge.
8. Connect the lights strings as per the color labels indicated in Fig. B and insert the last plug with green label into the adapter, and then insert the adapter into the wall outlet. Your entire tree should now be lit.
9. Begin to shape the branches and tips working from the bottom of the tree to the top. Start with the inner branches closest to the tree trunk. Arrange each branch tip outward from the branch to fill in as much space as possible. Branch tips will need to be spread in all directions for the tree to look full and thick. Slightly bending the very end of the outermost tips gives helps the appearance.
10. After shaping the whole tree, step back and take an overall look. The tree should have a full and even appearance. Additional shaping of some branches may be needed to fill in any gaps and give a uniform look. The lights has 11 functions: Steady warm white/ Twinkle warm white/ Steady multicolor/ Twinkle multicolor/ Steady pastel/ Fading warm white to multicolor/ New random fading function/ Fading warm white/ Fading multi/ Flashing warm white multicolor/ off. you can change the 11 functions on the adapter. Your tree is now ready to decorate and enjoy!

WARNING:

- 1.This tree is intended for INDOOR USE ONLY.
- 2.Adapter must be located INDOORS ONLY.
- 3.The tree/light set can only be connected to the adapter which is enclosed in the box.
- 4.LED bulbs used in this item are non-replaceable.
5. Do not place near gas or electric heaters, radiators, fireplaces, candles, outdoor heaters, barbeques,similar sources of heat.
6. Place on a level, hard, flat surface, do not place where tree is likely to wobble due to uneven surfaces, floors or thick carpeting.
7. After assembling the tree and adding decorations, make sure the tree is stable.If tree is not stable, shift the weight of the decorations, and if used indoors, use support wires to walls and/or window frames(make sure they are secure
8. Do not install near fountains, bathtubs, sinks, pools, hot tubs,or other areas of standing water.
9. Do not use candles on tree.
10. Never operate this product if the power cord or plug is damaged.
11. This is an electrical product-not a toy! To avoid risk of fire, burns ,personal injury an electric shock it. Should not be played with or placed where small children and pets can reach it.

STORAGE:

- 1.Unplug adapter from the wall outlet and remove all ornaments and decorations.
2. Unplug each section.
- 3.Gently lift off the top and middle sections,and remove the bottom section from the tree stand.Carefully place the tree in its box and tape it shut.

TROUBLE SHOOTING INSTRUCTIONS

If the set fails to light, please check the following:

- 1.Disconnect the set from the mains.
- 2.Check the adapter jack plug is secured in place.
3. Please check to make sure that all plugs are properly connected according to the color labels indicated in Fig.B and the adapter is plugged into the wall outlet. Refer to assembly guide for instructions.
- 4.Check whether all bulbs are any missing or broken bulbs.

WARRANTY INFORMATION

- 1.For a period of 1 year from the date of purchase, **The Original Christmas Factory.** will replace defective parts on the product at no charge except for shipping & handling.
- 2.This limited warranty applies to all components of the product.
- 3.This limited warranty does not cover damage resulting from accident, misuse, abuse, negligence, or normal wear.

To Obtain Warranty Service: You must notify **The Original Christmas Factory.**, by mail, of the nature and description of the defect, and enclose a copy of the original sales receipt.

Customer Service Email:biglots.service@kingtree.com

SKU#: 810614466 Mfg No.:8147-H59453-03

2

Made In China