

 
 
7.5FT (225CM) CASH/HARD NEEDLE PENCIL TREE

Thank you for purchasing this prelit tree. Carefully follow the instructions below on how to quickly and easily set up your new tree.

TREE ASSEMBLY INSTRUCTIONS

WARNING- Risk of personal injury and electric shock: Watch for any bulbs that may have broken during shipment and replace following the bulb replacement instructions before plugging in.

1. Before you start to assemble your tree, choose a location near a wall outlet.
2. Assemble the tree stand and place on a level surface. Screw eyebolts through the holes on the tree stand. (See Fig. A)

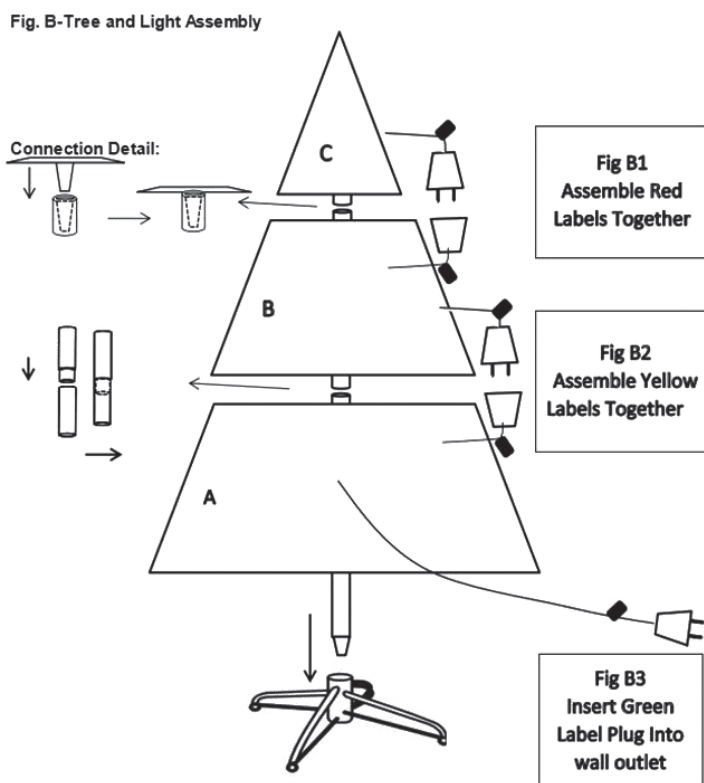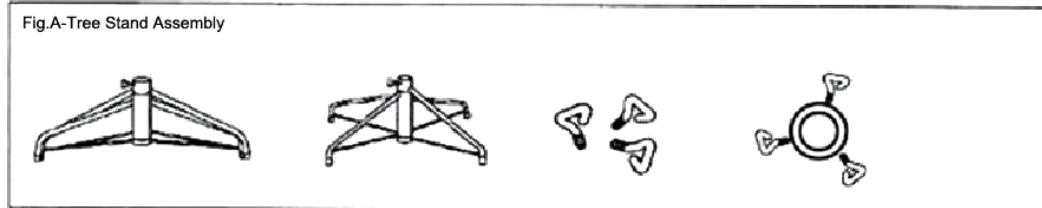

3. Each tree section has a letter tag. Please identify all sections before assembling.
4. Since you have the tree sections laid out in alphabetical order, we will start assembling from the bottom up. Locate the bottom section of the tree. It will have a pointed, tapered pole.
5. Place the bottom section (A) into the stand and secure by tightening the eyebolts so that the section stands straight. The pointed end of the bottom section should fit firmly in the bottom of the stand.
6. Connect Tree section B to section A. lights per Fig B2, Next Connect Section C to section B. lights per Fig B1.

7. Shape the tree by arranging the branches into the desired position. Finished look should be natural looking and full. BEGIN WITH BRANCHES AT THE BOTTOM OF THE TREE AND WORK TOWARDS THE TOP.

8. Connect the lights strings as per the color labels indicated in Fig. B and insert green label plug (Fig B3) into the wall outlet. Your entire tree should now be lit. If some bulbs do not light or flicker, search for any loose plugs and/or broken, loose or missing bulbs. Replace bulbs promptly in order to maintain the performance and life expectancy of your pre-lit tree.

9. Begin to shape the branches and tips working from the bottom of the tree to the top. Start with the inner branches closest to the tree trunk. Arrange each branch tip outward from the branch to fill in as much space as possible. Branch tips will need to be spread in all directions for the tree to look full and thick. Slightly bending the very end of the outermost tips gives helps the appearance.

10. After shaping the whole tree, step back and take an overall look. The tree should have a full and even appearance. Additional shaping of some branches may be needed to fill in any gaps and give a uniform look. Your tree is now ready to decorate and enjoy!

CAUTION:IMPROTANT SAFETY INSTRUCTIONS

1. This tree is intended for INDOOR USE ONLY. Do not use this product for other than its intended use.

2. Do not connect extra light sets, tree tops or any other electrical items to the existing light sets on your pre-lit tree.

3. This seasonal product is not intended for permanent installation or use.

4. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.

5. Unplug power supply cord when replacing bulbs and fuses when leaving the house, when retiring for the night or if left unattended.

6. Never change fuse with the power supply cord plug in wall outlet.

7. Do not place near gas or electric heaters, radiators, fireplaces, candles, outdoor heaters, barbeques, similar sources of heat.

8. Place on a level, hard, flat surface, do not place where tree is likely to wobble due to uneven surfaces, floors or thick carpeting.

9. After assembling the tree and adding decorations, make sure the tree is stable. If tree is not stable, shift the weight of the decorations, and if used indoors, use support wires to walls and/or window frames (make sure they are secure also).

10. Do not install near fountains, bathtubs, sinks, pools, hot tubs, or other areas of standing water.

11. Do not use candles on tree.

12. Never operate this product if the power cord or plug is damaged.

13. Do not overload extension cords or power strips, see rating on those devices and check the rating label of the product for compatibility.

14. Use only manufacturer specified replacement bulbs.

15. This product employs an overload protection (fuse) in the plug of each light set. A blown fuse indicates an overload or short circuit situation. If the fuse blows, unplug the product from the power supply. Replace the fuse as per the replacement instructions indicated in this manual (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded.

16. This is an electrical product-not a toy! To avoid risk of fire, burns, personal injury an electric shock it Should not be played with or placed where small children and pets can reach it.

STORAGE:


1. Unplug lights cord from the wall outlet and remove all ornaments and decorations.
2. Unplug each section.
3. Gently lift off the top and middle sections, and remove the bottom section from the tree stand. Carefully place the tree in its box and tape it shut.

DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100° F.


TROUBLE SHOOTING INSTRUCTIONS

If Lights Do Not Work:

1. Please check to make sure that all plugs are properly connected according to the color labels indicated in **Fig.B** and the power cord is plugged into the wall outlet. Refer to assembly guide for instructions.
2. Check whether all bulbs are tightly inserted into lamp holders and replace any missing or broken bulbs.
3. If a bulb is blown, replace the faulty bulb following the below diagram. There are spare bulbs included for easy replacement.

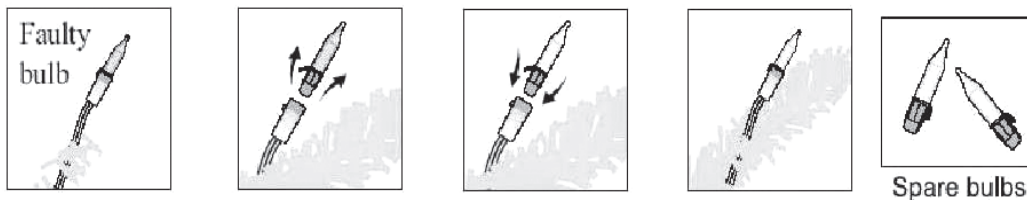

4. If none of the lights are working, check the fuse in light string plug. If the fuse is blown, replace the blown fuse following the below diagram. There is a spare fuse included for easy replacement.

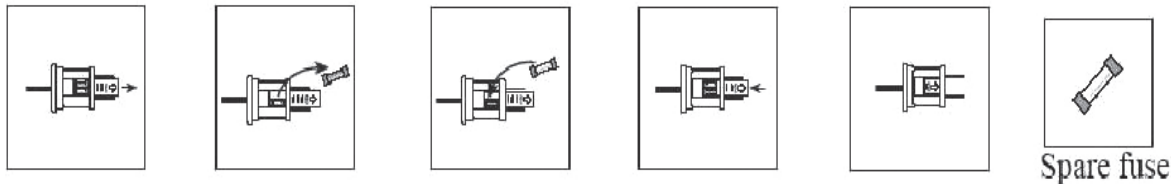

WARNING- Only use the included spare bulbs that are rated 2.5V,0.42 Watts .

WARRANTY INFORMATION

1. For a period of 1 year from the date of purchase, **The Original Christmas Factory.** will replace defective parts on the product at no charge except for shipping & handling.
2. This limited warranty applies to all components of the product.
3. This limited warranty does not cover damage resulting from accident, misuse, abuse, negligence, or normal wear.

To Obtain Warranty Service: You must notify **The Original Christmas Factory.**, by mail, of the nature and description of the defect, and enclose a copy of the original sales receipt.

Customer Service Email: biglots.service@kingtree.com