

# 7.5FT DUAL LIGHT LED TREE

## CARTON CONTENTS

Part	Description	Quantity
A	Top Section of Tree	1
B	Middle Section of Tree	1
C	Bottom Section of Tree	1
D	Tree Stand	1
E	Eye Bolts for Stand	3
F	29V, 207mA Transformer	1

**Plug in Transformer for use with LED tree lights:**

**Seasonal use LED Driver**

**Model: RKPO-UL2900207IP44-1**

**cULus LISTED: E520869**

**INPUT: 120V 60Hz, 0.30A**


**OUTPUT: 29V 207mA, 6W**

**Provides stable and reliable short circuit protection**

**Waterproof**

**Use foot Pedal to cycle between functions  
(there are 10 different functions on the lights):**

1. Warm white continuous on
2. Multi-color continuous on
3. Warm white fading
4. Multi-color fading
5. Warm white gradual change multi color
6. Warm white flashing
7. Multi-color flashing
8. Alternating white / color flashing (slow)
9. Alternating white / color flashing (fast)
10. Off

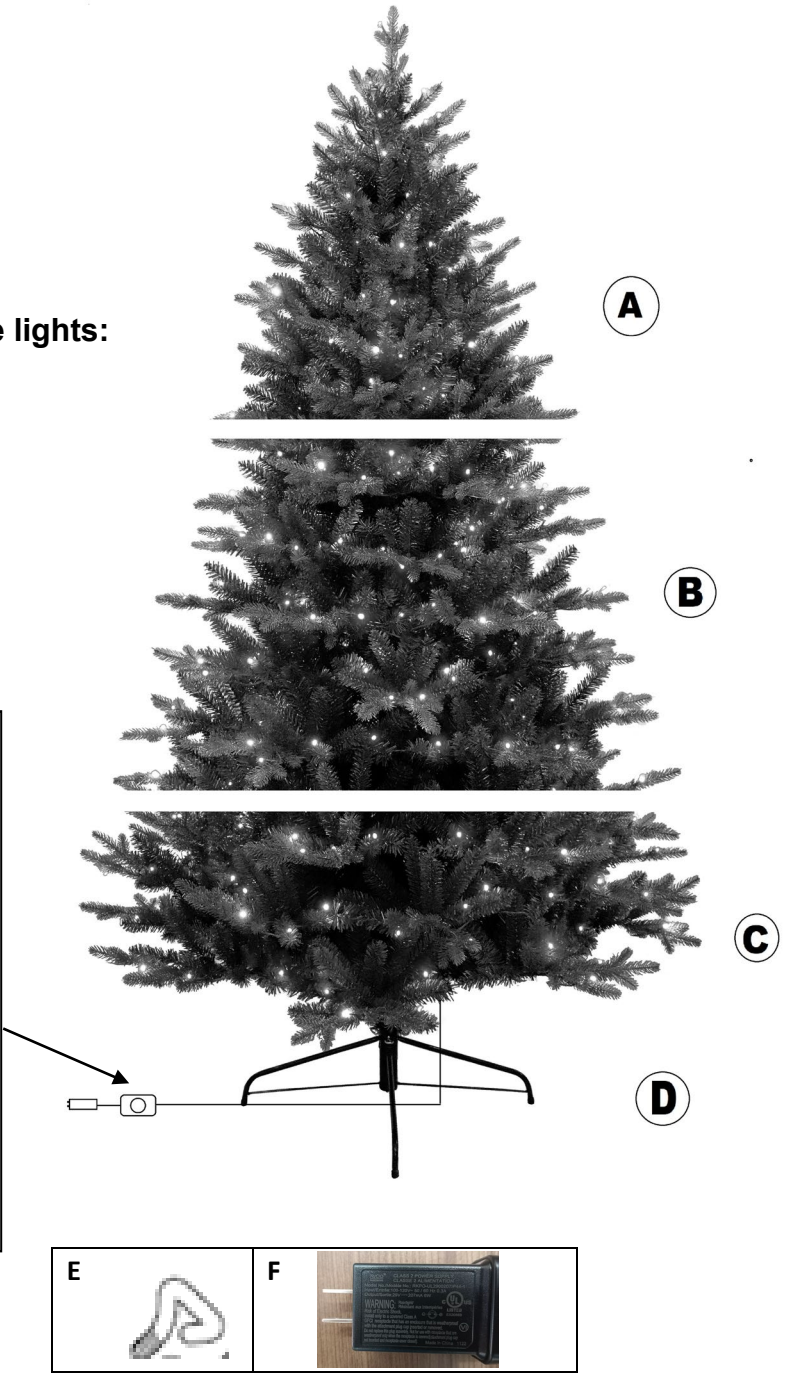

## Customer Service

Before assembling the tree, please ensure all contents listed above are included. For assembly assistance or if any parts are missing or damaged and need replacement, please contact our customer service department. Do not discard tree box as it can be used for storage.

**Phone: 1-800-311-3324**

**Customer Service Hours: Monday-Friday, 9:30 - 3:30pm EST**

**SAVE THESE INSTRUCTIONS**

**SKU#810614471**

**Item#:360-3512-T75LDF350**

## **Warning! Important Safety Instructions**

### **Risk of Fire and Electrical Shock:**

## **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**

**When using electrical products, basic precautions should always be followed including the following:**

The product is for **INDOOR USE ONLY**.

- Do not connect the chain to the power supply while the product is in the packaging.
- Do not remove or insert lamps while the chain is connected to the power supply.
- Do not mount or place the product near gas or electric heaters, fireplaces, candles or other similar heat sources.
- Do not cover the product with cloth, paper or any other material not part of the product when in use.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- The external flexible cord cannot be replaced. If the cord is damaged:

### **DO NOT USE THIS LIGHT CHAIN. THROW LIGHT CHAIN AWAY!**

- Do not use this product for any other purpose than its intended use.
- Do not secure the wiring with sharp hooks or nails. This can cut or damage the wire insulation.
- Do not connect the light set to any other light set by cutting or joining the sets together.
- Do not let lamps rest on the supply cord or any other wire.
- Do not hang ornaments or other objects from the cord, wire or light strings.
- Not intended for permanent installation or use.
- To reduce risk of fire, do not deliberately reposition either lamp holder contact.
- This is an electrical product, not a toy. To avoid the risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.

**Read and follow all instructions that are on the product or provided with the product.**

## **ASSEMBLY INSTRUCTIONS**

1. Open the tree stand / Part D as shown (Figure 1), insert the eye bolt into the tab on the stand.
2. The tree will be heavy and difficult to move after final assembly. Assemble tree on a level, hard, flat surface area that is free of obstruction. Insert tree Part C into the tree stand / Part D as shown (Figure 2), screw the eye bolts tightly to the trunk (Figure 3) and make sure the trunk be secured with the stand.

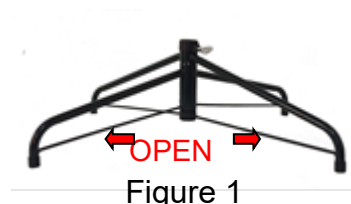 


Figure 1



Figure 2



Figure 3

**SAVE THESE INSTRUCTIONS**

**SKU#810614471**

**Item#:360-3512-T75LDF350**

3. Insert tree Part B into Part C as shown (Figure 4). Find the light plug on Part B and connect it to the plug on Part C of the tree (Figure 5). String light plugs can be nested together.

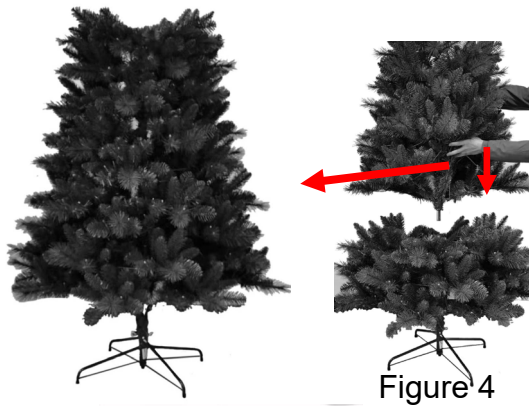


Figure 5

4. Insert the top section of the tree / Part A into Part B (Figure 6). Attach the light plug from Part A to the plug on Part B of the tree (Figure 7). String light plugs can be nested together. Loose plug in Section "A" can be used for Tree Topper / Star.

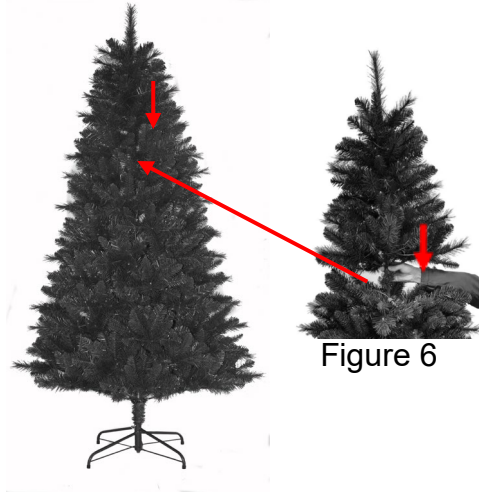


Figure 7

## **SHAPING INSTRUCTIONS**

Begin to shape the tree by working from the bottom to the top. Start at the lowest layer of branches in Part C and gently pull down in an even circular pattern. The tips at the end of each branch should be turned up a bit up and the other tips should be shaped in even layers. Attach Part B to Part C and shape the same as Part C. Attach Part A and shape with branch tips curving slightly upwards to the treetop.

## **USE AND CARE INSTRUCTIONS**

Before assembling, inspect the tree carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lamp holders, loose connections, or exposed copper wire.

Before storing the tree, carefully disassemble to avoid any undue strain or stress on the string light conductors, connections, and wires.

When not in use, store neatly in a cool, dry location protected from sunlight.

## **TROUBLESHOOTING**

If your tree does not light up, please check the following.

1. Check that all plugs are properly connected.
2. Check wall outlet for power.
3. Check for loose, missing, or broken bulbs.

**If none of the above steps corrects your problem, please contact Customer Service at 1-800-311-3324.**

## **STORAGE**

Unplug extension cord from the wall outlet and remove all ornaments and decorations. Keep string lights attached to tree and unplug Parts A, B and C. Gently lift off the top and middle sections of the tree and remove the bottom section of the tree from the tree stand. Carefully place the tree in its box and tape it shut. Store the box at a cool, dry place.

## **SAVE THESE INSTRUCTIONS**

**SKU#810614471**

**Item#:360-3512-T75LDF350**