

ASSEMBLY INSTRUCTION

ITEM# EXB-112018

SKU# 810614473

7.5FT COLOR CHANGING LED LIGHTS QUICK SET TREE

GENERAL BEST PRACTICES FOR ASSEMBLY

Please carefully follow the instructions below on how to quickly and easily set up your new tree. Retain packaging and assembly instructions for storage and further references.

1. Before you start to assembly your tree, choose an appropriate level and flat location near a wall outlet.
2. Remove contents from the carton and inspect the tree carefully to ensure there are no damaged or frayed wire insulation or cords, exposed copper wire.
3. Assemble the tree stand and place on a level surface. (See **Fig.A**). Unfold the legs and lay the stand in a flat area. When inserting the bottom section of the tree into the assembled stand, thread the wing bolt into the stand and tighten until the pole is firmly secured. The wing bolt is packed in a plastic bag attached to the leg of the tree stand.

Fig.A-Tree Stand Assembly

 
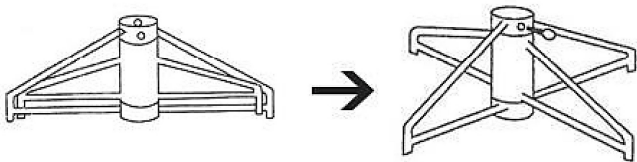 


Fig.B-Tree And Light Assembly

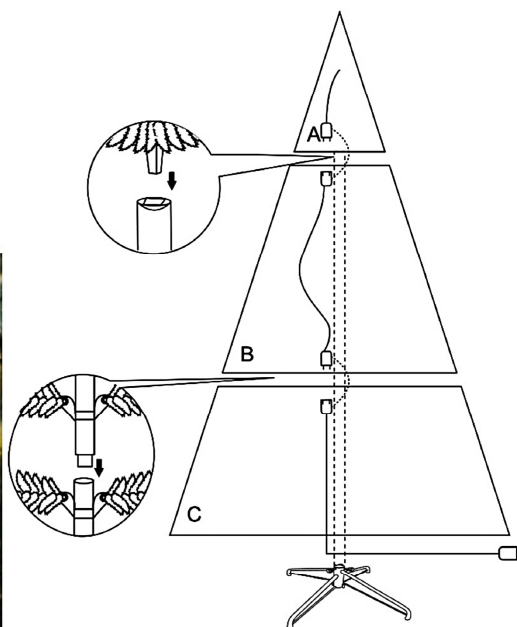

Electrical Rating For the tree
(for indoor use only)

Input: 120V~, 60Hz, 0.25A

Output: 29V - 0.42A

Powered tree pole

4. Assemble the tree from the bottom to the top. Start with the bottom section C and insert into the assembled stand. Make sure the pole is firmly inserted and secured into the stand.
5. Continue by inserting the section B to the lower section until inserting the tree top A.

6. Allow branches to fall into place or gently pull up and out. When adjusting branches, be sure that all wires are free of branch hinges.
7. Begin to shape the branches from the bottom to the top. Start with tips farthest from the pole, one to the right, one to the left and one at the center of the main stem.
(Fig.1, Fig.2 and Fig.3)

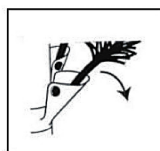 


Fig.1



Fig.2

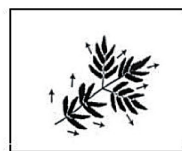 


Fig.3

8. After shaping the whole tree, step back and take an overall look. Shift branches to fill any gaps. Slightly up sweep all branch tips for a uniform look.
9. Finally you just only need to plug the adaptor into an INDOOR wall outlet. Your entire tree should now be lit.

STORAGE INSTRUCTIONS

1. Remove all ornaments and decorations. For pre-lit tree, first unplug the adaptor from the wall outlet.
2. Disassemble the tree from the top to the bottom. Start with the tree top and gently lift straight up to remove from section below and fold all branches toward the pole.
3. Carefully place all tree sections into shipping box and tape it shut.
4. When not in use, please store your tree in a cool, dry place away from sunlight. Exposing your tree to excessive heat or humidity may damage it.

TROUBLE SHOOTING TIPS

For pre-lit tree, if the tree does not illuminate:

1. Please check to make sure that all powered poles are properly connected and the adaptor is plugged into the wall outlet. Refer to assembly guide for instructions.
2. Please check for loose connections.
3. Make sure the outlet has power (check to see if any switches control the outlet).

WARNING

Never leave the pre-lit tree unattended while plugged in. Keep this tree away from flame and extreme heat. Read important safety instructions cautions inside. This is a decorative article, not a toy or intended for use by children. Only use the power adapter provided with this product, using a different adapter will damage the lights and cause fire and or electrical shock hazards. FOR ADULT USE ONLY!

FOR POWER UNITS

WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference provide reasonable protection against harmful interference and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Rich Pacific Limited

5 Crawford Drive

Dix Hills, NY 11746

E-mail: richpac@netvigator.com