Assembly Instructions for 60 Inch Pop-Up Snowman Sculpture

Do not plug the light string into an outlet until this item is fully assembled and the light strings are properly connected. Please read the enclosed important safety instructions and cautions carefully prior to use.

Enclosed Parts

- * Upper Pole, Lower Pole, Base, Body Section, 2 Arms, Scarf
- * 5 Plastic Ties
- * 1 Set of 6 ct. C7 Lights
- * 4 Lawn Stakes

Instructions

1. Carefully remove item from the protective wrap to avoid damaging any of the light bulbs or parts.

2. Insert the lower pole into the hole on the base. Then insert the upper pole into the lower pole. 3. Attach the light string to the pole with the included plastic ties. To avoid the light string from sliding down, make sure the first bulb is 4. Hang the snowman body on the upper fastened to the ring on the upper pole by inserting the rod in the top center pole, and the last bulb is fastened of the snowman's hat into the top of the to the ring on the lower pole. upper pole. Then gently lower the snowman downward.

5. Insert the 2 arms into the holes on both sides of the body.

6. Secure the snowman to the base by attaching the 4 hooks on the bottom of the body to the 4 rings on the base.

The buckle can be used for attaching to the base

8. Secure the item firmly into the ground by pushing 4 lawn stakes through the base.

7. Place the scarf around the neck, then secure

with the pre-attached Velcro.

-

9. Connect the power cord on the unit to an UL listed extension cord.

=



Trouble Shooting If certain lights do not light If no lights light up 1. Replace any broken or loose bulbs. 1. Check the outlet to make sure the power is on. 2. Check each bulb one at a time by removing it from its socket and replace it with a bulb that works. 1. Check the outlet to make sure the power is on. 3. Check the fuse on the male plug of the light set. 4. Replace the fuse if it is blown, using 5 amp fuse for the light string. 5. Check for any broken or loose bulbs, replace any damaged bulbs with new ones.

Spare Parts

* 1 - 5 Amp Spare Fuse (located inside the plug)

more flexible.