
 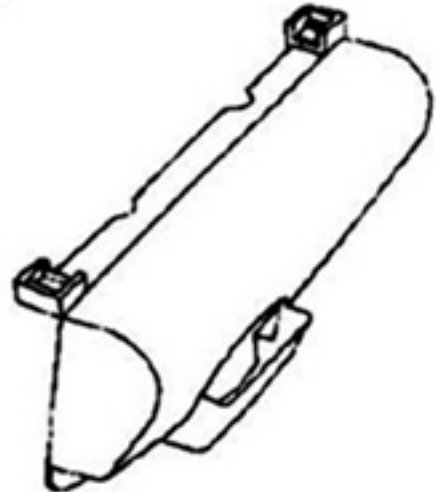

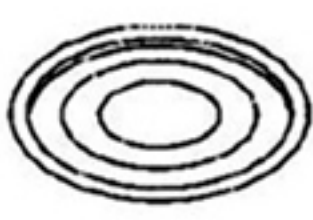
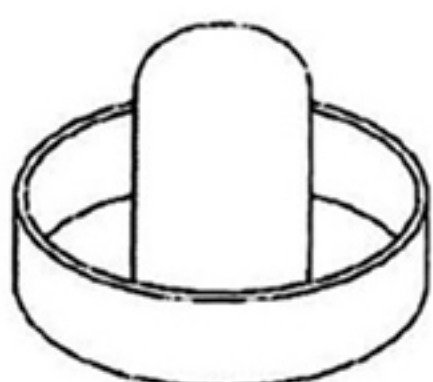




# Instruction sheet

<b>A</b> 	<b>B</b> 	<b>D</b> 	<b>E</b> 
<b>2PCS</b>	<b>2PCS</b>	<b>2PCS</b>	<b>2PCS</b>


1

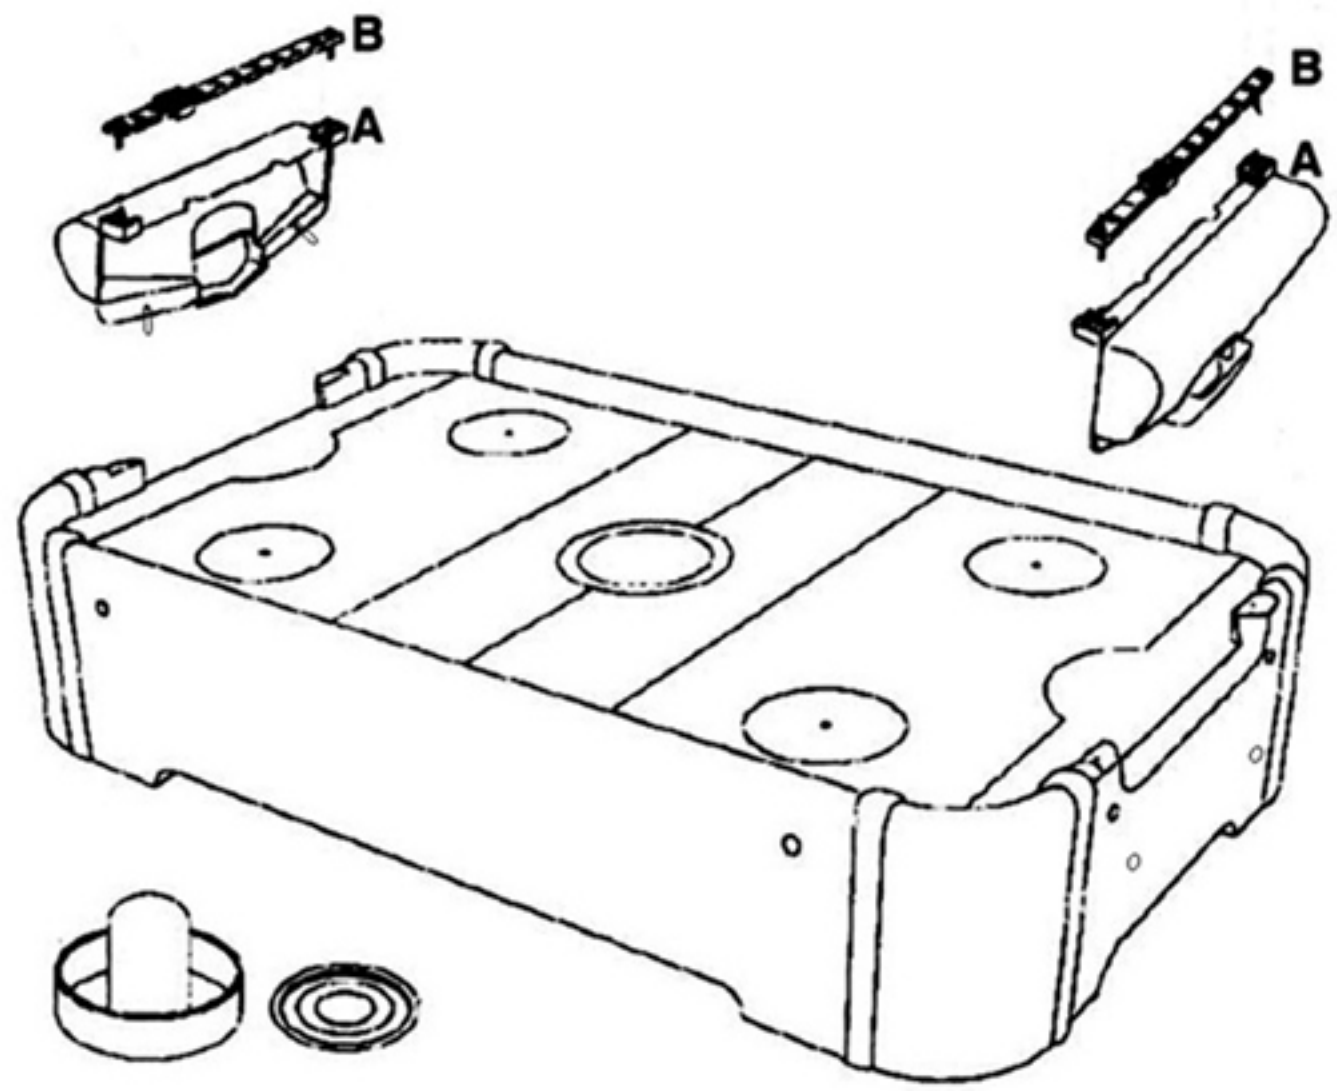

2

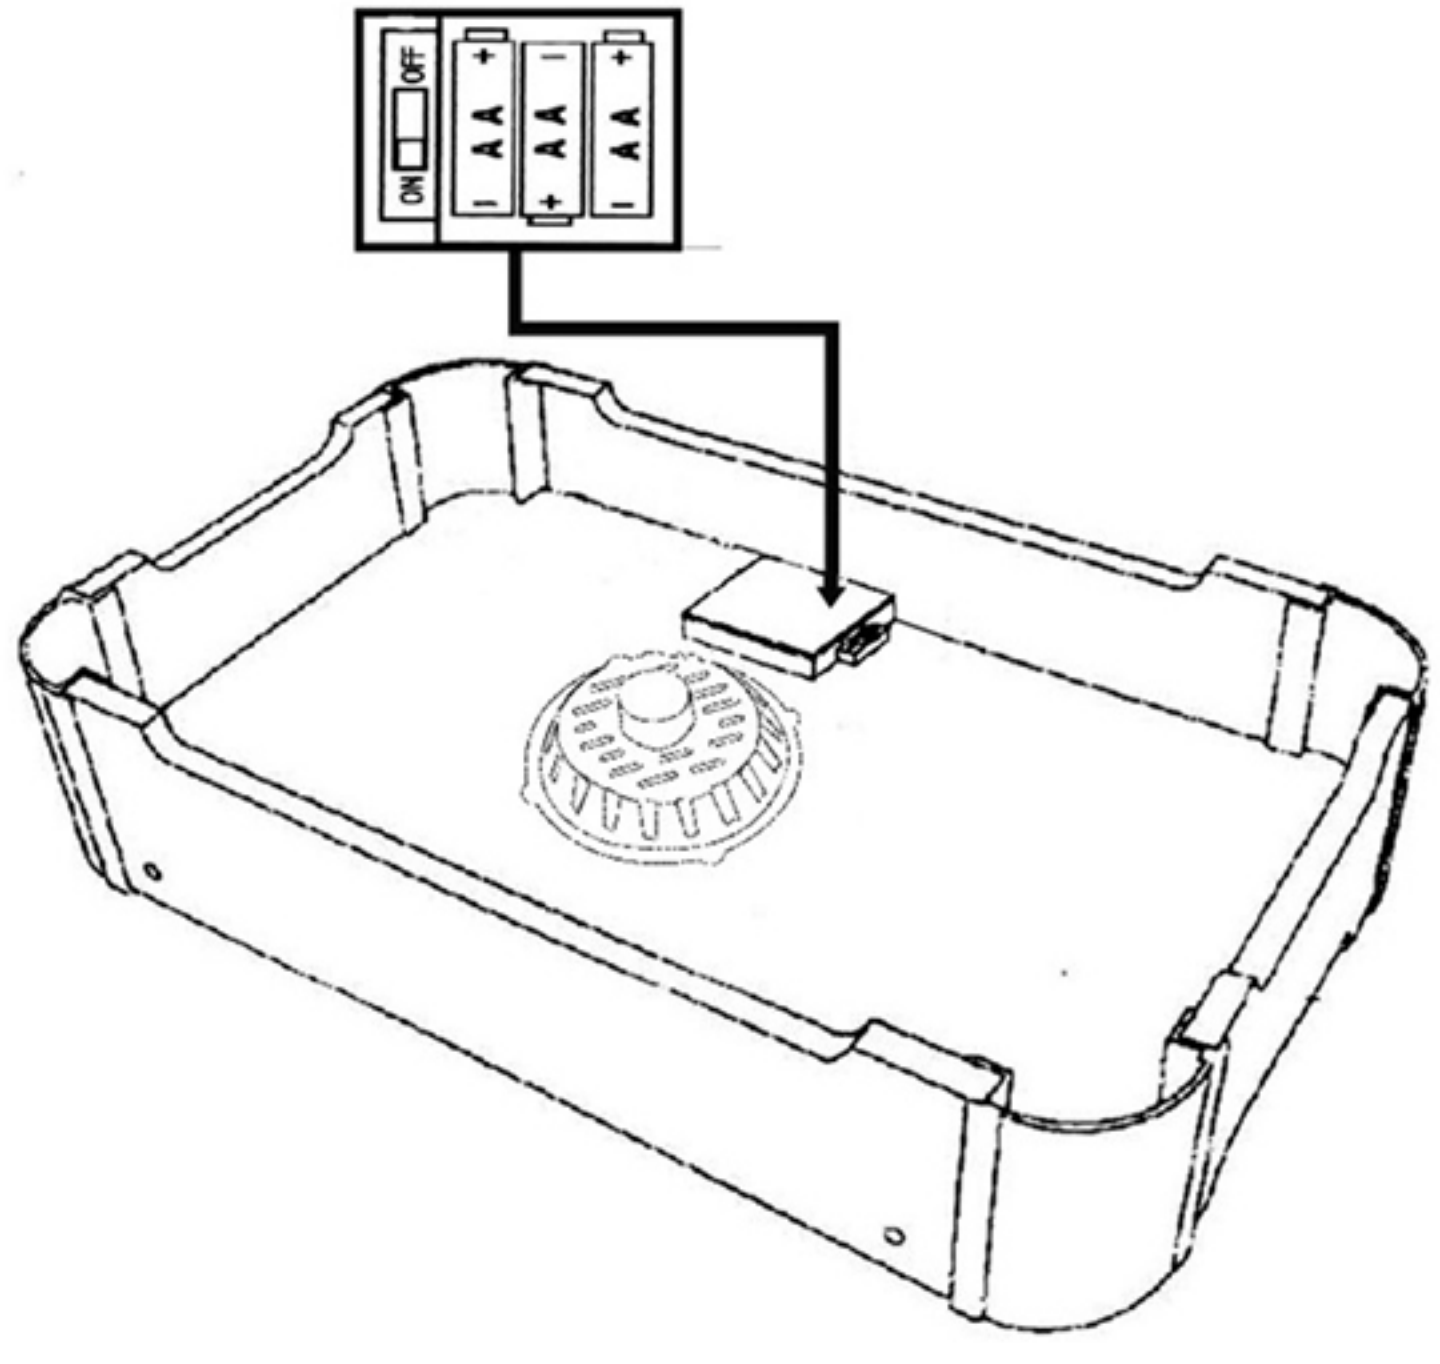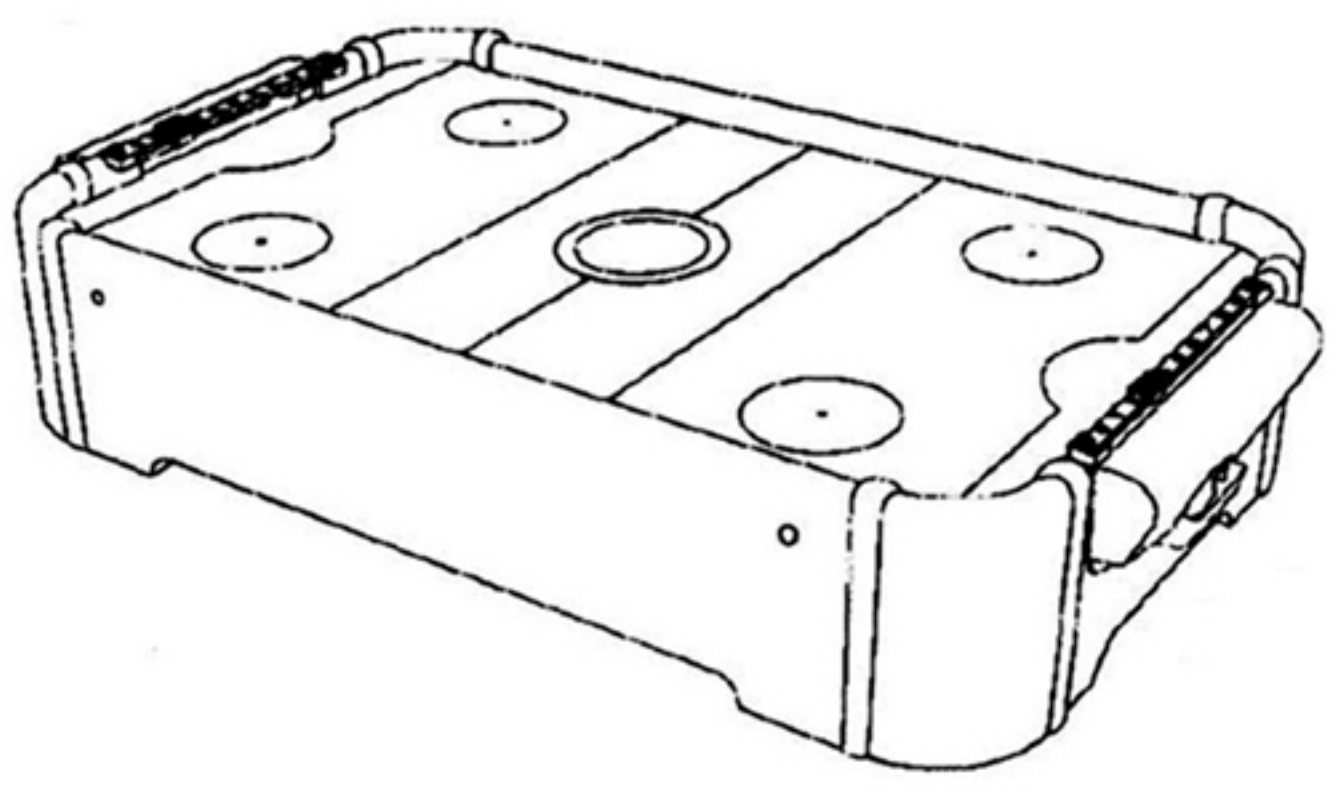

**\*\* 3xAA Batteries (not included)**  
**\*\* Philips head screwdriver also needed for assembly (not included)**

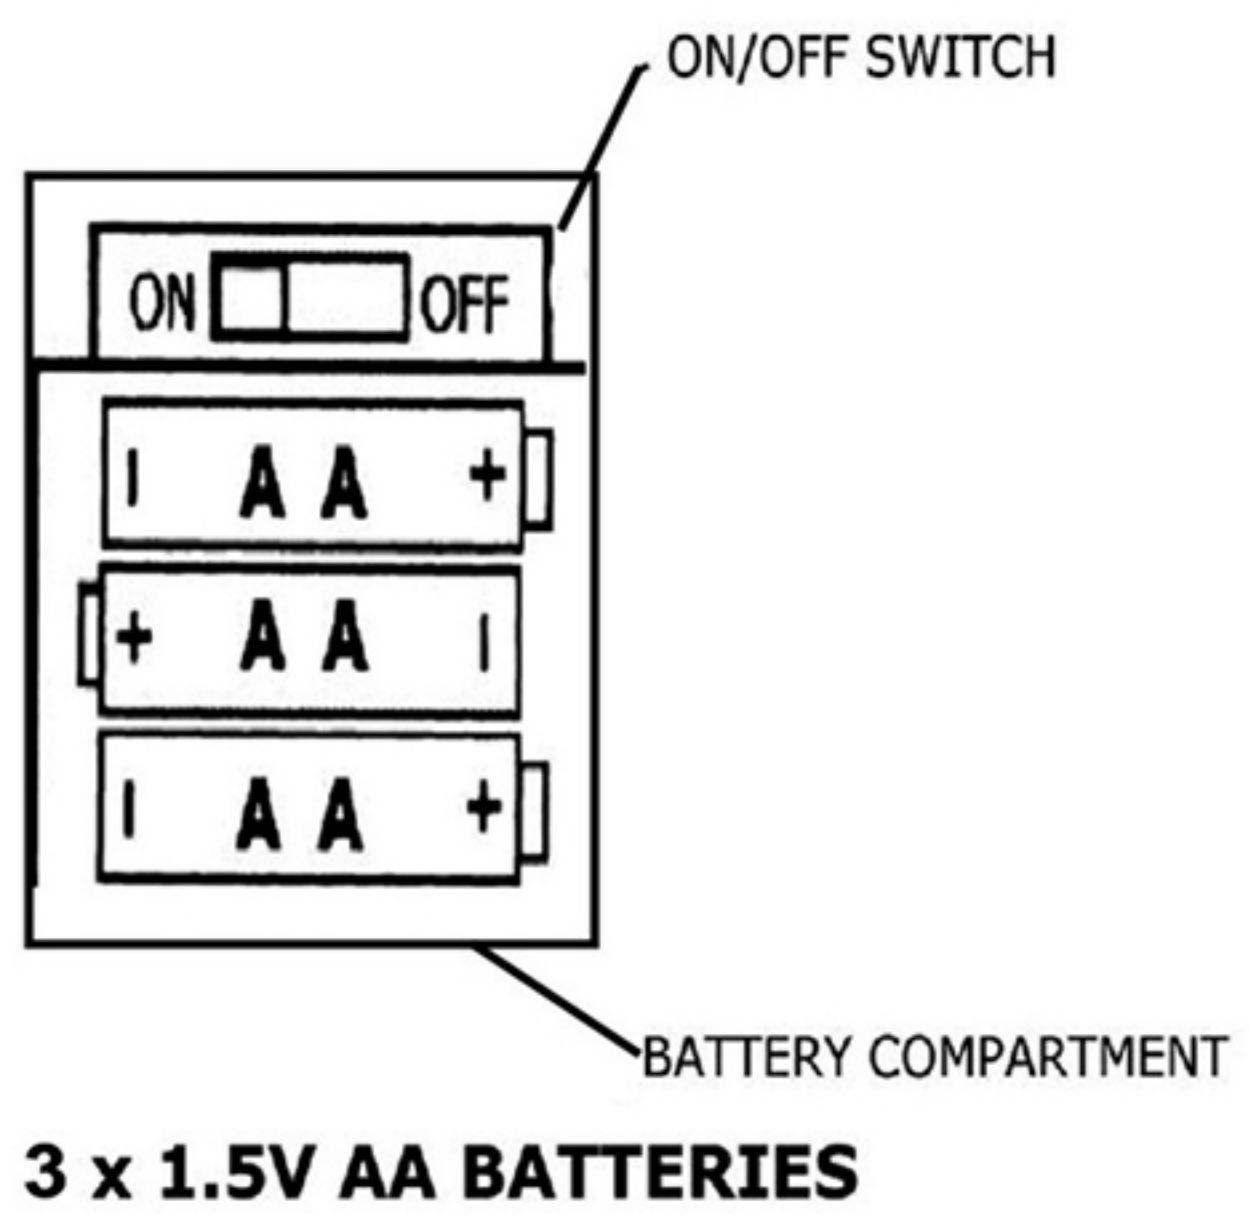

## BATTERY WARNING:

- 1. DO NOT MIX OLD AND NEW BATTERIES.
- 2. DO NOT MIX STANDARD (CARBON-ZINC),ALKALINE OR RECHARGEABLE (NICKEL-CADMIUM AND NICKEL METAL HYDRIDE) BATTERIES.
- 3. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.
- 4. DO NOT CHARGE NON-CHARGEABLE BATTERIES.
- 5. REMOVE BATTERIES FROM PRODUCT IF NOT IN USE FOR AN EXTENDED PERIOD OF TIME.

**⚠ WARNING:**  
**CHOKING HAZARD**-Small parts.  
Not for children under 3 years.  
Adult assembly required.Contains potentially hazardous sharp points.