

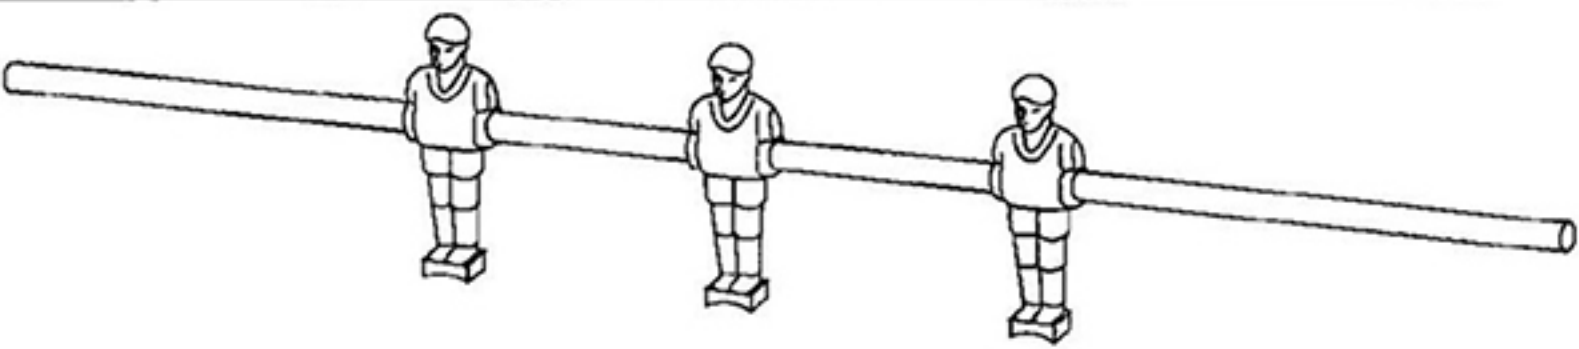
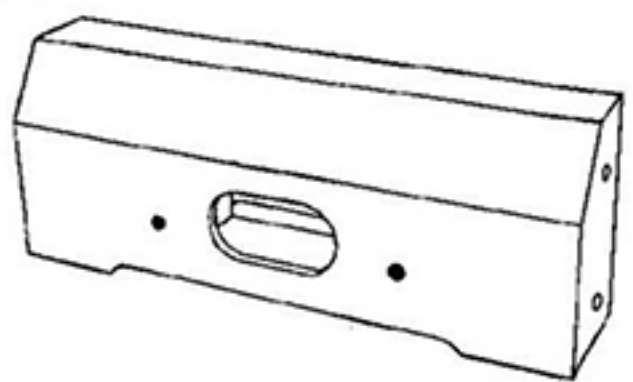



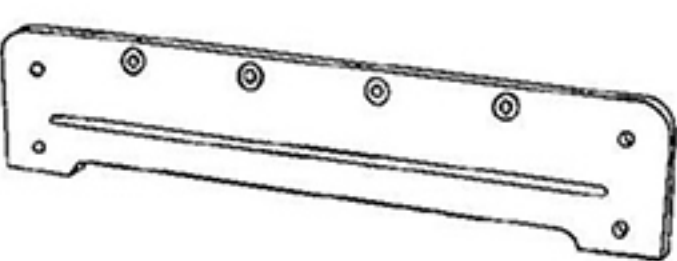




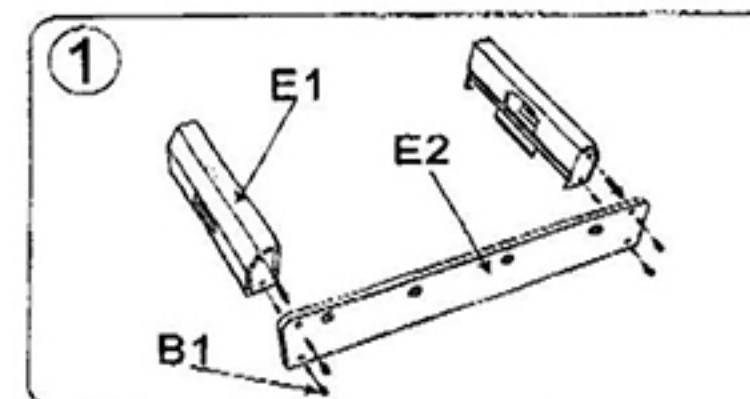
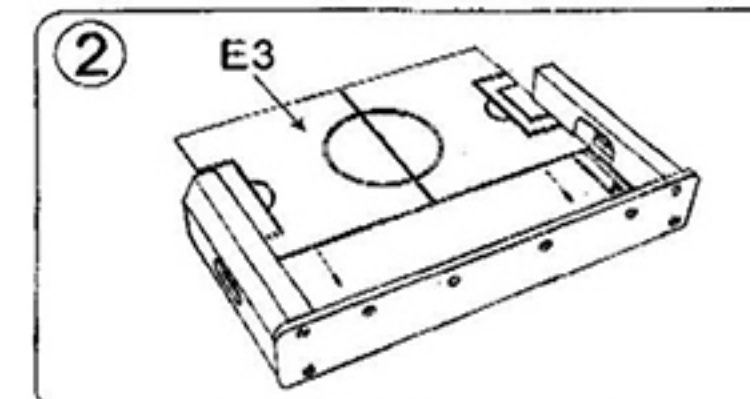


TABLETOP FOOSBALL INSTRUCTION


T1/T2/T3/T4			
			
4PCS			
E1	E2		
			
2PCS	2PCS		
E3	E4		
			
1PC	2PCS		
E5	A1	A2	A3
			
4PCS	8PCS	4PCS	4PCS
B1			
			
8PCS	1PC	2PCS	

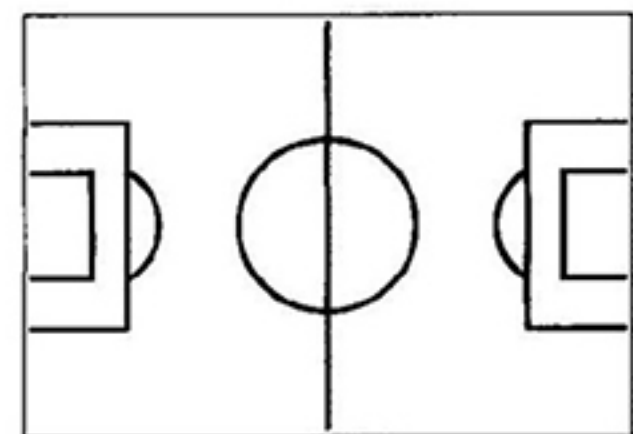

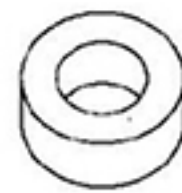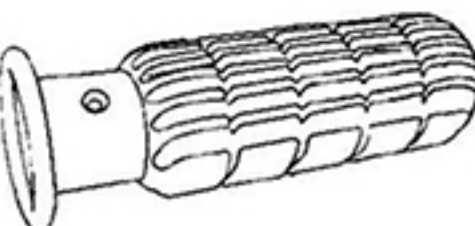
Use 4 screws (B1) to attach two short boards (E1) and one long board (E2) with wrench (included)

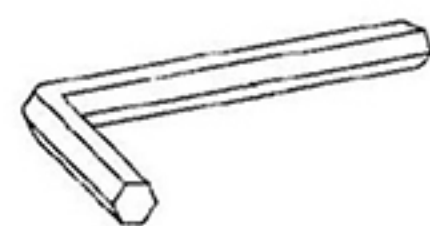


Insert the playing surface (E3) into grooves of the assembled pieces from step 1 as shown.

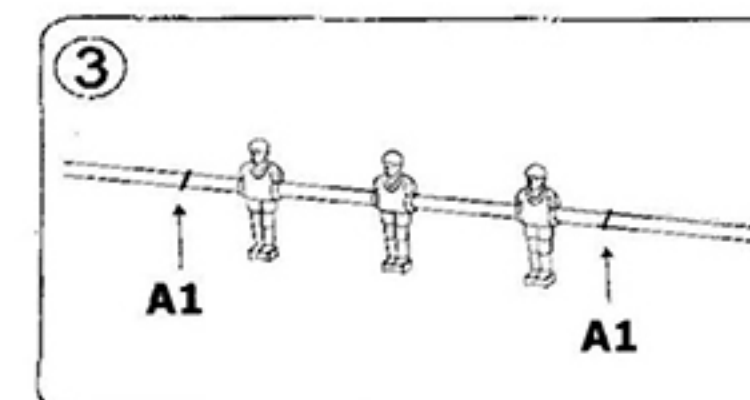


Install the (A1) to T1,T2,T3 & T4

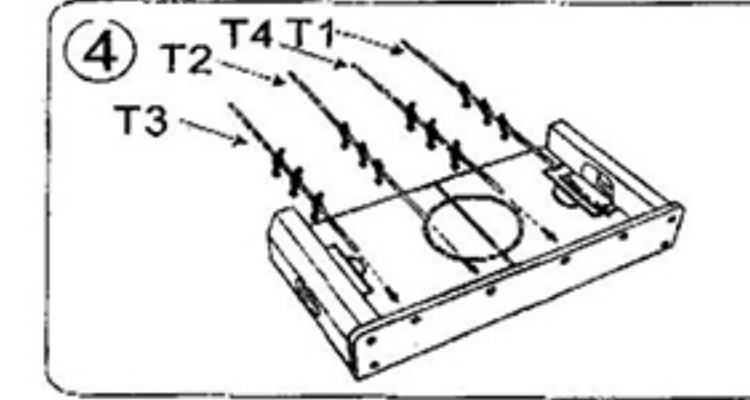


Install the bars (T1,T2,T3 & T4) into the pre drilled holes along the long board.

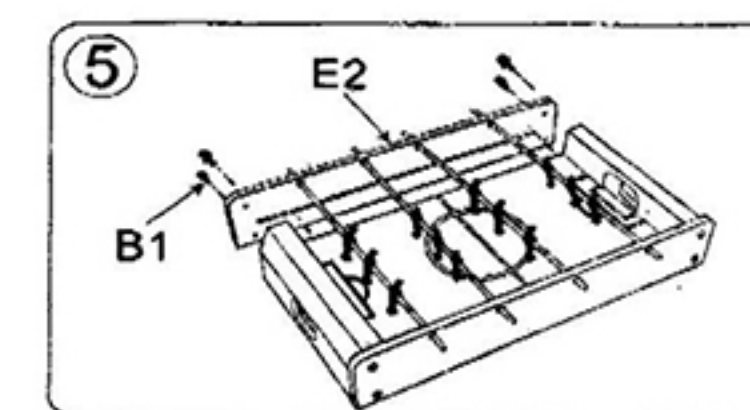


Position the remaining long board (E2) and attach securely as in step 1

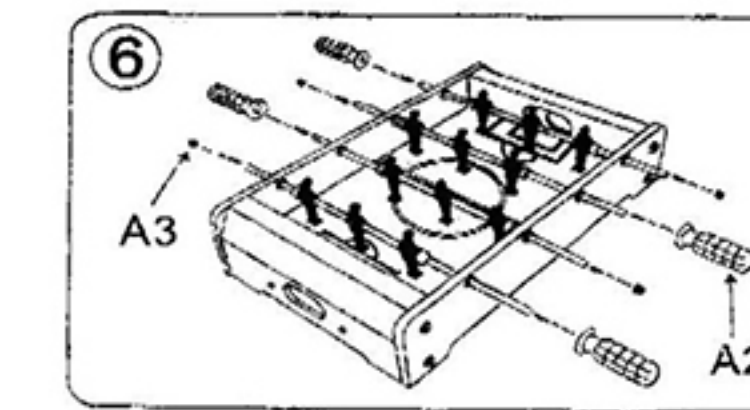

Attach the four handles and bar caps (A3) as shown and press firmly into the place

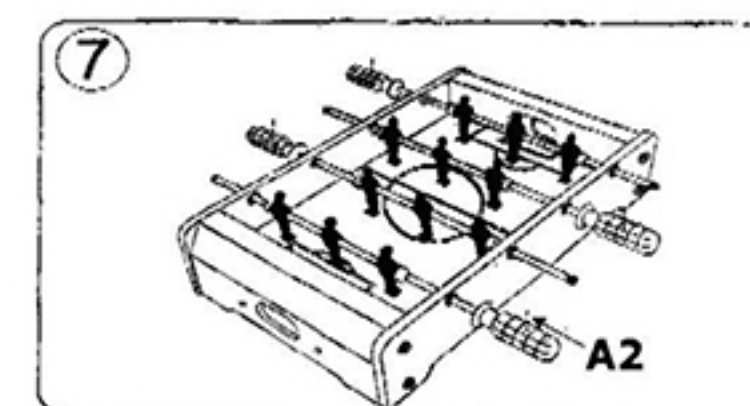

Insert part A2 into handle

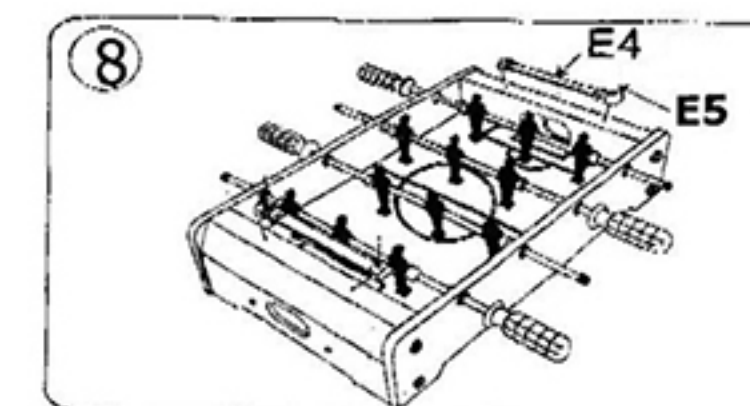

Attach the Scoreboard by inserting the pegs into the pre-drilled holes.

*** Cruciform head screwdriver also needed for assembly (not included)

⚠ WARNING:

CHOKING HAZARD—Small part; Toy contains small balls.

Not for children under 3 yrs.

Adult assembly required. Contains potentially hazardous sharp points.