



ASSEMBLY INSTRUCTIONS

ITEM#: A102013130/A102013130B1/ A102013130B2/A102013130B3

SKU#: 810667676/810667673/ 810667674/810667675

SAN MARINO 10X12FT HARD TOP WOOD GAZEBO

Need help? We are here for you!

1(866)578-6569

24/7 • Toll Free

Production number: 2024101042

GENERAL BEST PRACTICES FOR ASSEMBLY:

- Please read and understand this entire manual before attempting to assemble or install the product.
- Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.
- The assembled gazebo should be located at least 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry lines or electrical wires.
- Some parts may contain sharp edges. Wear protective gloves is advised.
- This unit is heavy. For safety, do not assemble this item alone. Four people are recommended for safe assembly.
- Keep children and pets away while setting up the gazebo.
- Pay attention to the parts orientation

WARNINGS:

- Install the gazebo on level ground. Stakes are provided to secure the gazebo to the ground.
- Do not assemble the gazebo on sandy, muddy or loose soil, as stakes do not have enough anchorage in these types
 of soil.
- If you wish to secure the gazebo to a wood deck or concrete surface, use anchors suited to these surfaces.(anchors not included).
- Snow must be cleared off regularly during snowy days. Remove the snow at the roof top when it is thicker than 2 inches. In order to avoid damage, use a plastic snow rake to remove excessive snow and ice buildup from roof and keep away from falling debris and removal of fallen debris.
- Any assembly or maintenance of the product must be carried out by adults only. We recommend at least 4 adults.
- Please check your state and local regulations prior to purchasing. Some jurisdictions may require permits for installation and use. Some special procedures may be valid in your area.
- This gazebo is intended for decorative and sunshade purposes only and is not designed to withstand harsh weather, including high winds, rain, and snow.
- If any scratches in paint occur, please touch up to prevent rusting
- For outdoor use only.

WARRANTY:

WHAT IS COVERED?

The limited warranty is extended to the original purchaser and applies to material and manufacturer's defect provided the item is maintained with care and used only for personal, residential purposes.

For further assistance, please email Biglots@sunjoygroup.com

Warranty: 1 Year

MAINTENANCE:

- Steel components for this gazebo are treated with rust inhibiting paint that protects it from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur if these protective coatings are scratched. This is not a defect and thus not covered by the warranty.
- To minimize this condition, it is recommended to use care when assembling and handling the product to prevent scratching the paint. Should any scratching or damage occur, it is recommended to cover the scratch immediately with rust inhibiting paint (not included).
- Surface rust can also be easily removed with a very light application of regular cooking oil or WD-40. If surface
 oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping onto deck or
 patio and caused damaging stains, which may be difficult to remove. This can be prevented if the above-mentioned
 measures are taken to keep the product from oxidizing.
- Do not use bleach, acid, or other abrasive cleaners on the roof or frame parts.
- Keep instruction manual for future reference.
- Keep the original packaging to store the gazebo.
- Periodically check and ensure that all bolts are well-tighten during use

WOOD CARE GUIDELINES

Wood requires some care and attention over its lifetime to ensure a long-lasting beautiful finish. Proper cleaning and maintenance will keep your wood products looking beautiful for a long time. Please follow these guidelines to maintain your wood surfaces.

- Fading and weathering: Wood is a natural product and is expected to change over time. Long periods of sun exposure can naturally lead to color fading. Weather extremes, temperature fluctuations, and humidity highs/lows cause wood to expand and contract, possibly leading to warping and cracking. Knots and small surface cracks are naturally occurring and do not affect the strength of the product.
- **Keeping dry:** Prolonged moisture and high or low humidity can be harmful for wood. Cracking or splitting from extremes outside of the normal humidity range of 35-65% are not covered by our warranty. Preventing prolonged exposure to moisture is advisable.
- **Cleaning:** Frequent light cleaning is recommended. Dust regularly using a slightly damp soft cloth, and then wipe dry (following the direction of the wood grain). For more thorough cleaning, use a soft cloth and a gentle soap solution (dilute ¼ cup mild dishwashing liquid soap with 1 gallon of warm water). Rinse with water, and then immediately dry the surfaces using a soft cloth. Do not use bleach, acid, or other solvents on any metal parts or surfaces. Minor stains or scratches can be lightly buffed with No.0000 steel wool, followed by an application of good quality wood-care oil, wiping in the direction of the grain.
- Annual sealing: It is advisable to annually maintain the wooden parts with a sealant or outdoor wax/oil to protect and enhance the wood surfaces. Twice yearly, after cleaning, apply a good quality wood-care oil or water-based sealant to the surfaces. Recommended options are outdoor water-based sealant, linseed, teak, or tung oil. Refer to the manufacturer's specific instructions for application. It is best to try on a small section of wood, then if satisfied with the result, continue the application, taking care to avoid any metal surfaces.

Frequently Asked Questions:

Q1. What kind of wood is this made from?

It is China-Fir (Cunninghamia/Cedar) wood.

Q2. Is the wood waterproof?

No, it is not waterproof, however it is water-resistant. It is able to resist the penetration of water to some degree but not entirely. Do not assemble the gazebo onto soil/sandy earth since water might puddle or pool around the gazebo posts, and stakes do not have enough anchorage in these types of soil.

Q3. Before assembly, can I stain the wood parts with a different color stain?

To change the color requires professional procedures, involving spraying equipment and water-based stain only. This operation is not recommended.

Q4. What should we apply to the wood to keep it looking good and maintained? Do I need to treat the wood to make it weather resistant?


Yes, a cleaning and sealing regimen is advised. Please check our "wood care guidelines" for details.

Q5. Is there any way to seal the crack to prevent further damage? Does it affect the strength of the product? Knots and small checks (cracks) are naturally occurring and do not affect the strength of the product. It is advisable to annually maintain the wooden parts of the gazebo with a coat of water-base water repellent sealant or outdoor wax oil to protect & enhance the beauty of wood, if you are concerned that a part has experienced a severe weathering problem please contact our customer service department for further assistance.

Q6. How do I remove mold from cedar wood?

First thoroughly clean the wooden parts, following our "wood care guidelines" cleaning regimen. Then clean with a chlorine-free "oxygen" bleach cleaner, following the product's instructions. Then clean with an oxalic acid wood/deck cleaner, following the product's instructions. If necessary, re-stain the wood with water-based stain. Please maintain the wood parts regularly and keep them dry.

EXPLODED DRAWING

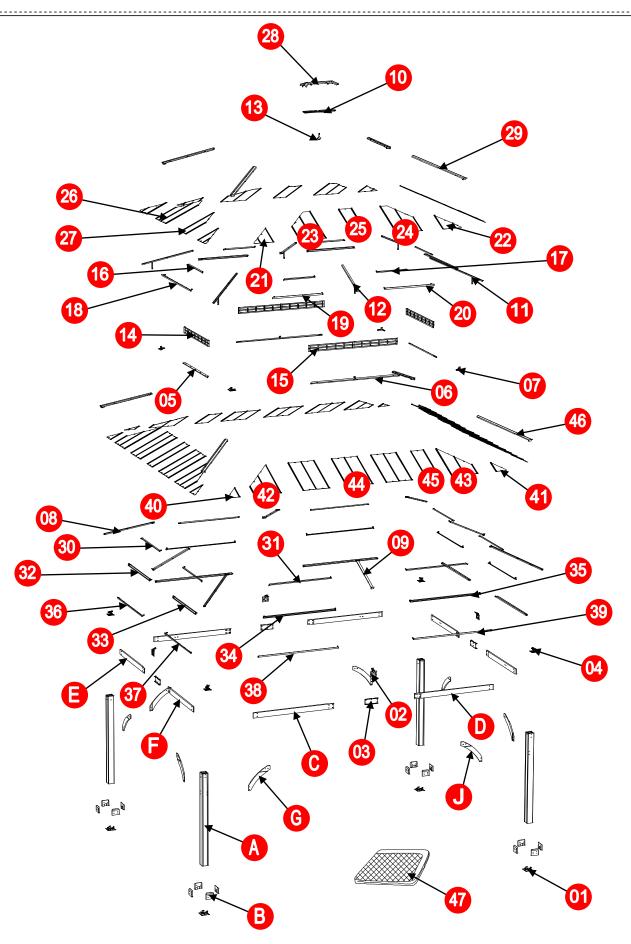

PARTS LIST

Label	Part Number	Description	Qty	Part Image
А	P00020022702	Post	4	· · · · · · · · · · · · · · · · · · ·
В	P00610027401	Base Cover	16	· · ·
С	P00040146701	Lateral Left Long Beam	2	
D	P00040146801	Lateral Right Long Beam	2	• • • • • • • • • • • • • • • • • • •
Е	P00040146901	Lateral Left Short Beam	2	
F	P00040147001	Lateral Right Short Beam	2	
G	P00500032001	Support Bar 1	4	
J	P00500032101	Support Bar 2	4	
01	P00010051201	Post Base	4	
02	P00050189701	Big Roof Middle Beam Connector	4	
03	P00220047601	Cross Beam Cap	4	
04	P00050223101	Rafter Connector	4	
05	P00050188801	Big Roof Short Beam	2	(ac' · · · · · · · · · · · · · · · · · · ·
06	P00050190201	Big Roof Long Beam	2	h
07	P00050190301	Corner Connector	4	
08	P00060257301	Big Roof Rafter	4	· · · · · · · · · · · · · · · · · · ·
09	P00060254301	Big Roof Middle Beam	4	<u>- </u>

10	P00050188101	Small Roof Connector	1	
11	P00060251301	Small Roof Rafter	4	
12	P00060251701	Small Roof Middle Beam	2	
13	P00580015401	Hook	1	
14	P00630014201	Short Screen	2	
15	P00630014301	Long Screen	2	
16	P00060252001	Small Roof Short Top Beam	2	
17	P00060252101	Small Roof Long Top Beam	4	
18	P00060252901	Small Roof Short Panel Flashing	2	
19	P00060253101	Small Roof Left Long Panel Flashing	2	
20	P00060253201	Small Roof Right Long Panel Flashing	2	
21	P00070147101	Small Roof Left Small Panel	4	
22	P00070147201	Small Roof Right Small Panel	4	
23	P00070146901	Small Roof Left Big Panel (Long Side)	2	
24	P00070147001	Small Roof Right Big Panel (Long Side)	2	
25	P00070146801	Small Roof Middle Panel (Long Side)	2	

26	P00070146601	Small Roof Left Big Panel (Short Side)	2	
27	P00070146701	Small Roof Right Big Panel (Short Side)	2	
28	P00090019001	Small Roof Cap	1	
29	P00080043401	Small Roof Rafter Cap	4	
30	P00060255001	Big Roof Short Top Beam	4	
31	P00060257401	Big Roof Long Top Beam	4	
32	P00570055401	Left Short Mosquito Netting	2	<u> </u>
33	P00570055501	Right Short Mosquito Netting	2	
34	P00570055601	Left Long Mosquito Netting	2	<u> </u>
35	P00570055701	Right Long Mosquito Netting	2	
36	P00060255601	Big Roof Left Short Panel Flashing	2	
37	P00060255701	Big Roof Right Short Panel Flashing	2	
38	P00060255801	Big Roof Left Long Panel Flashing	2	
39	P00060255901	Big Roof Right Long Panel Flashing	2	
40	P00070147301	Big Roof Left Small Panel	4	

41	P00070147401	Big Roof Right Small Panel	4	
42	P00070147501	Big Roof Left Middle Panel	4	
43	P00070147601	Big Roof Right Middle Panel	4	
44	P00070147701	Big Roof Middle Big Panel	10	
45	P00070147801	Big Roof Middle Small Panel	4	
46	P00080044001	Big Roof Rafter Cap	4	
47	P00120031101	Moquito Netting	1	


HARDWARE LIST

Label	Part Number	Description	Qty	Add	Part Image
H1	H100010047	Bolt M6*20	236	12	
H2	H100010046	Bolt M6*40	16	1	
НЗ	H100040020	Bolt M8*30	16	1	
H5	H100010165	Bolt M10*185	8	1	
H6	H030071111	Screw ST4.8*25	56	3	
H7	H030050058	Screw ST4.8*30	48	3	


-					
H8	H030050057	Screw ST4.8*40	64	4	
H9	H030030013	Screw ST8*35	32	2	
H10	H030010031	Screw ST9.5*80	8	1	O Branconomic
H11	H050080007	Flat washer M8	32	2	
H12	H050080008	Flat washer M10	16	1	
H13	H040050026	Nut M10	8	1	
H14	H040090004	T-Nut M8*8	16	1	
H15	H090990002	M3 Drill	1	0	
HH1	H050050018	M6 Rubber Washer	16	1	
HH2	H990010010	Plastic Buckle	24	5	
HR	H990050001	Ring	60	3	
HS	H070010003	Stake Ф8*180	8	0	
HW1	H090010017	Wrench M6	2	0	
HW2	H090030005	Allen Wrench M8	1	0	
HW3	H090010015	Wrench M10	2	0	


HELPFUL HINTS


- Tools needed and not included:
- Estimate assemble time: 150-180 minutes

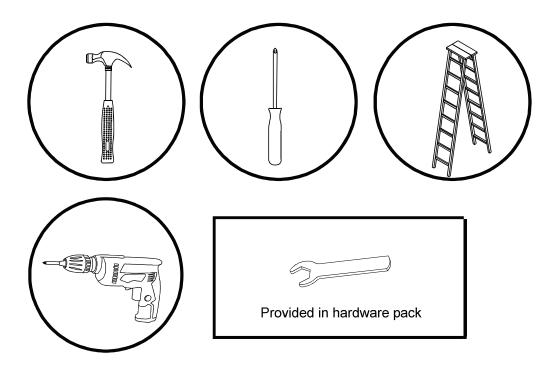


How many people needed for the installation

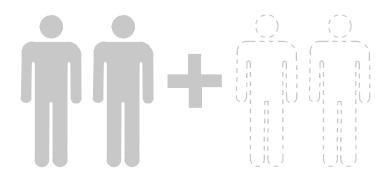


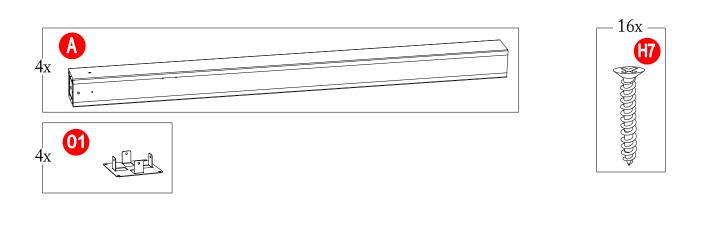


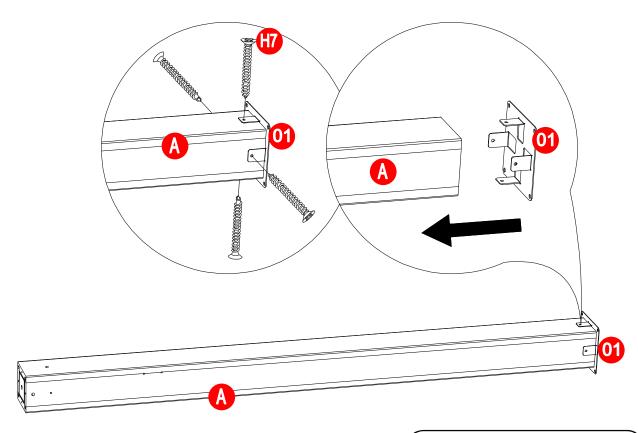


Clip the Post Base (01) to the Post (A), use the Screw (H7) to connect and lock the Post Base (01) and the Post (A), tighten by cross screwdriver.

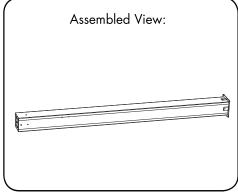


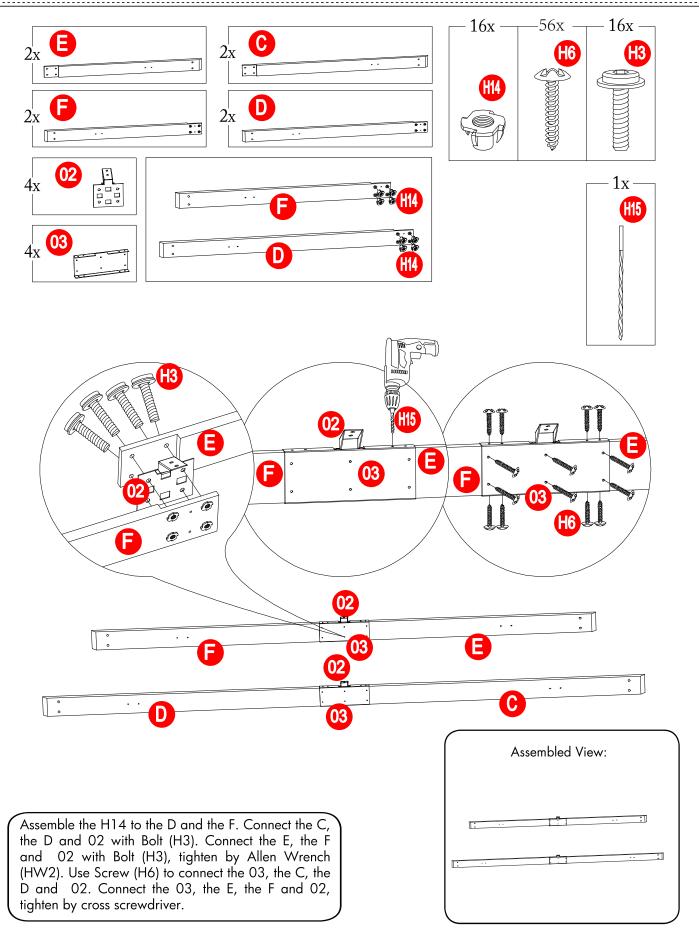

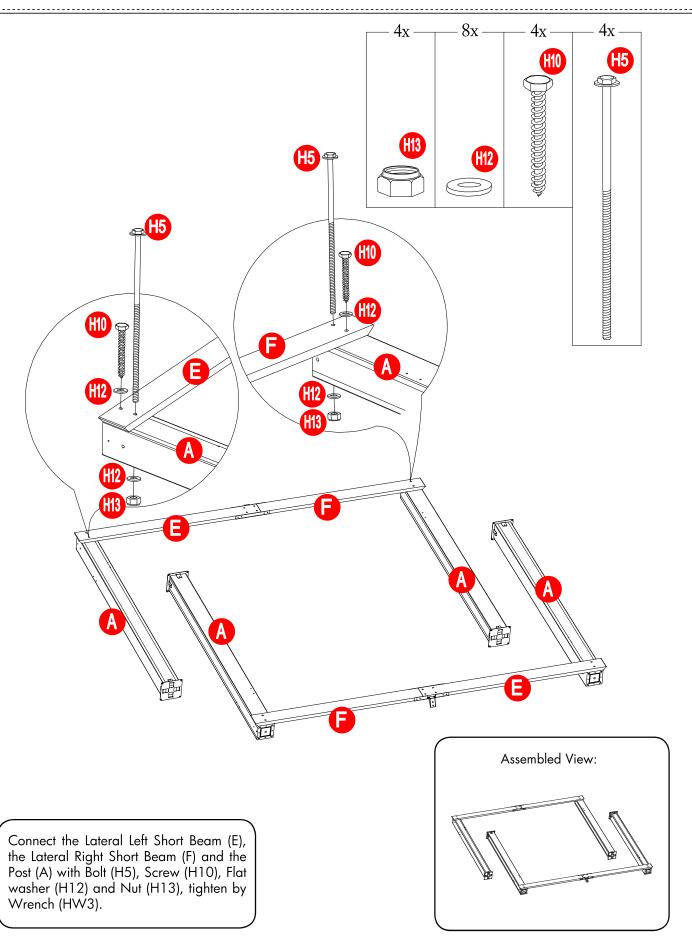


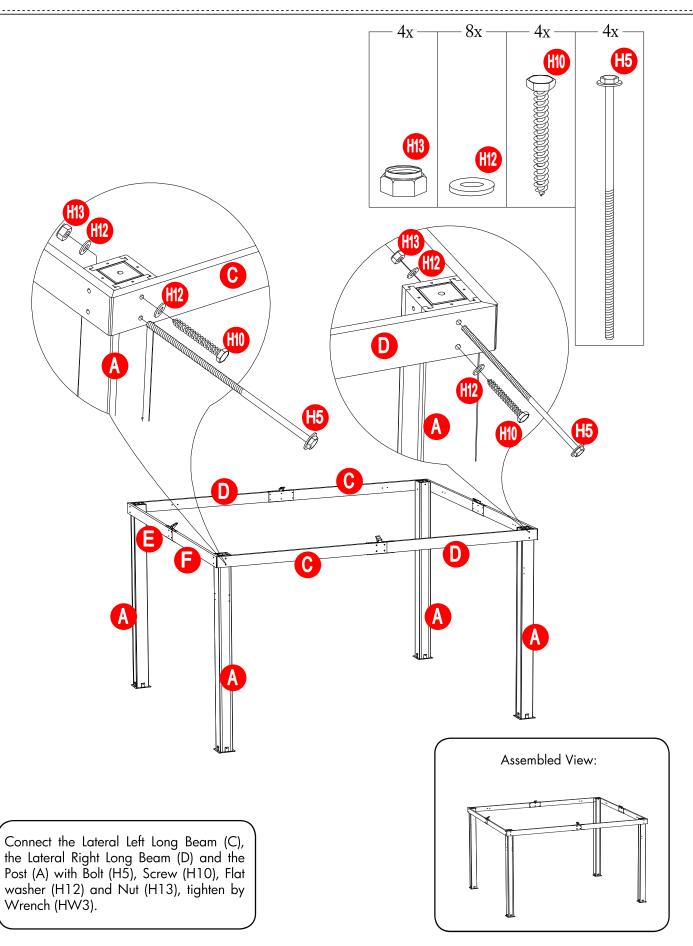




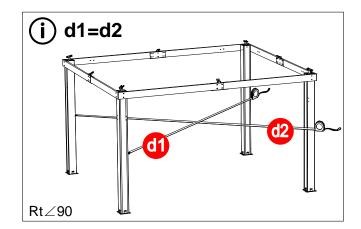





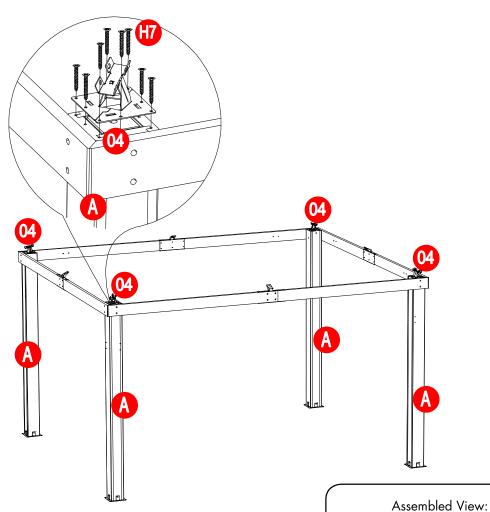



Use Screw (H7) to connect the Big Roof Rafter Connector (O4) to Post (A), tighten by cross screwdriver.

 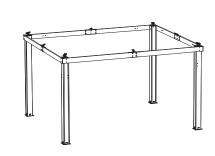


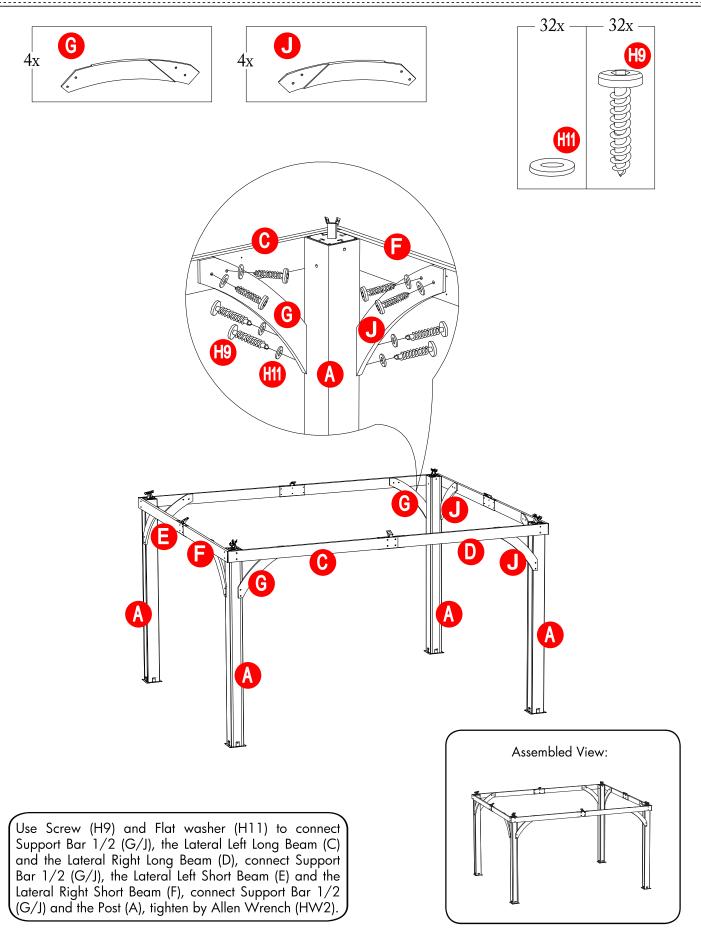

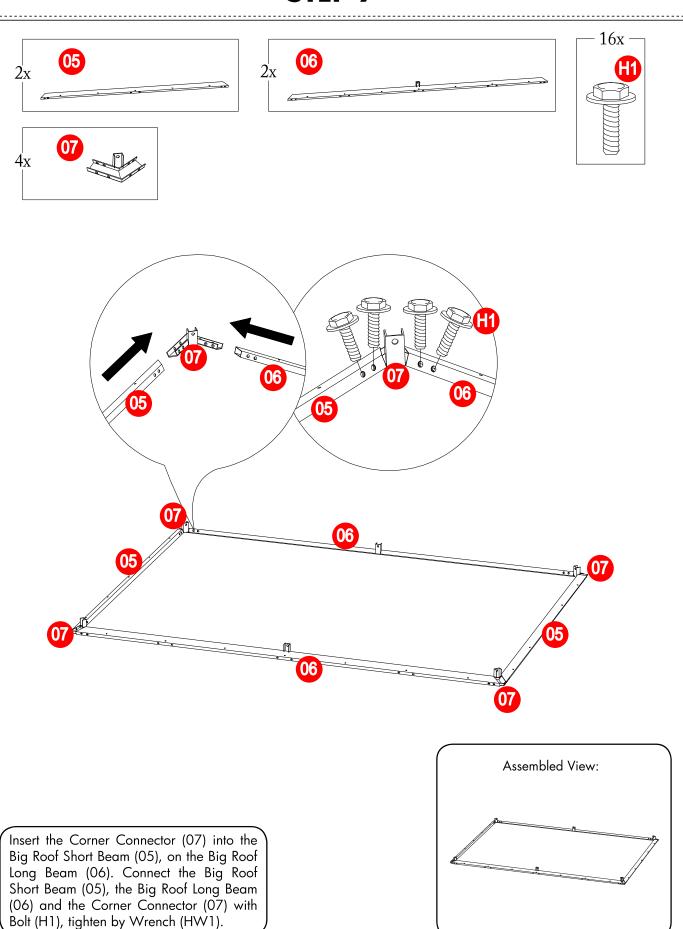

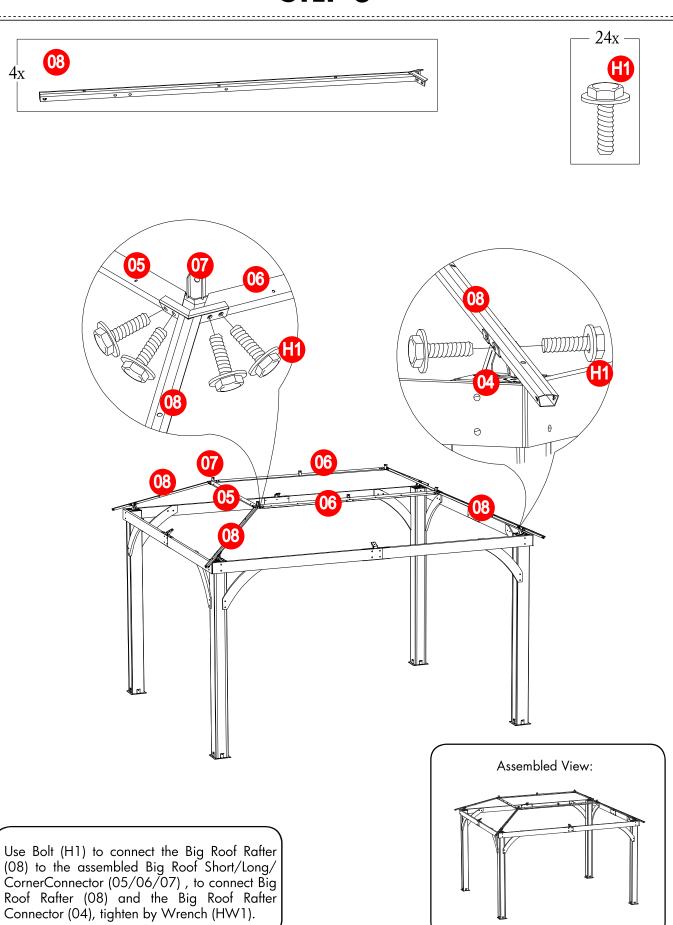


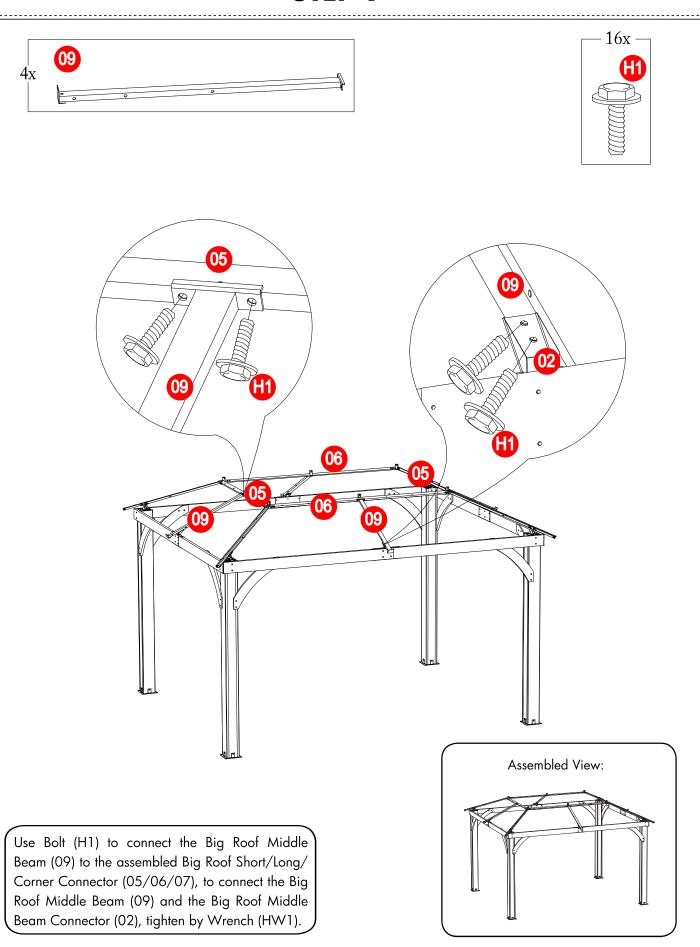










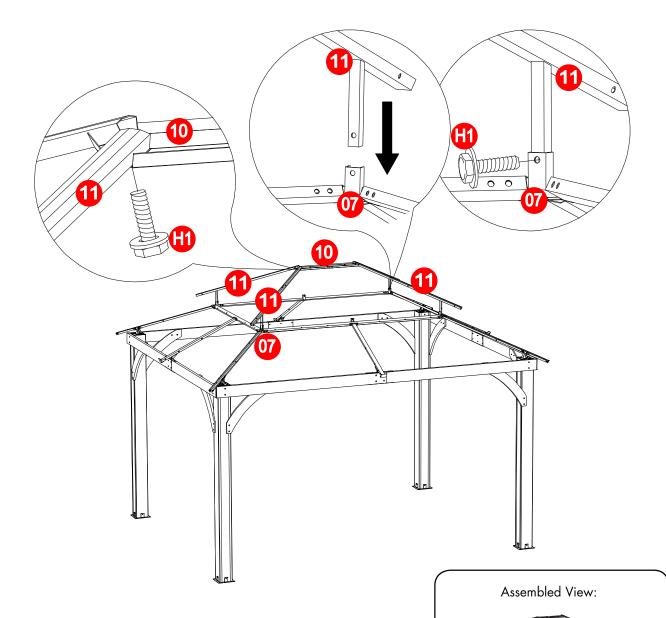



Use Bolt (H1) to connect Small roof rafter (11) to Small roof connector (10) and corner connector (07), tighten with wrench HW1. Note: connect the Small roof rafter (11) one by one.

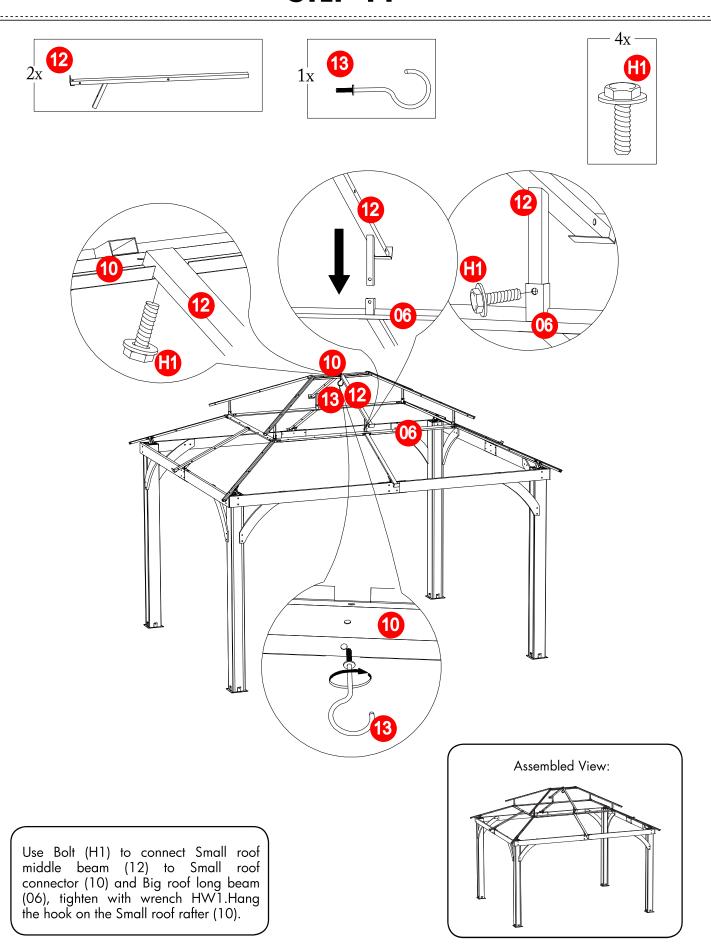


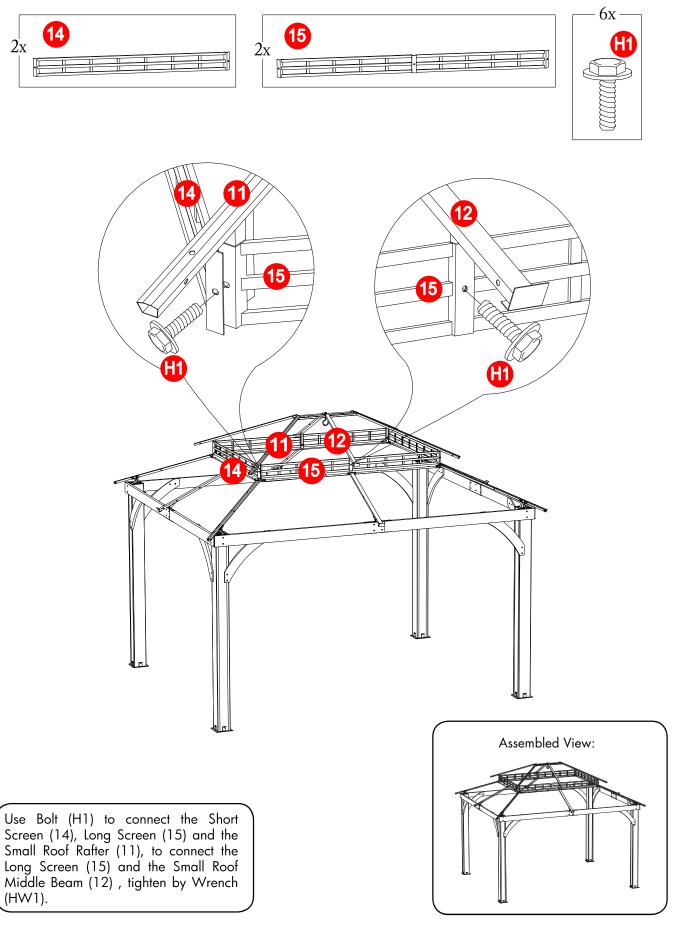


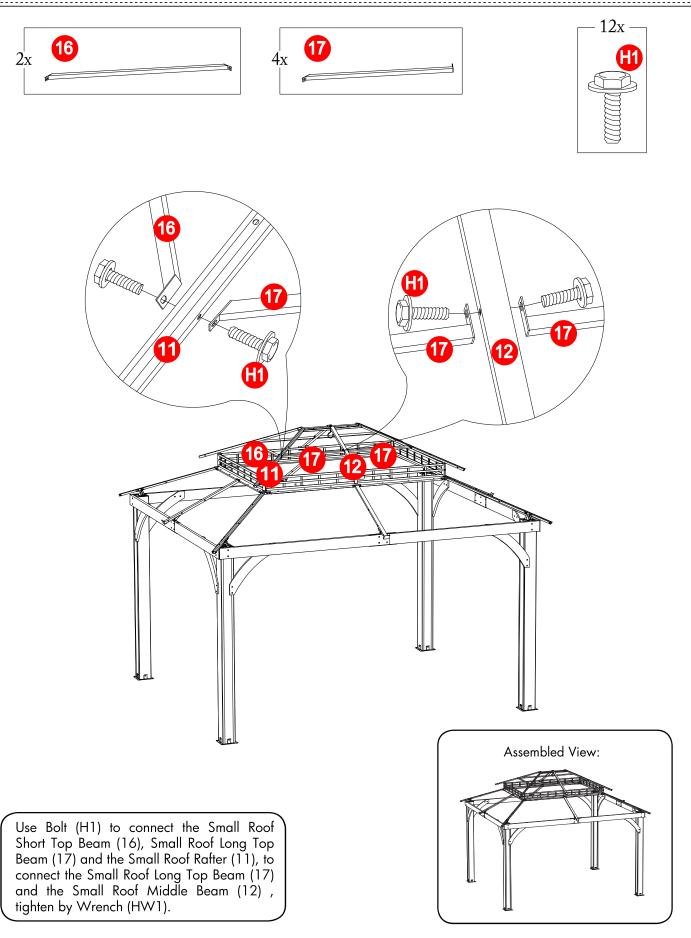

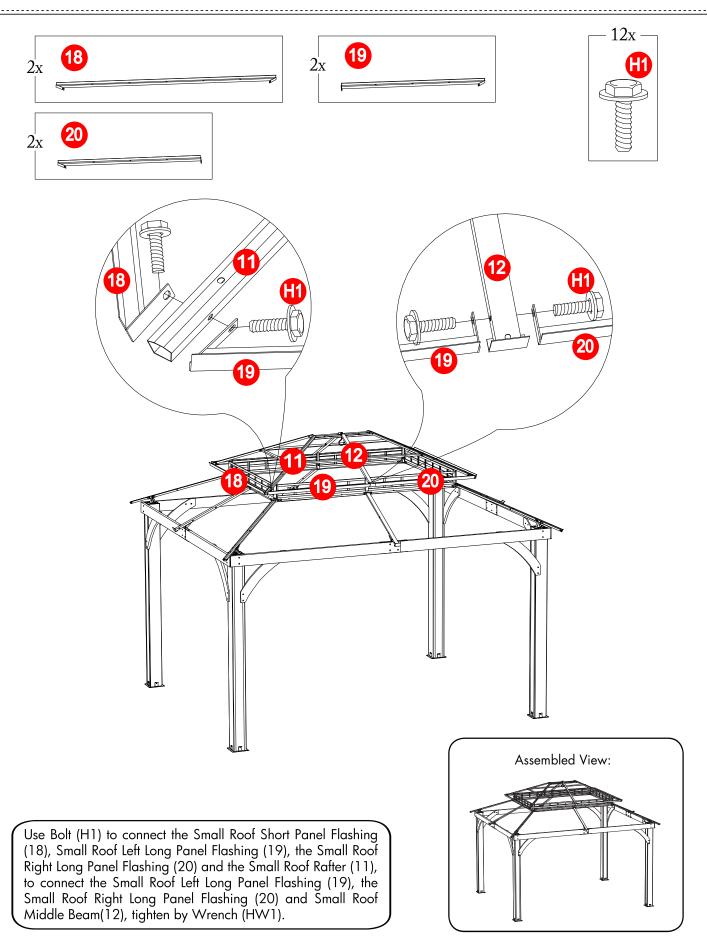


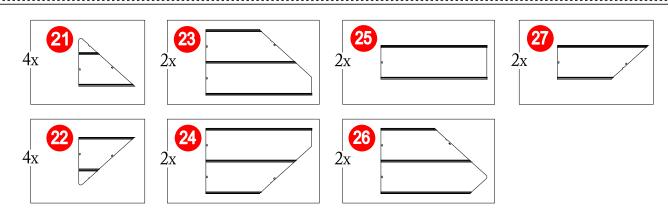


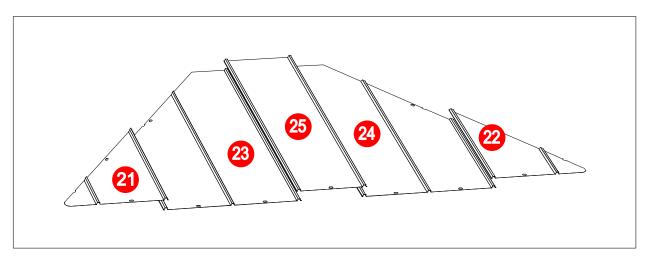


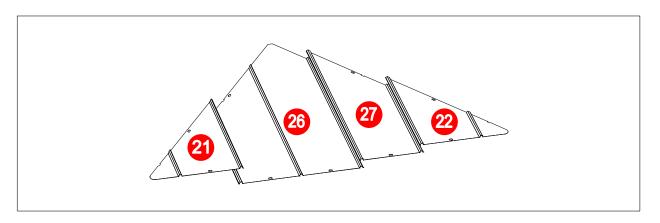



As shown in the picture, place 21/22/23/24/25 in order Interlock, then interlock the (21/22/26/27) in turn.

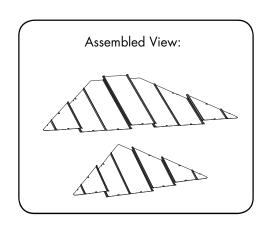


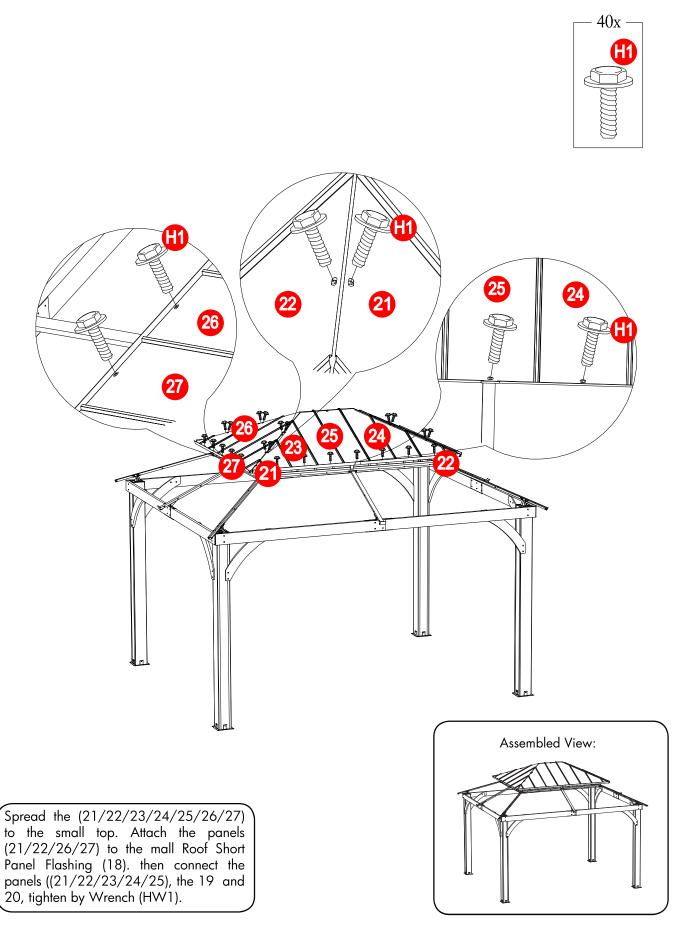


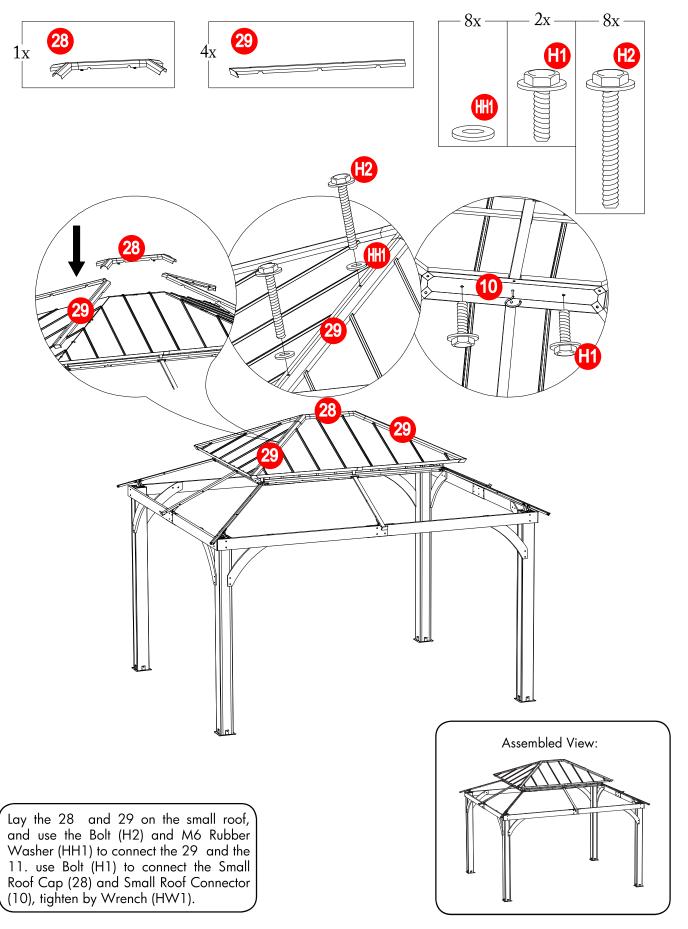


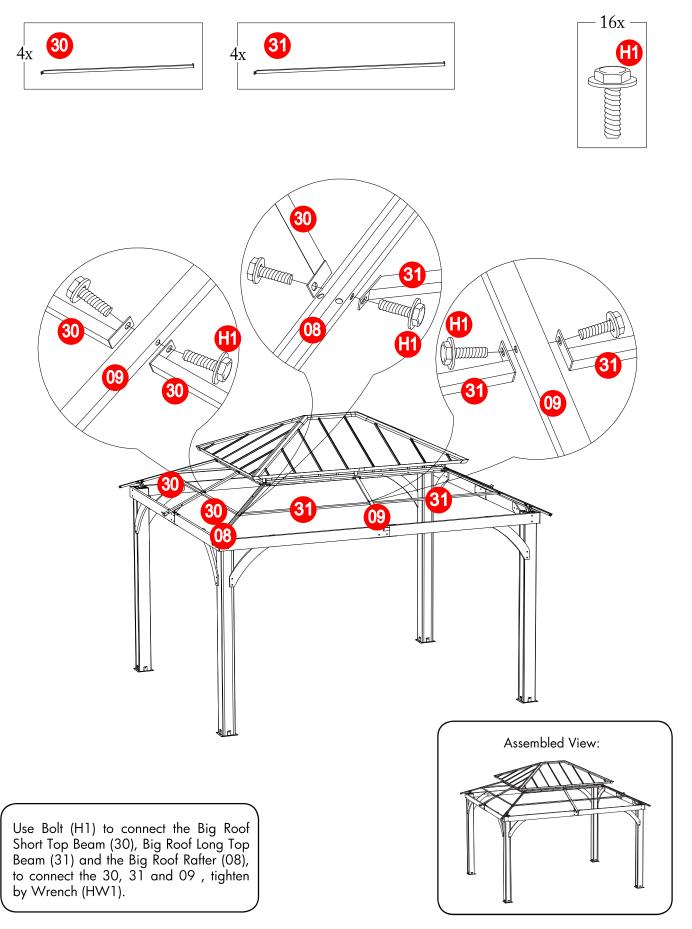


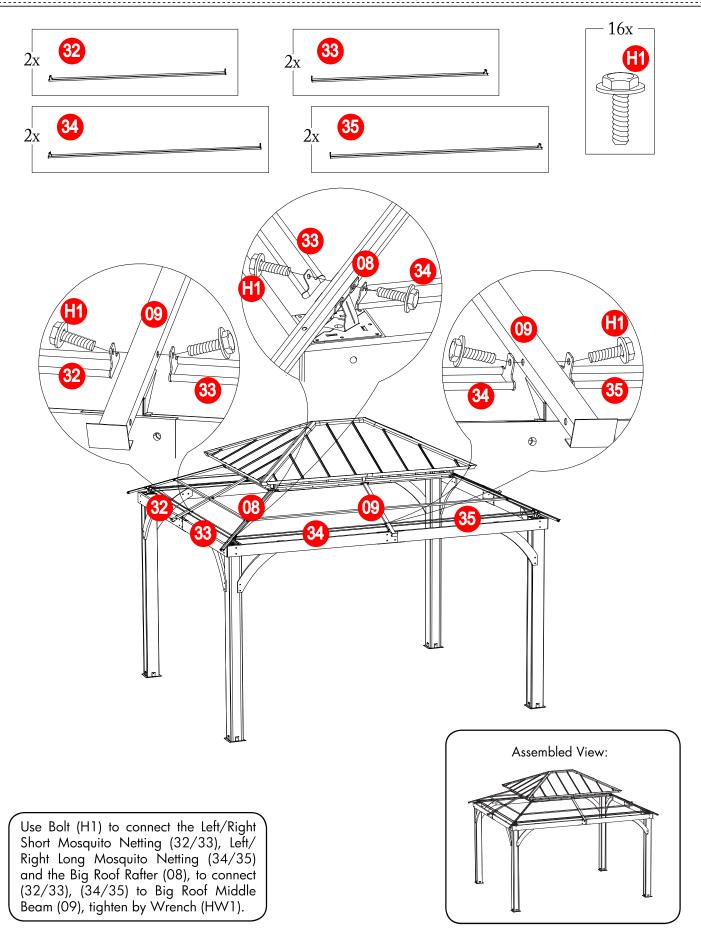

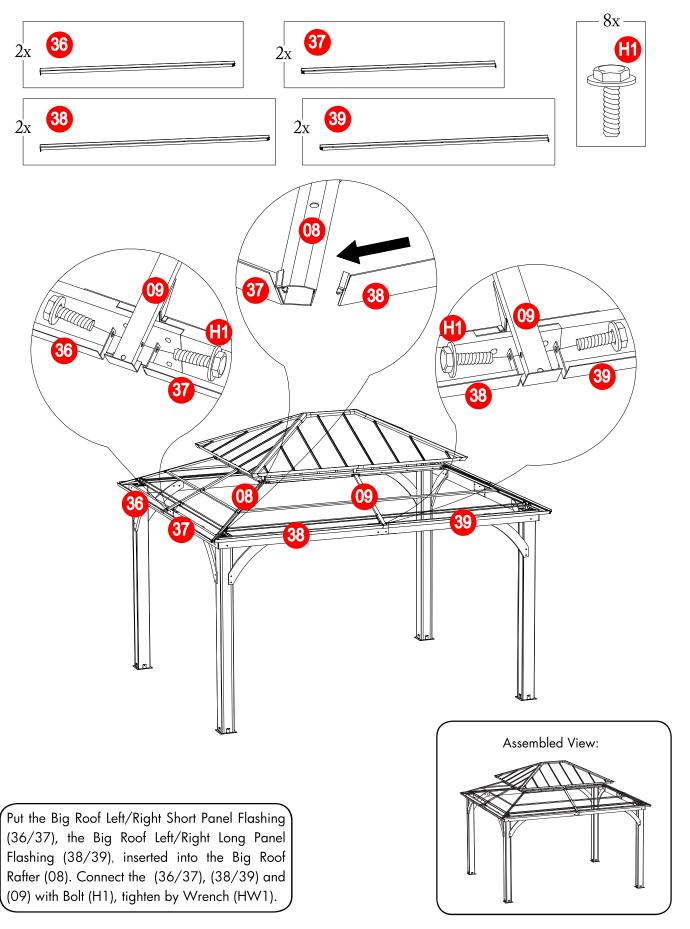


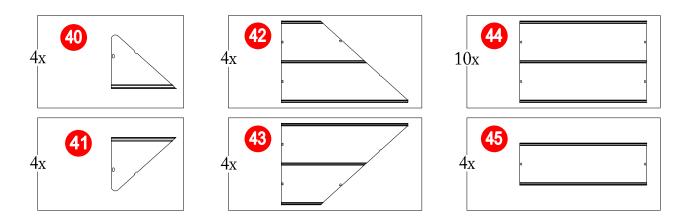


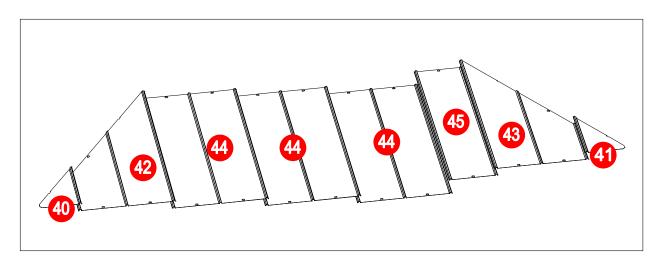


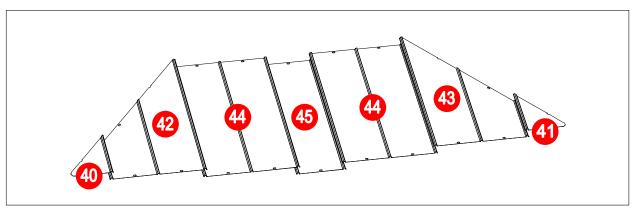


As shown in the picture, place the Panels (40/41/42/43/44/45) in turn.

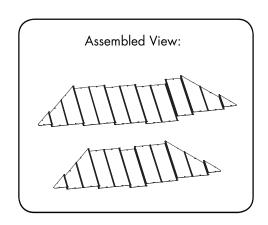

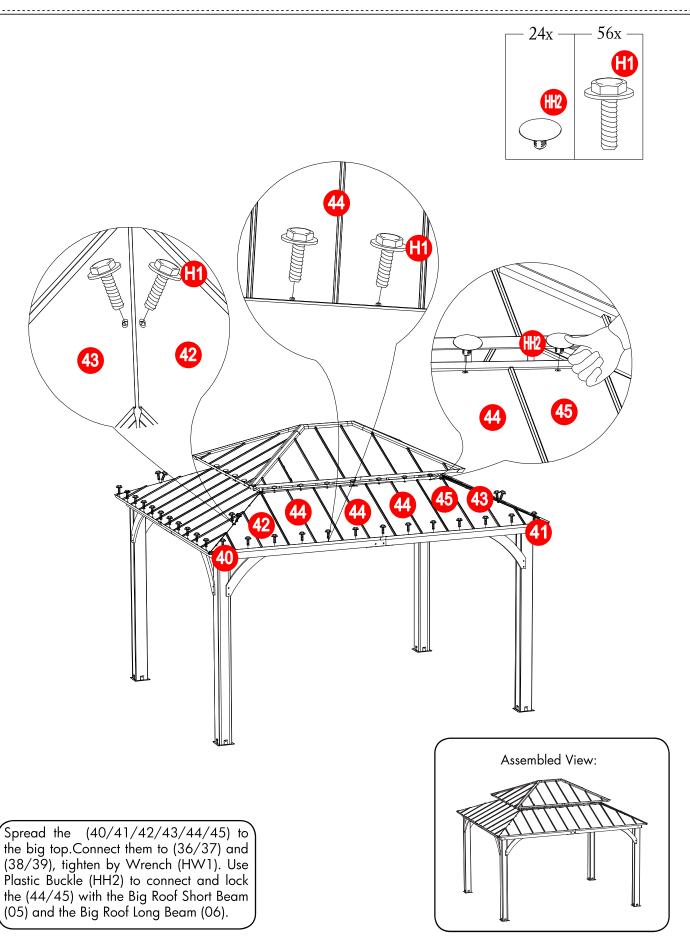

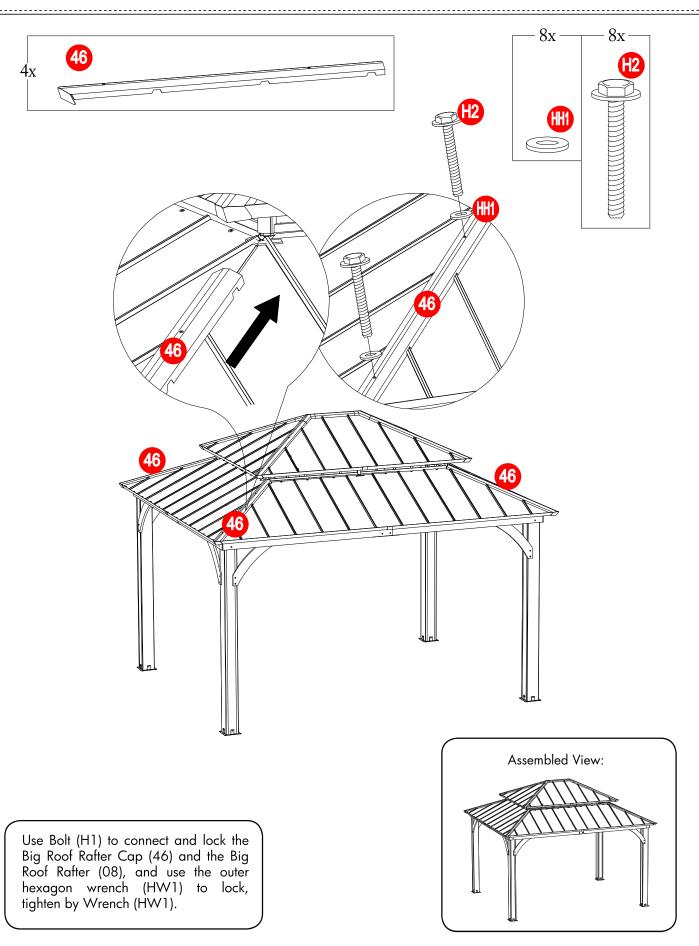

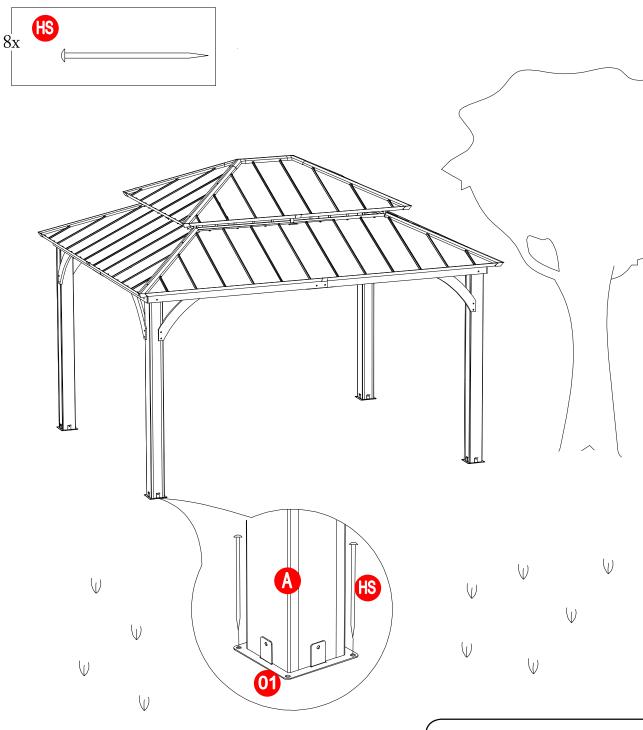

Fasten the tent to the flat ground with Stake (HS) through the Post Base (01).

