




# INSTRUCTION SHEET

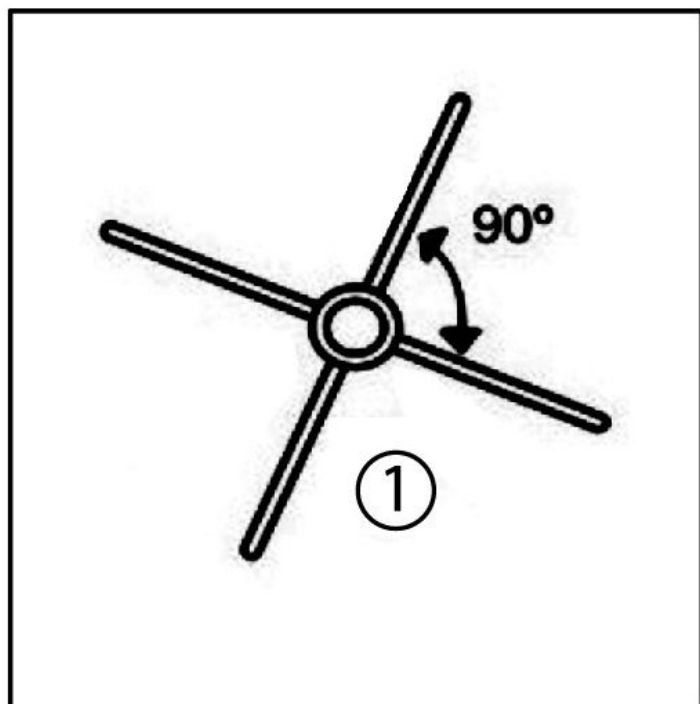


INSTALL THE STAND

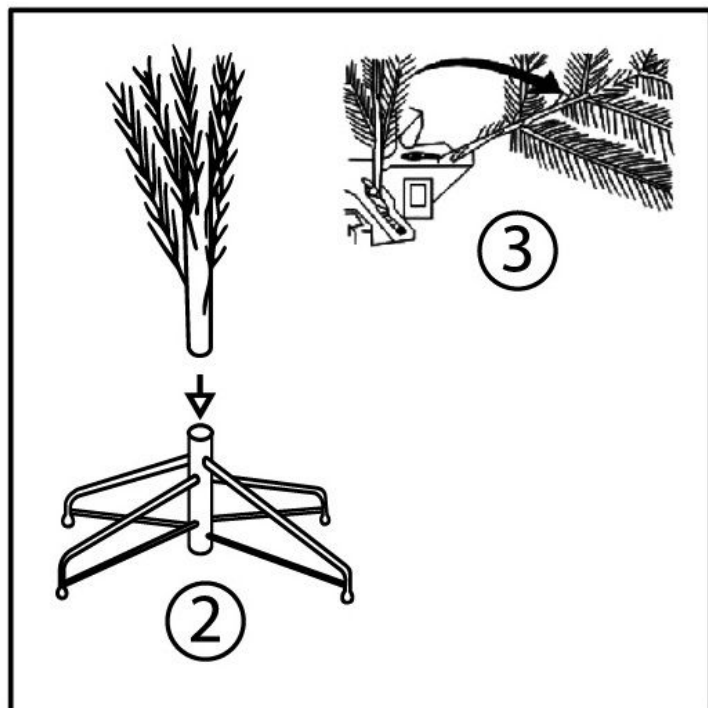

THE BRANCHES SPREAD OUT AUTOMATICALLY  
AND STAND STILL AT THE HINGE

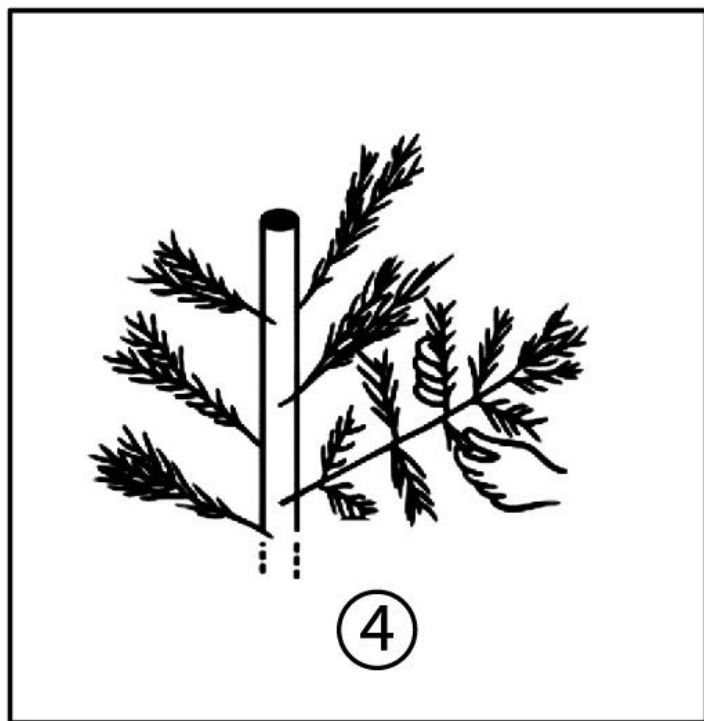

OPEN THE LEAVES OF THE BRANCH AND  
ADJUST THEM, SO THEY SPREAD OUT  
BOTH RIGHT AND LEFT,  
IN THE WAY NATURAL LEAVES GROW

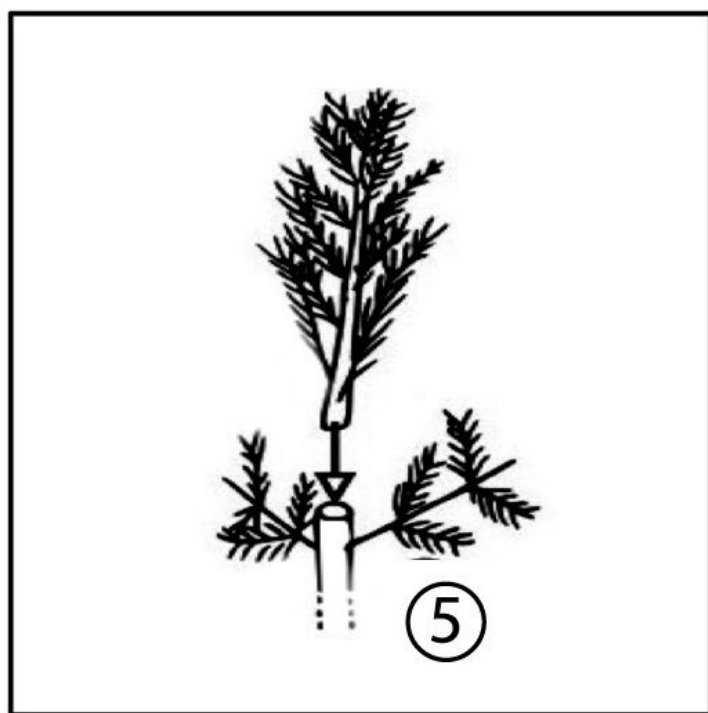

ASSEMBLE THE TOP PART OF THE TREE TO  
THE BOTTOM PART AND THERE YOU  
GET THE TREE