 


9617348EBL 1 Door Pantry

Ameriwood
HOME

Date of Purchase ____ / ____ / ____
Lot Number:

B349617348EBL1

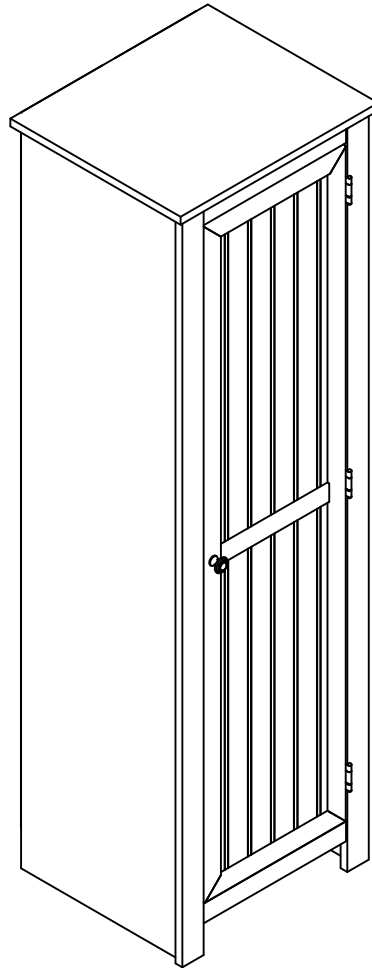

Do Not Return This Product!

Contact our customer service team for help first.

Call: 1-800-489-3351 (toll free)

 
Monday-Friday 9am - 5pm CST

Visit: www.ameriwoodhome.com

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.


Secure Your Furniture

Keep your home and family safe with the wall anchor kit that is included with the product.

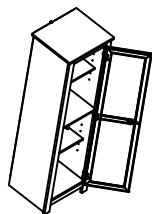

Serious or fatal crushing injuries can occur from tipping furniture.

 WARNING: Manufacturer assumes no liability for improper installation or excessive loads placed on screws or bracket. This wall anchor is not a substitute for proper adult supervision.

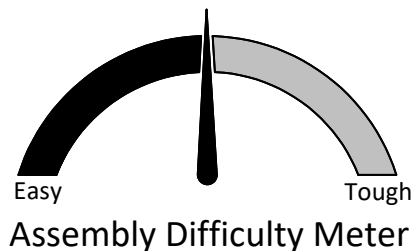


Follow Ameriwood Home



Contact Us!

Do NOT return this product!

 Contact our friendly customer service team first for help.

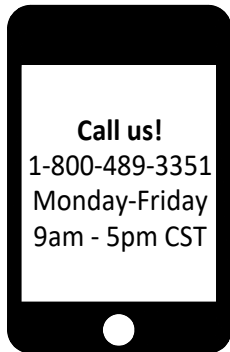

Visit ameriwoodhome.com to view the limited warranty valid in the U.S. and Canada.

Assembly Tips



 
Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**


ESTIMATED ASSEMBLY TIME: **2 HOURS**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with a **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.



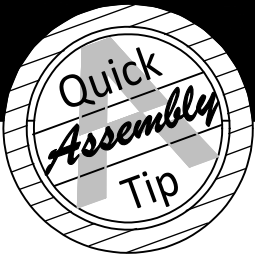





Before You Start

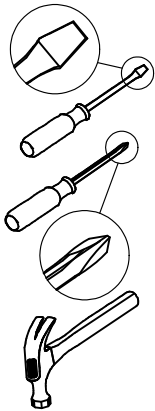 

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.


Cam Lock Fastening System

    This Cam Lock Fastening System will be used throughout the assembly process.

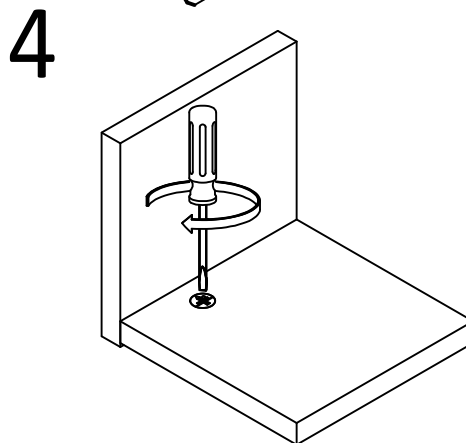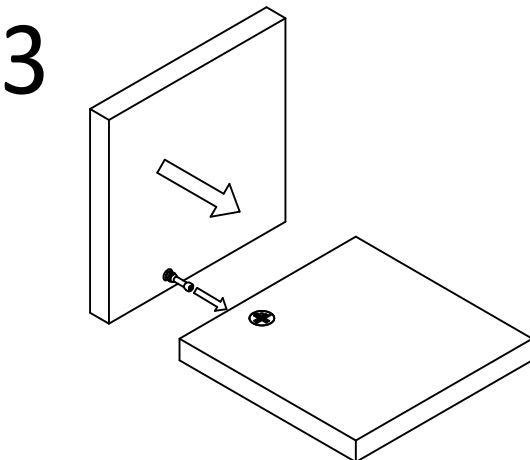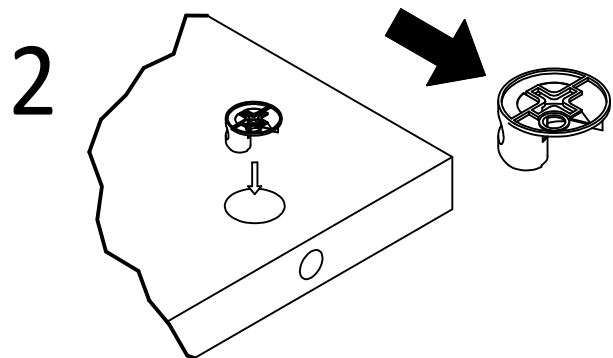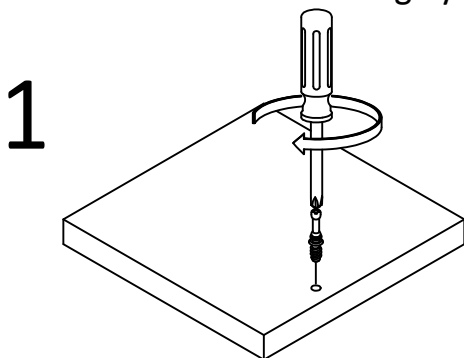


Board Identification

 
Not actual size

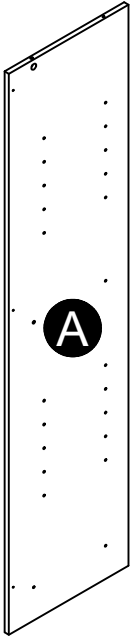


Left Panel
39617348010

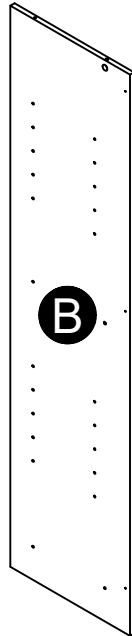 


Right Panel
39617348020

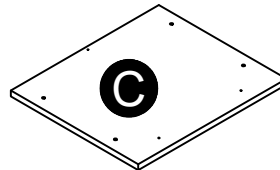 


Top
39617348031

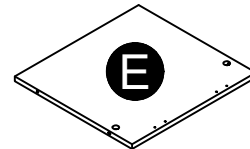 


Shelf
39617348050

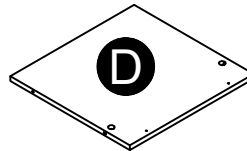 


Bottom
39617348041

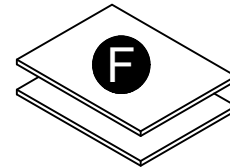 


Adjustable Shelf (2
) 39617348060

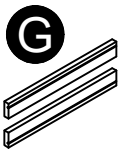 


Valance (2)
39617348071

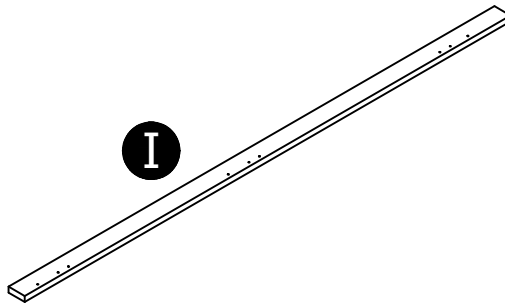 


Left Vertical Molding
39617348090

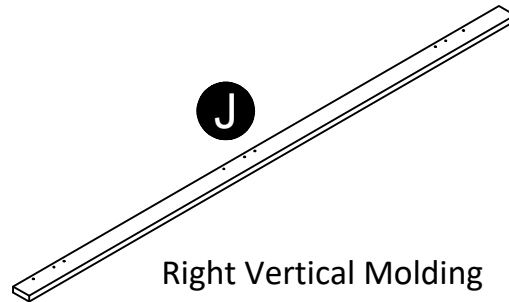 

Right Vertical Molding
39617348100

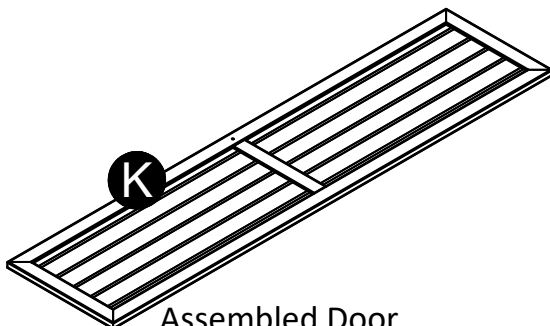 

Assembled Door
39617348110

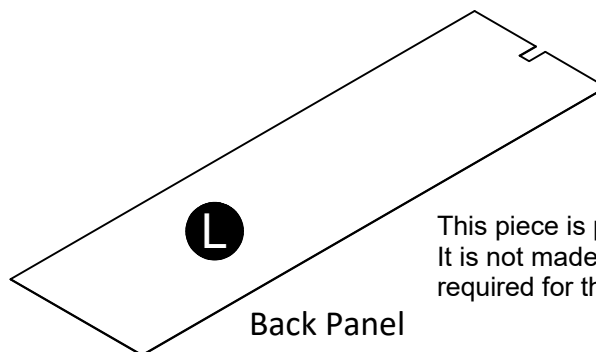 


Back Panel
K961734800

This piece is paperboard construction.
It is not made from wood, but is
required for the assembly of your unit.

Board Identification


Not actual size

 This piece is paperboard construction. It is not made from wood, but is required for the assembly of your unit.

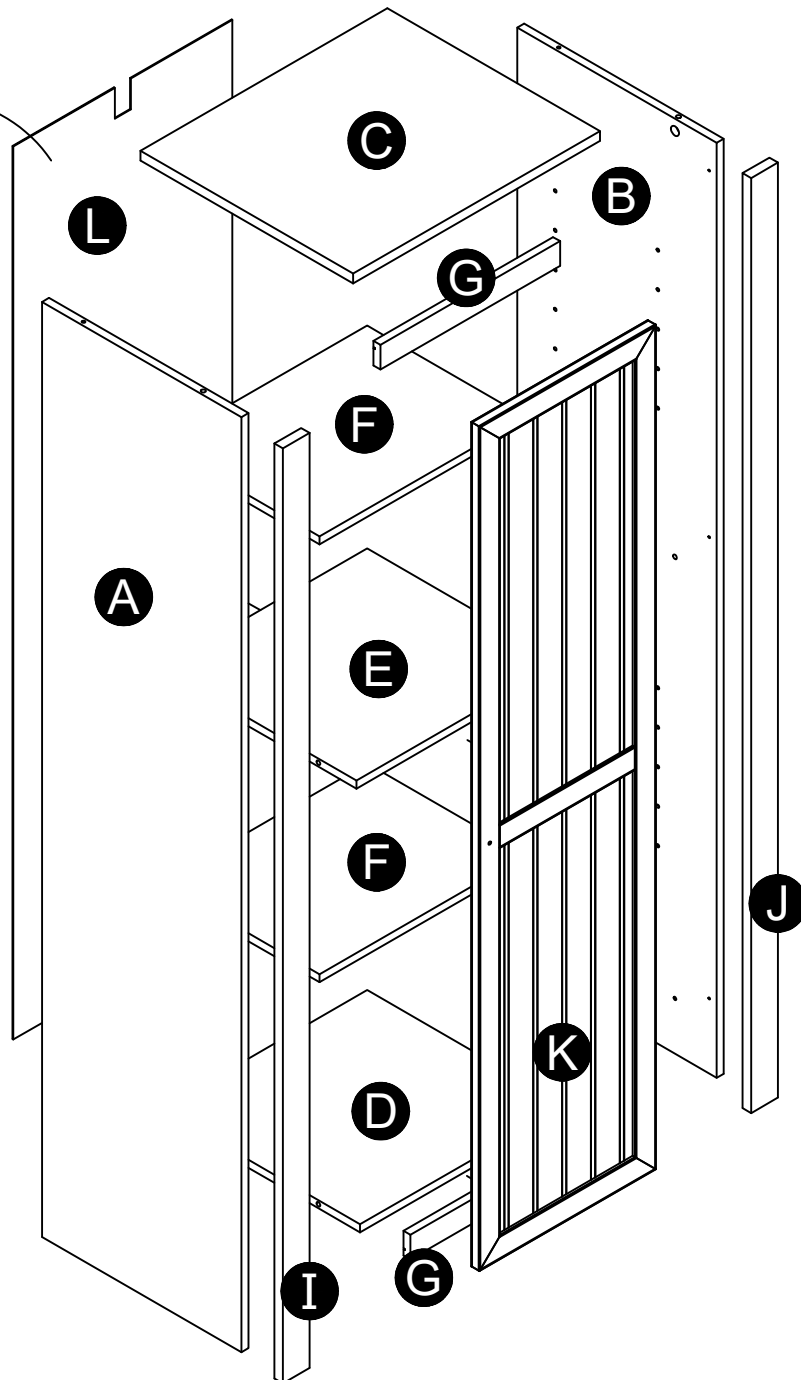


Part List

 
Actual Size

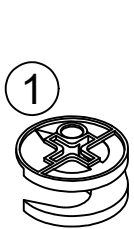


(x6)
#A22620
cam lock

 


(x6)
#A22610
cam bolt

 

(x6)
#A21520
compression dowel

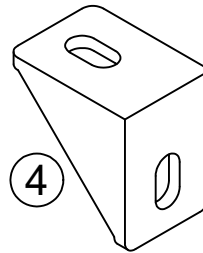 


(x6)
#A53510
angle bracket

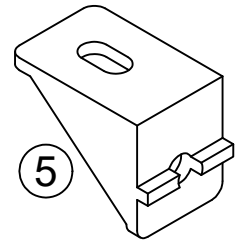 

(x4)
#A53520
molding bracket



 
(x36)
#A12120
#8 x 7/16" pan head



(x34)
#A21110
nail




 (x8)
#A80250
shelf support




(x1)
#A17600
8-32 x 1-1/8" truss

 
Not Actual Size

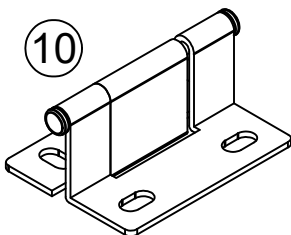


(x3)
#A60110
hinge

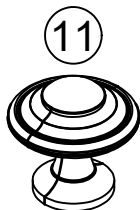 

(x1)
#A52455
knob

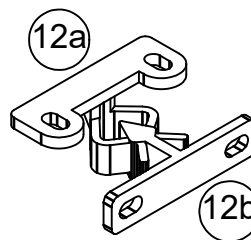 


(x1)
#A30030
plastic catch

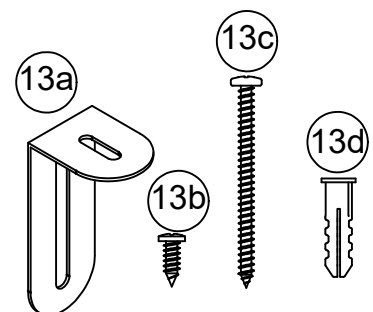 


(x1)
#A84050
safety bracket kit

 
STEP 1

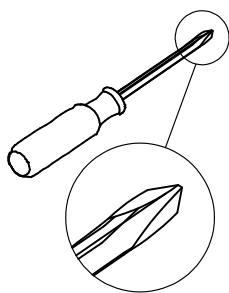






(x6)
#A12120

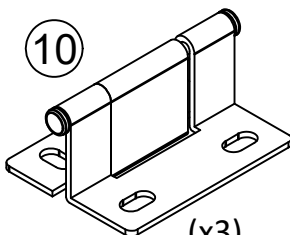 



(x3)
#A60125

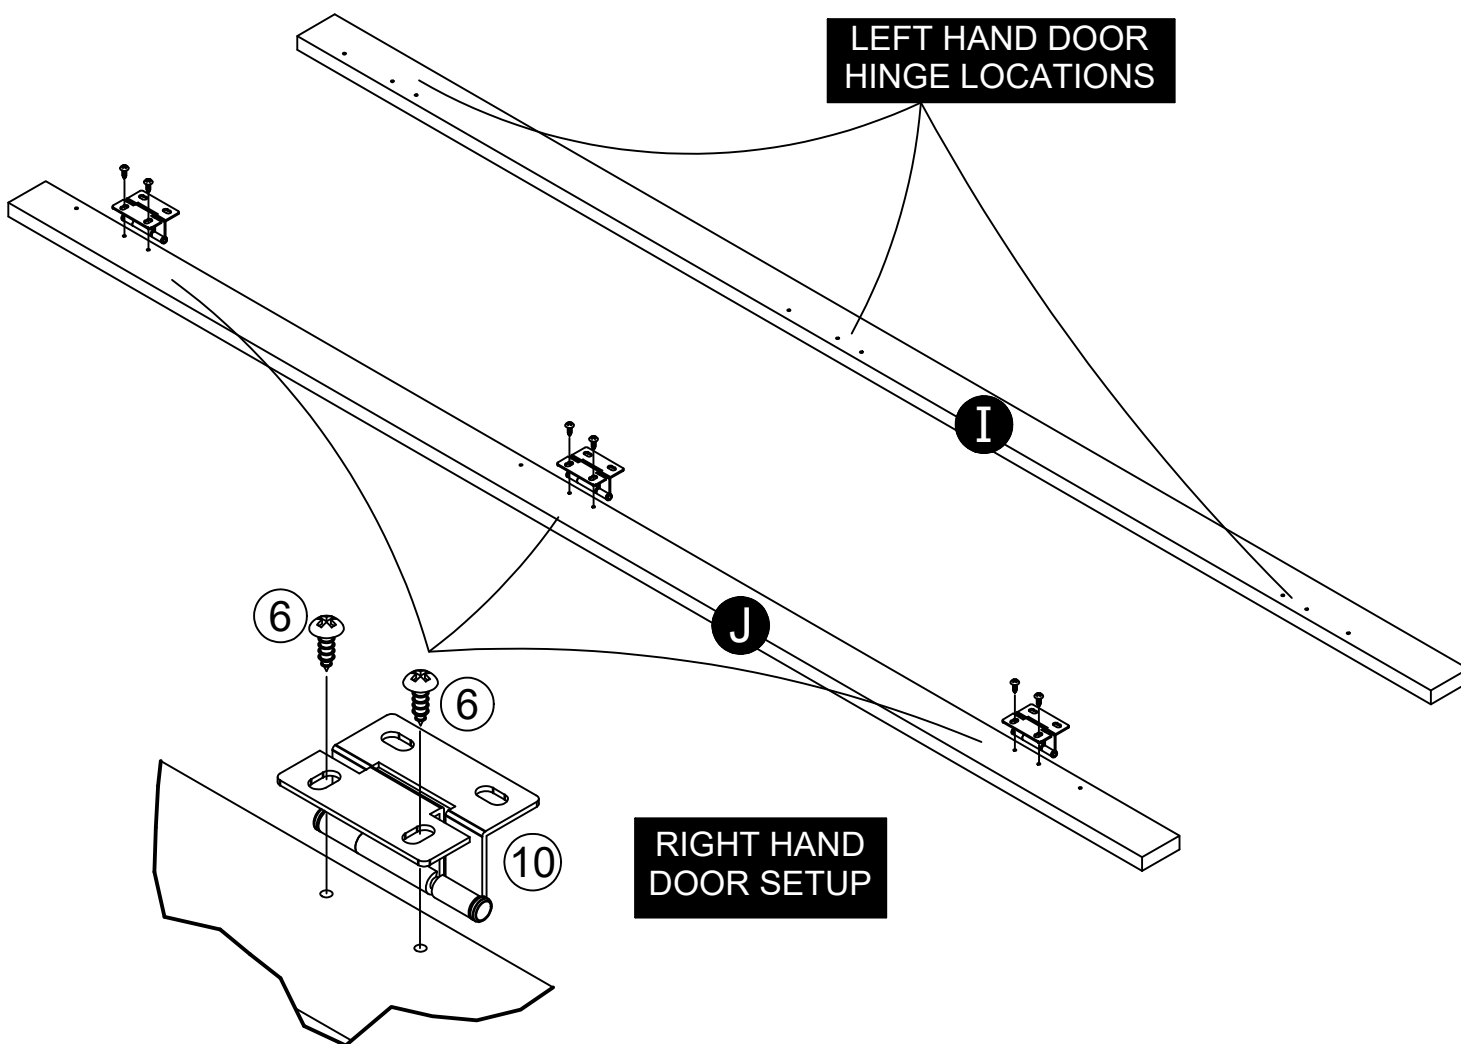 

    
 
STEP 2

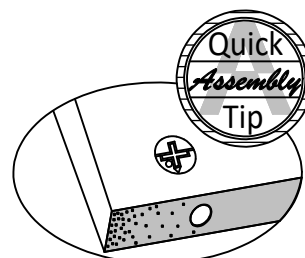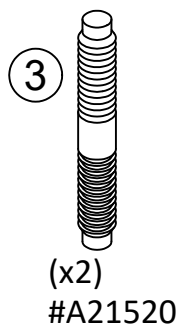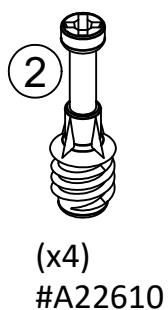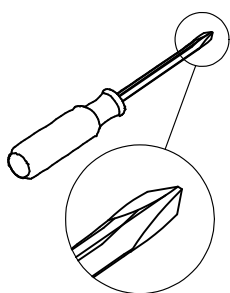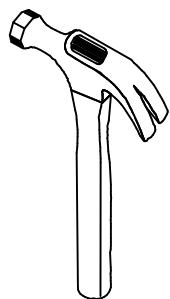

Proper orientation of CAM LOCK

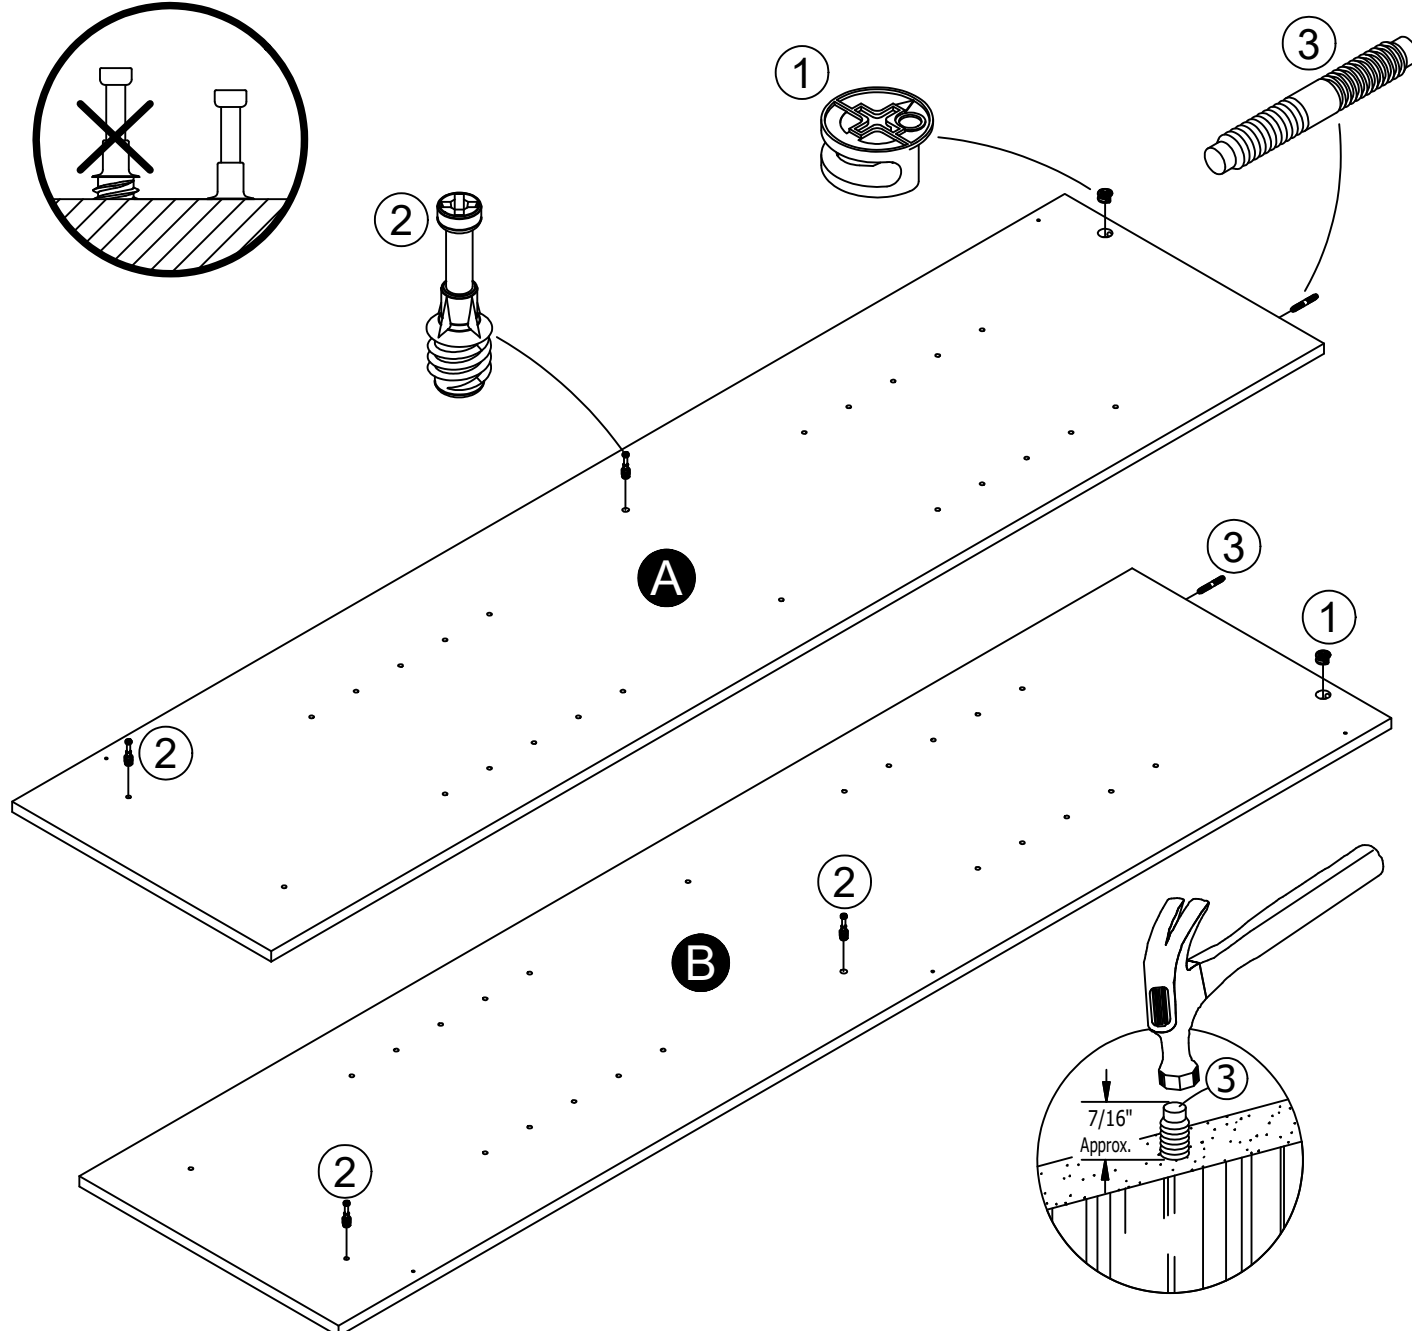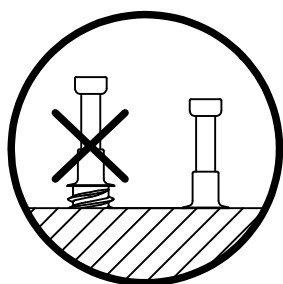  

  STEP 3

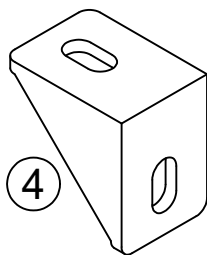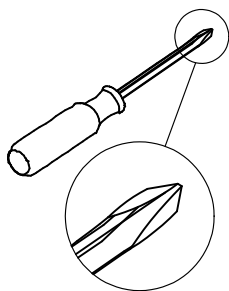


(x3)
#A53510



(x6)
#A12120


 
RIGHT HAND DOOR SETUP

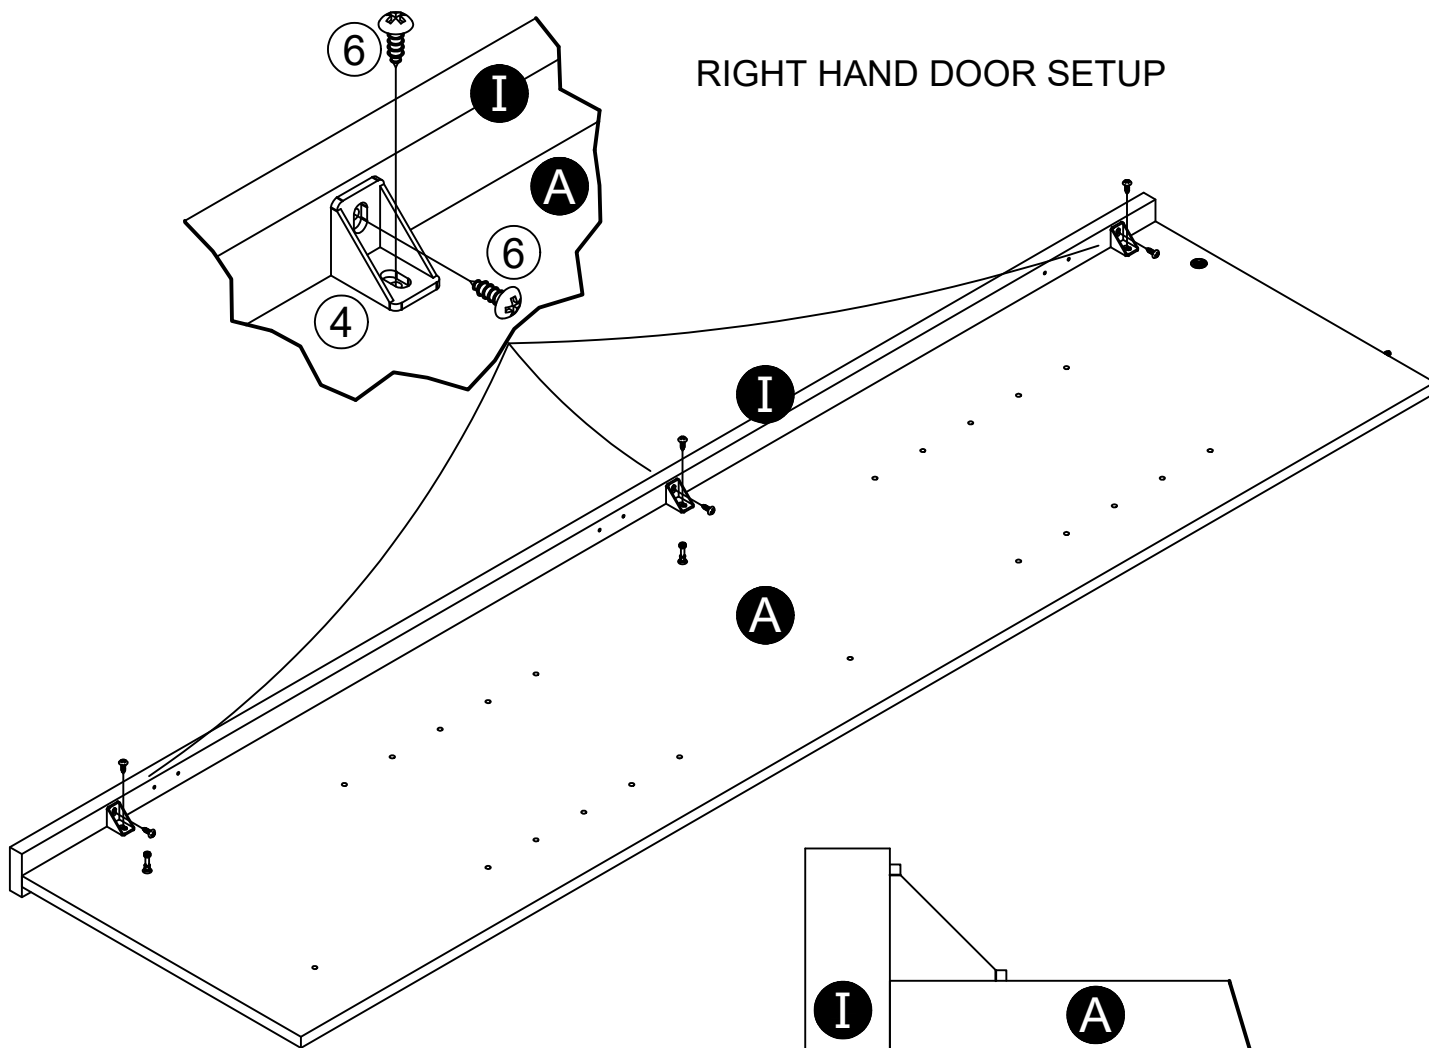

1/2"
12.00

IMPORTANT
This measurement
must be held.

  STEP 4


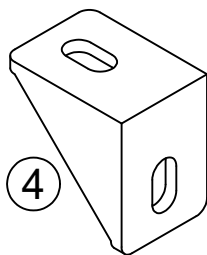
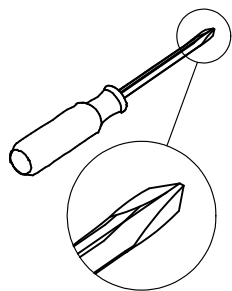


(x3)
#A53510



(x6)
#A12120




 
 
 
RIGHT HAND DOOR SETUP

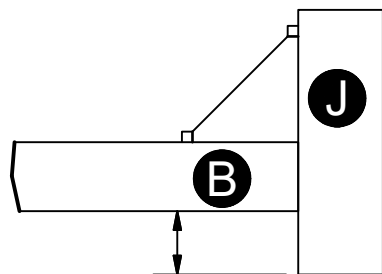
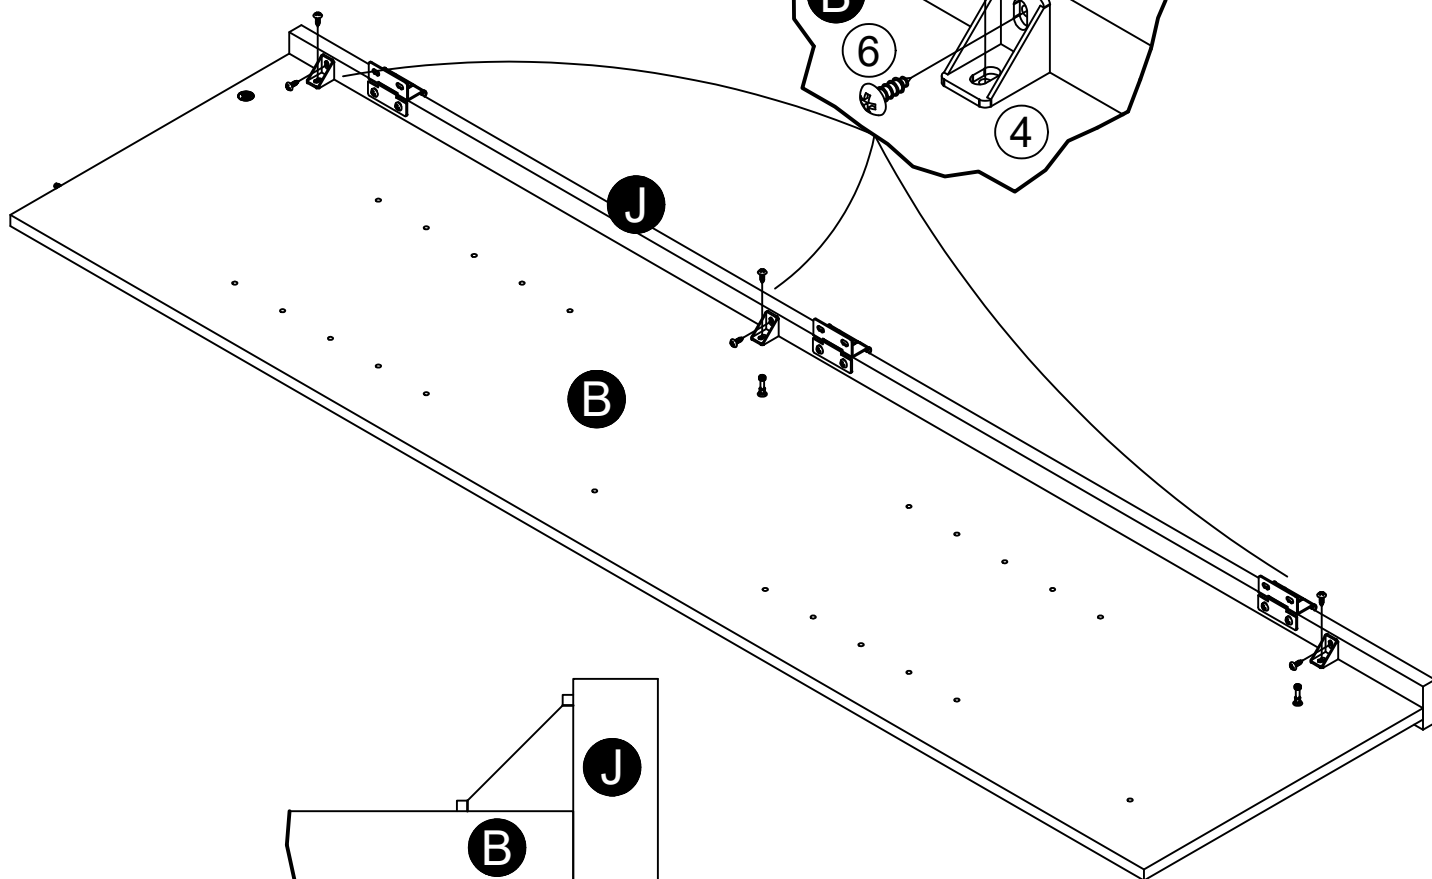
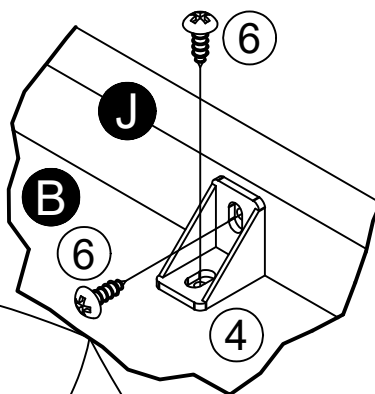


IMPORTANT
This measurement
must be held.




         STEP 5

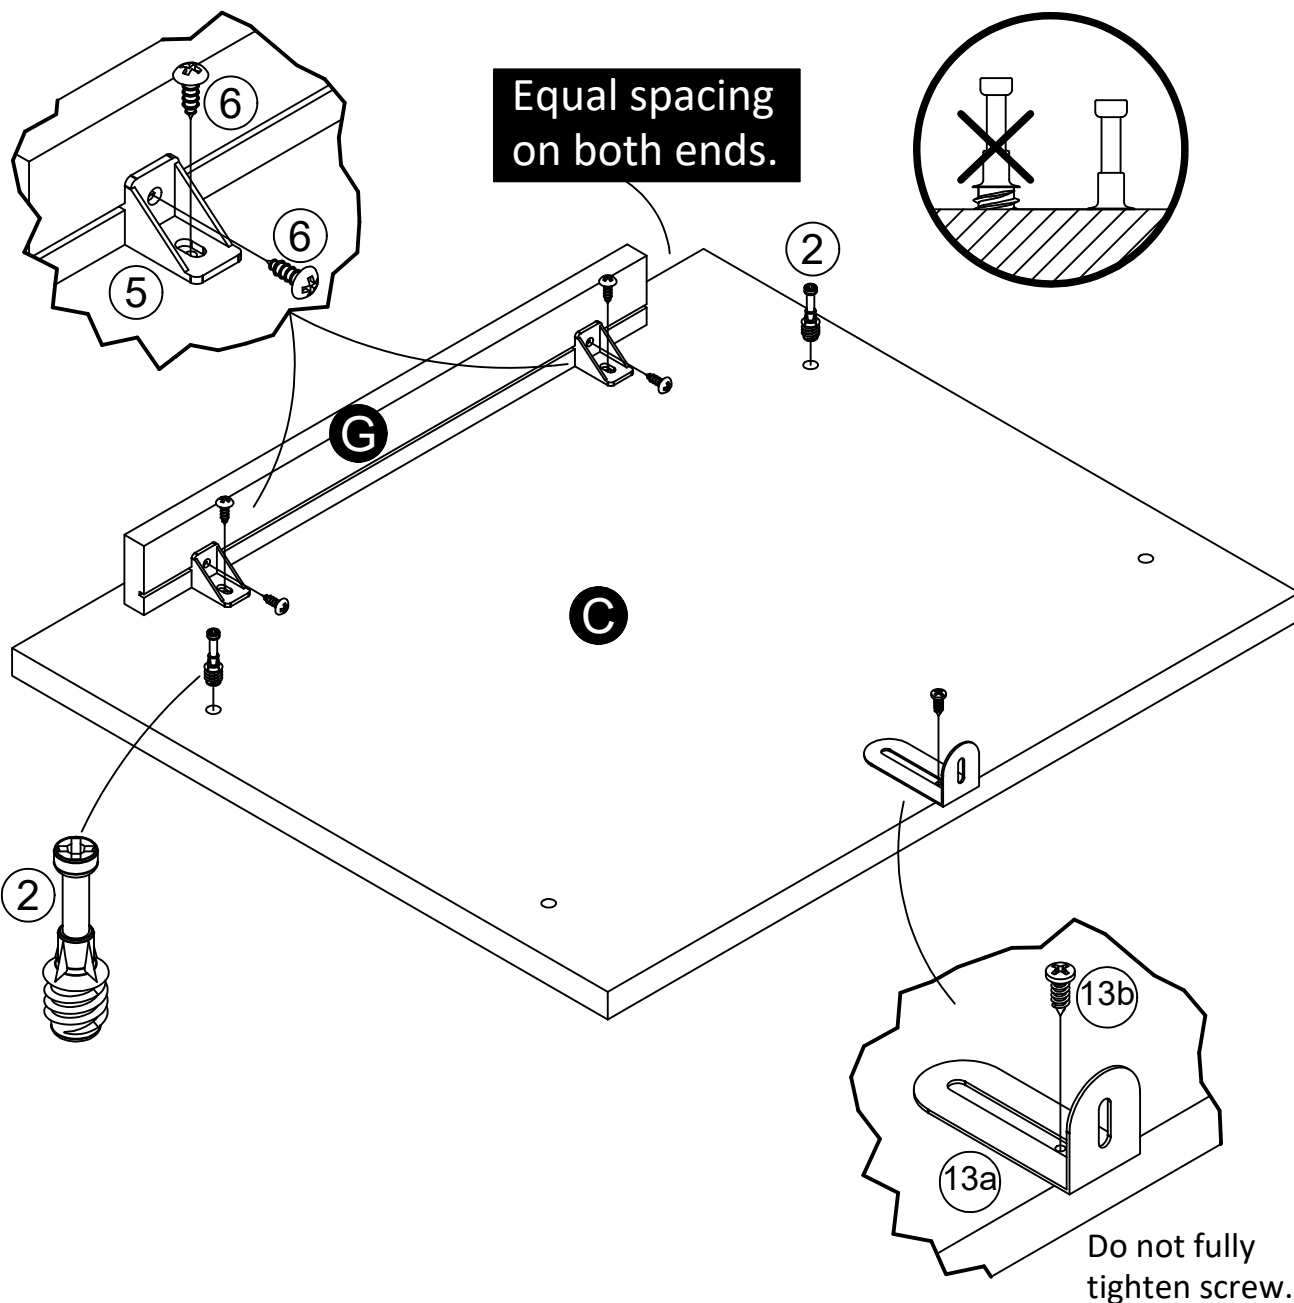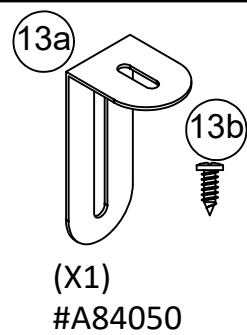
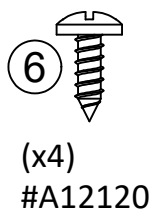
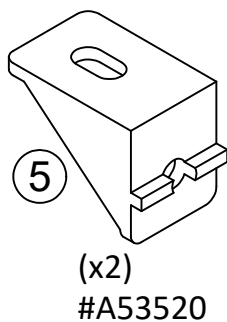
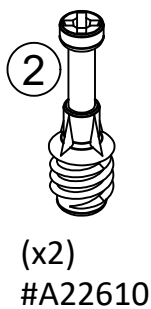
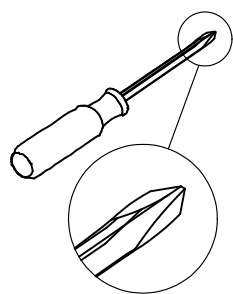


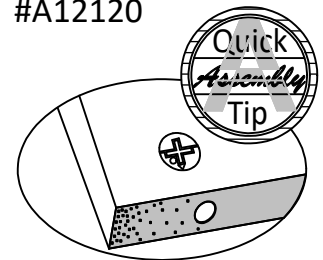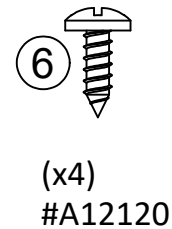


Proper orientation of CAM LOCK

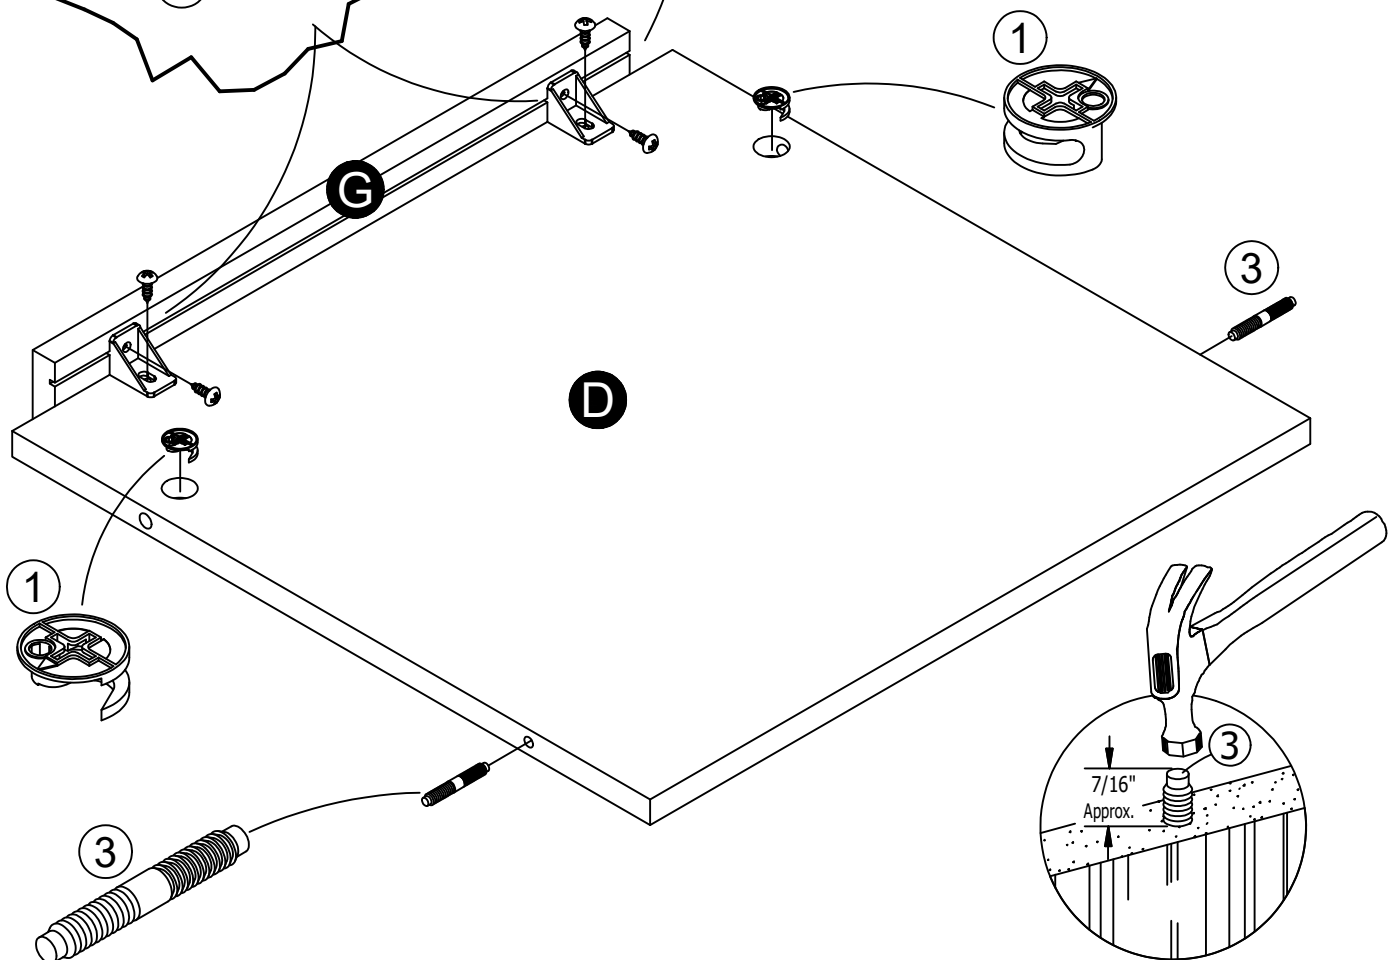 

   
 
 
STEP 7

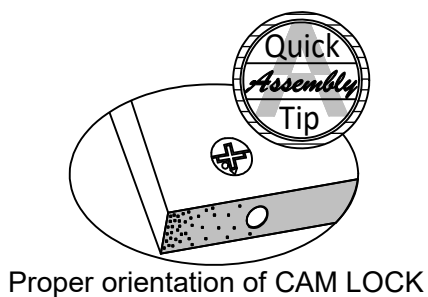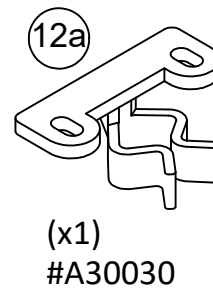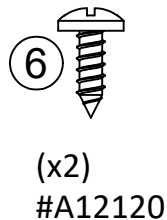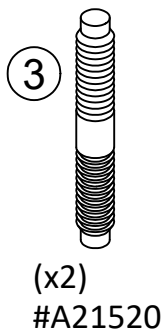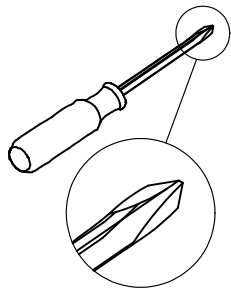



RIGHT HAND DOOR SETUP

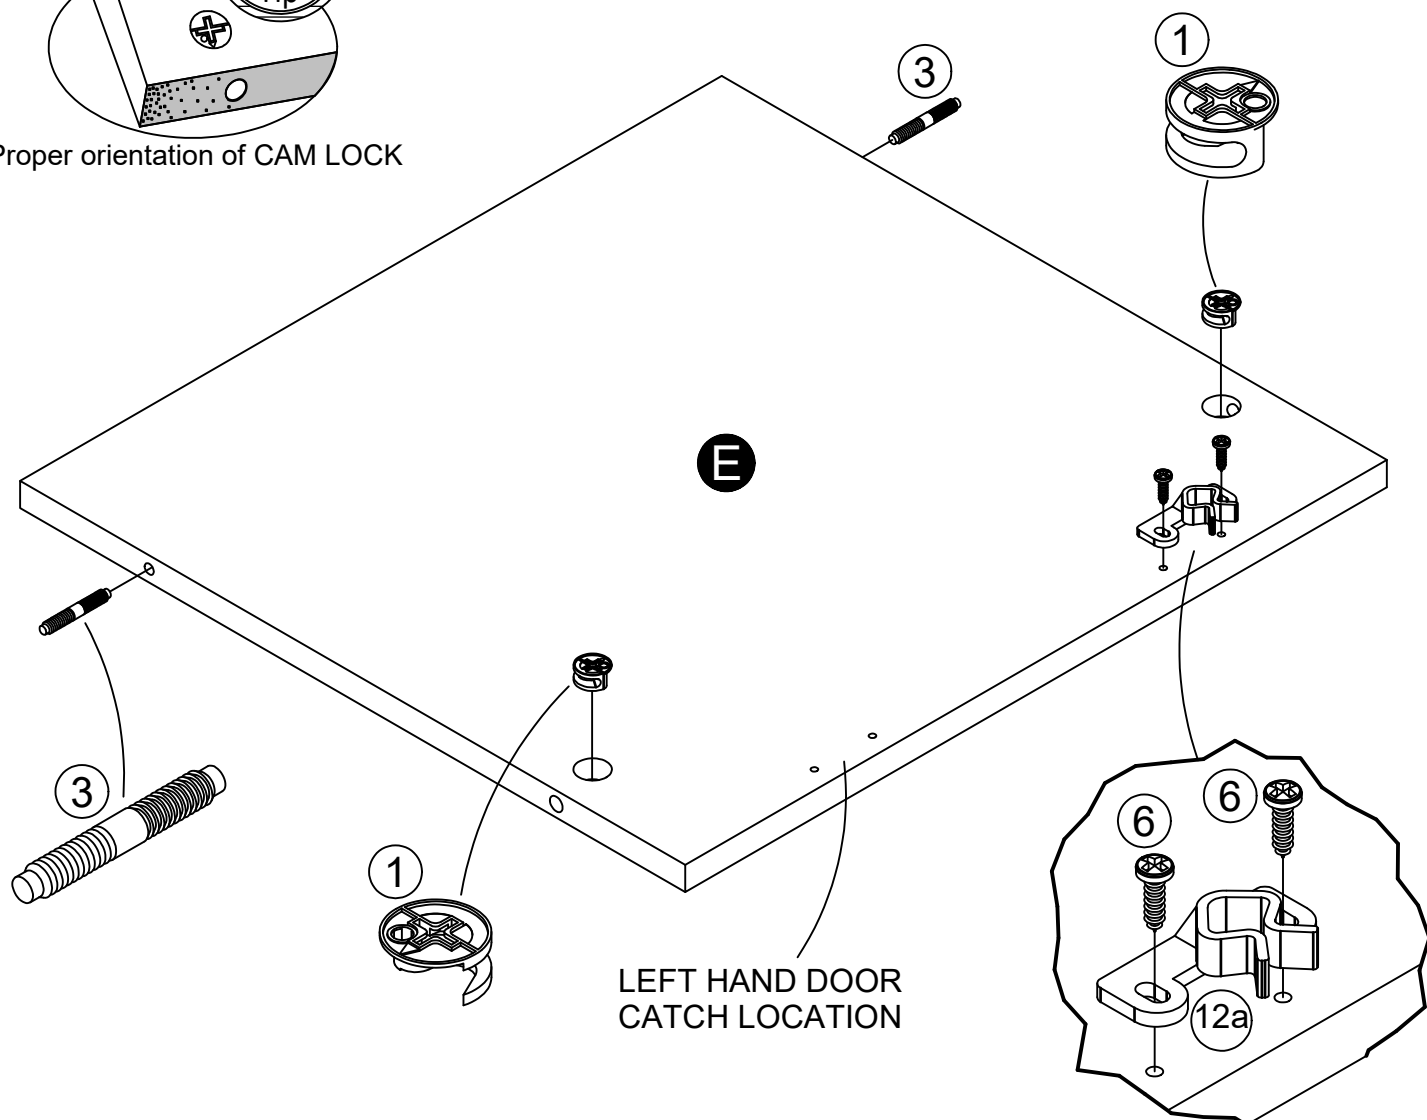 

   
STEP 8

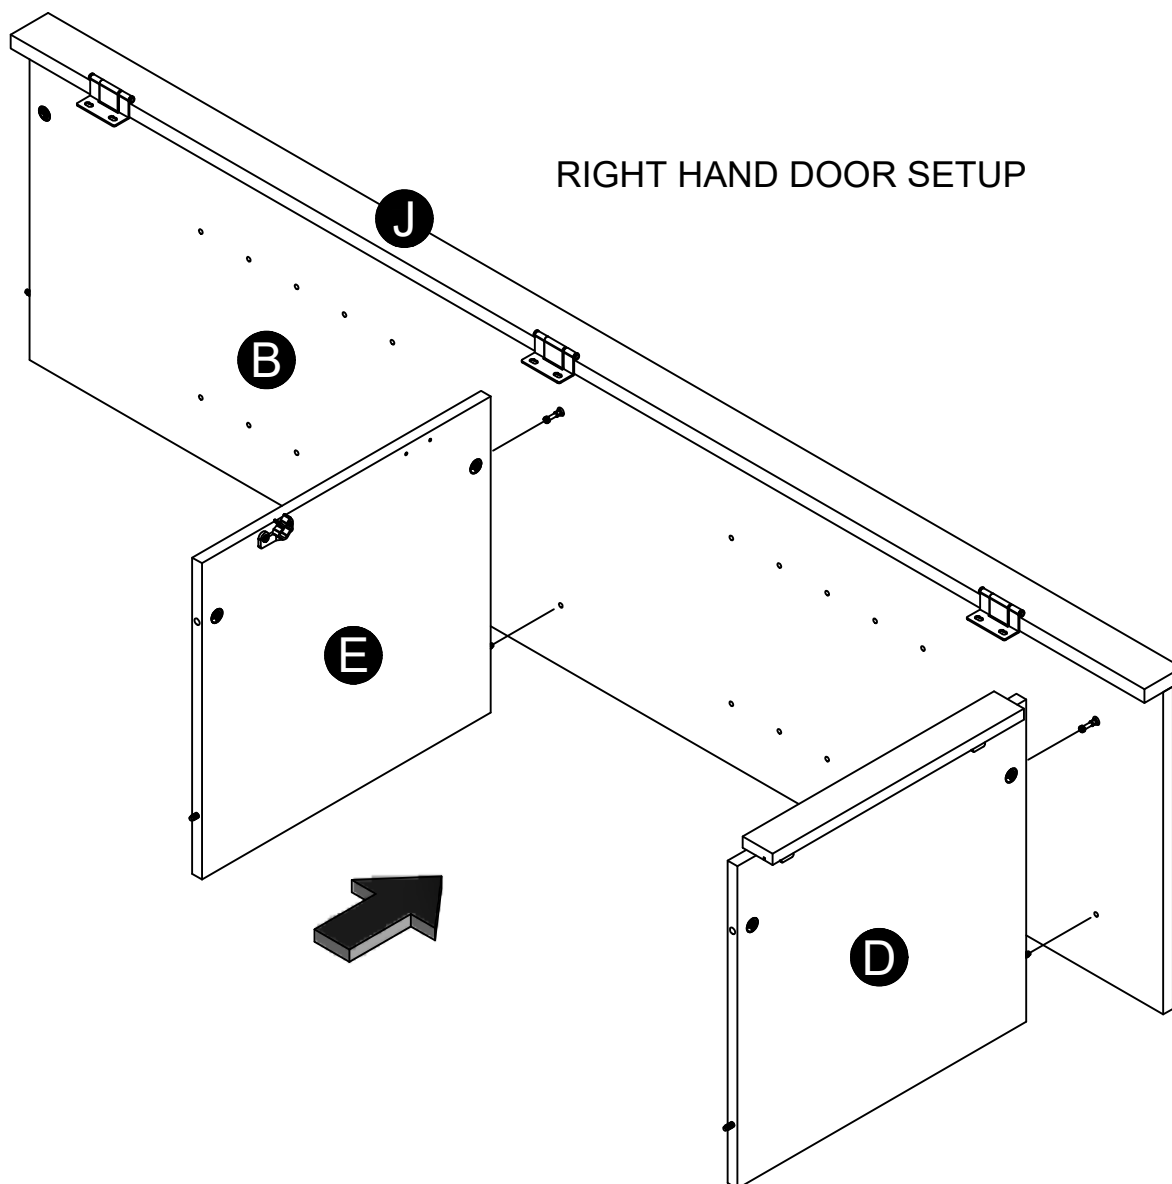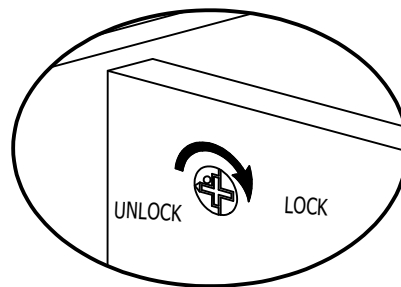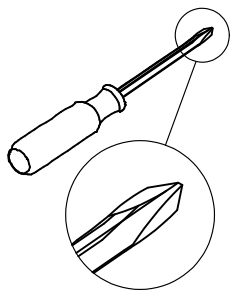

 
 
STEP 9

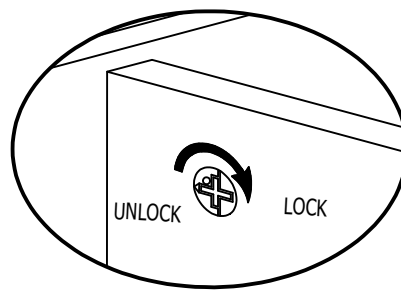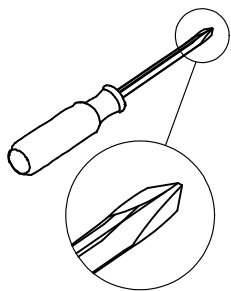


RIGHT HAND DOOR SETUP

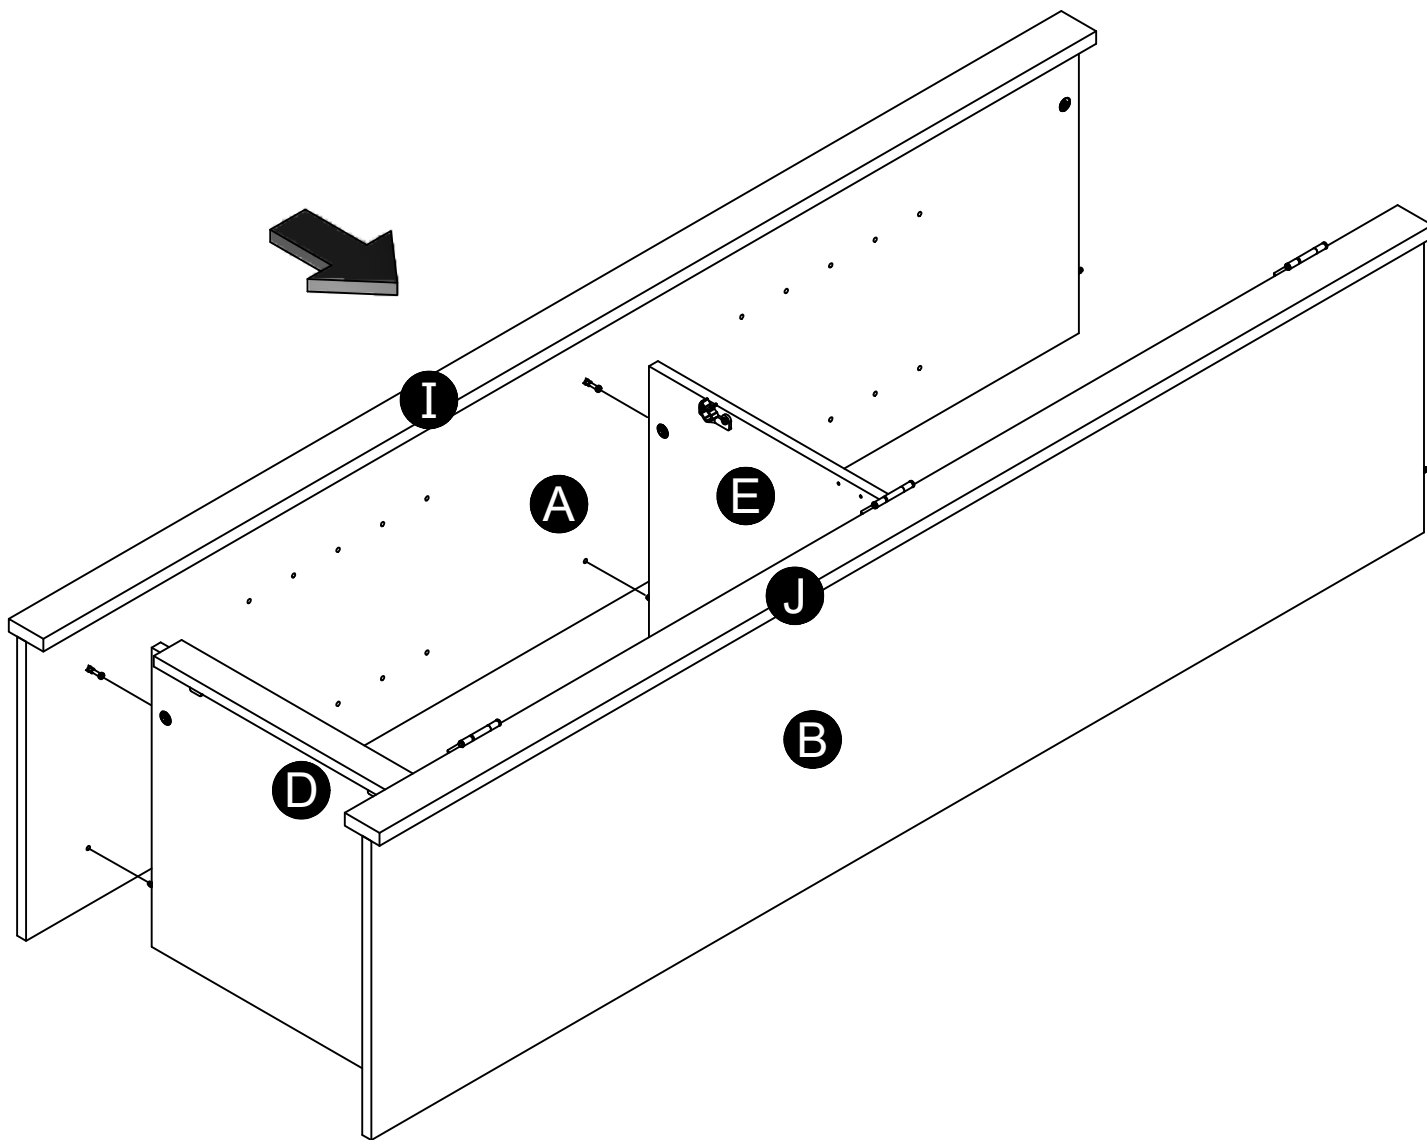 

  
STEP 10

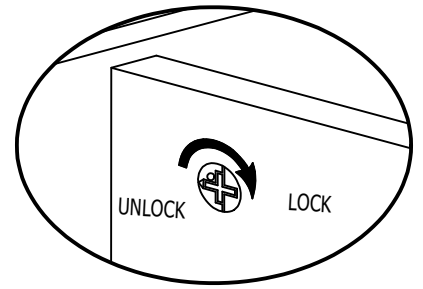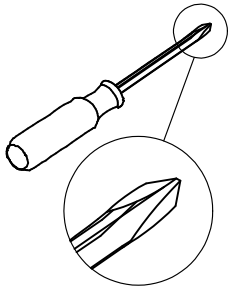

RIGHT HAND DOOR SETUP

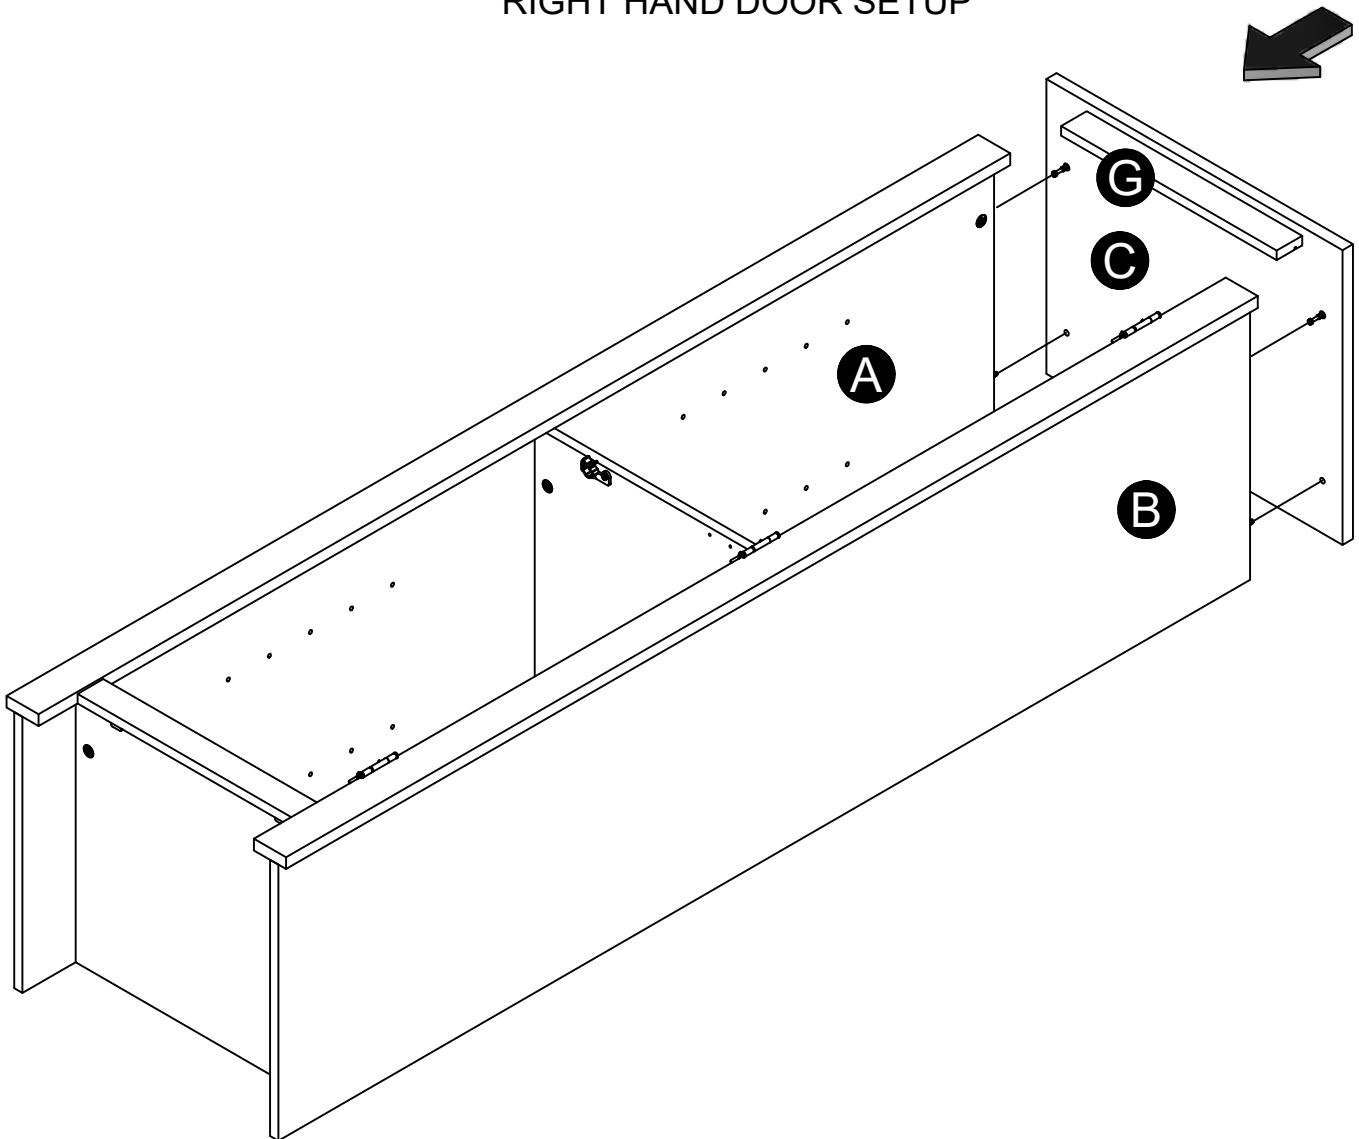 


 STEP 11

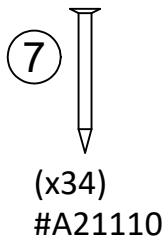



IMPORTANT! THE BACK PANEL IS A STRUCTURAL PART OF THIS UNIT AND MUST BE INSTALLED PROPERLY.

 With the help of another person, turn the unit over on its front side. Position back panel as shown. Align squarely with outer edges. Flush bottom edge of back panel with bottom edge of the bottom and nail straight into back edges of left panel (A), right panel (B), top (C) and bottom (D).

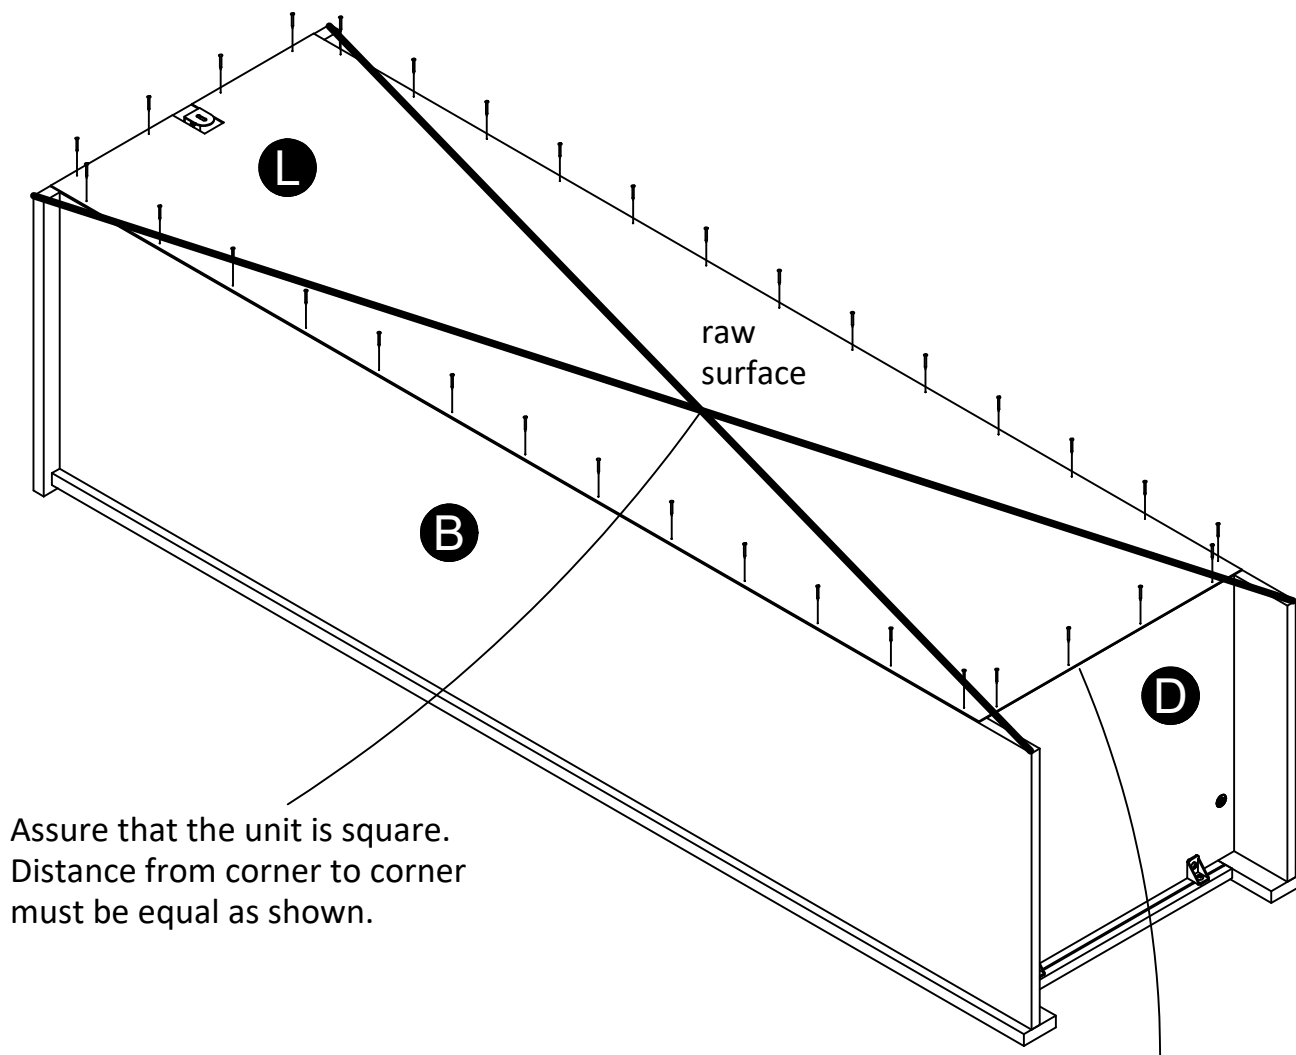


Flush the edge of the back panel with the bottom edge of the bottom (D). Align squarely and nail straight through into back edges.

  
STEP 12

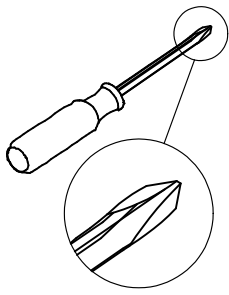


(x2)
#A12120

 


(x1)
#A17600

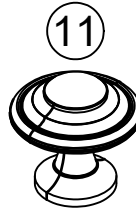 



(x1)
#A52455

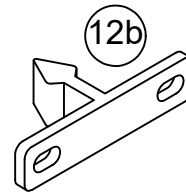 

(x1)
#A30030

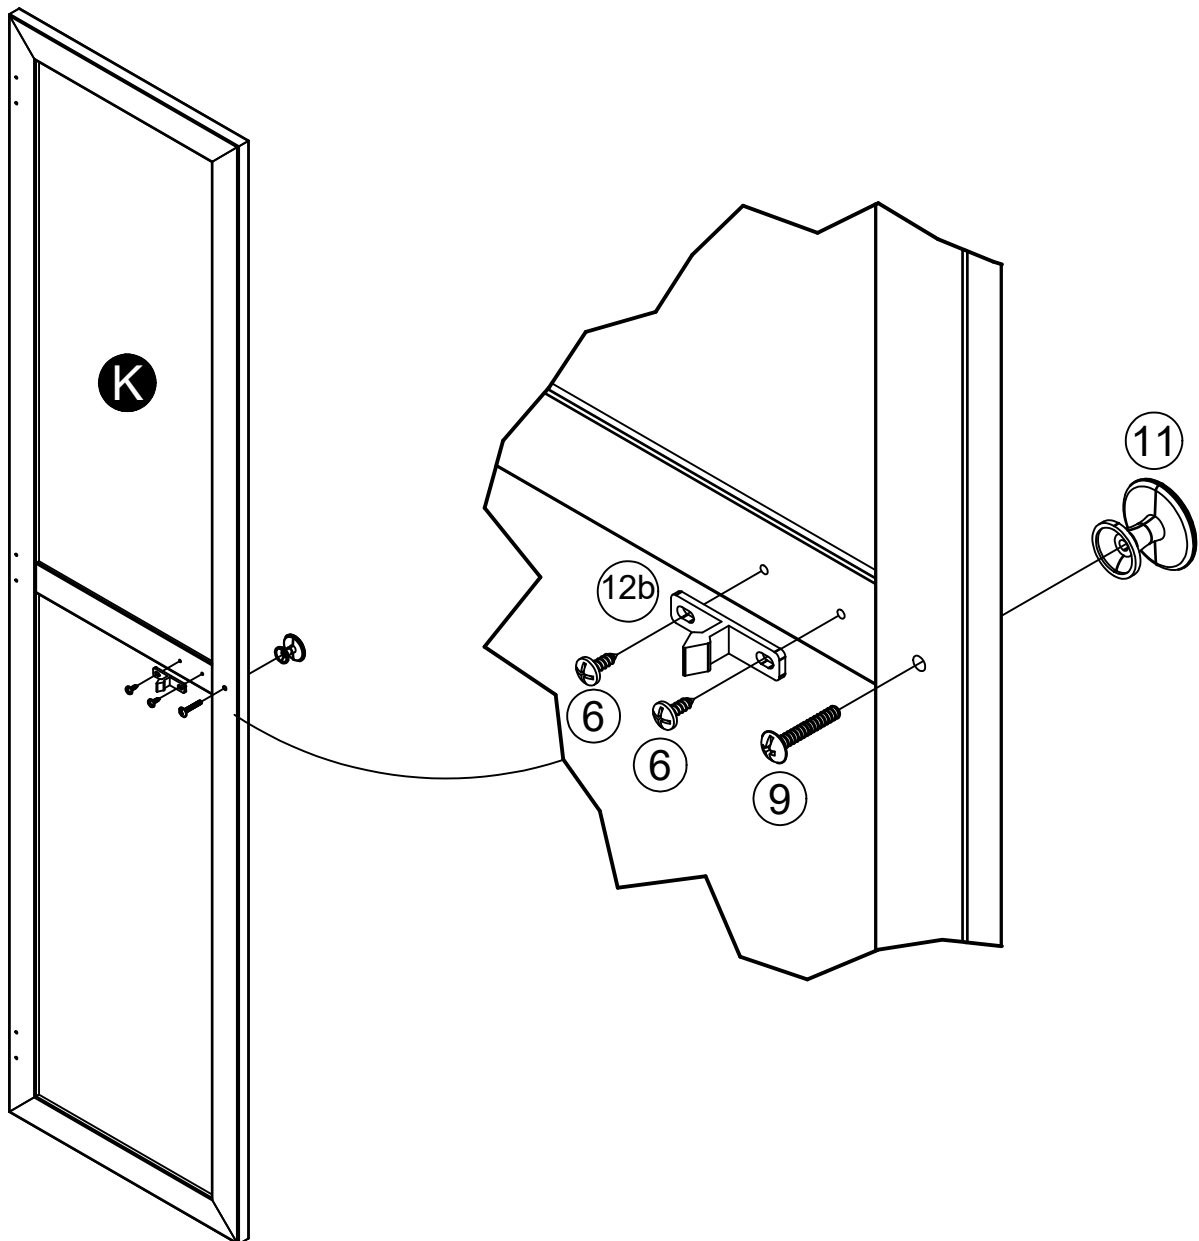 


  STEP 13

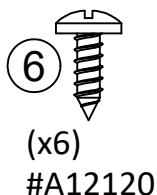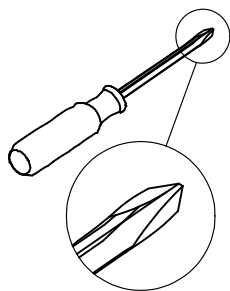


NOTE: Holes in the hinge (10) are slotted. To make door adjustments, loosen the screws (6), make adjustments and then re-tighten.

 Also the holes in the catch (12a) are slotted. To make adjustments to the catch (12a), loosen screws (6), make adjustments and then re-tighten.

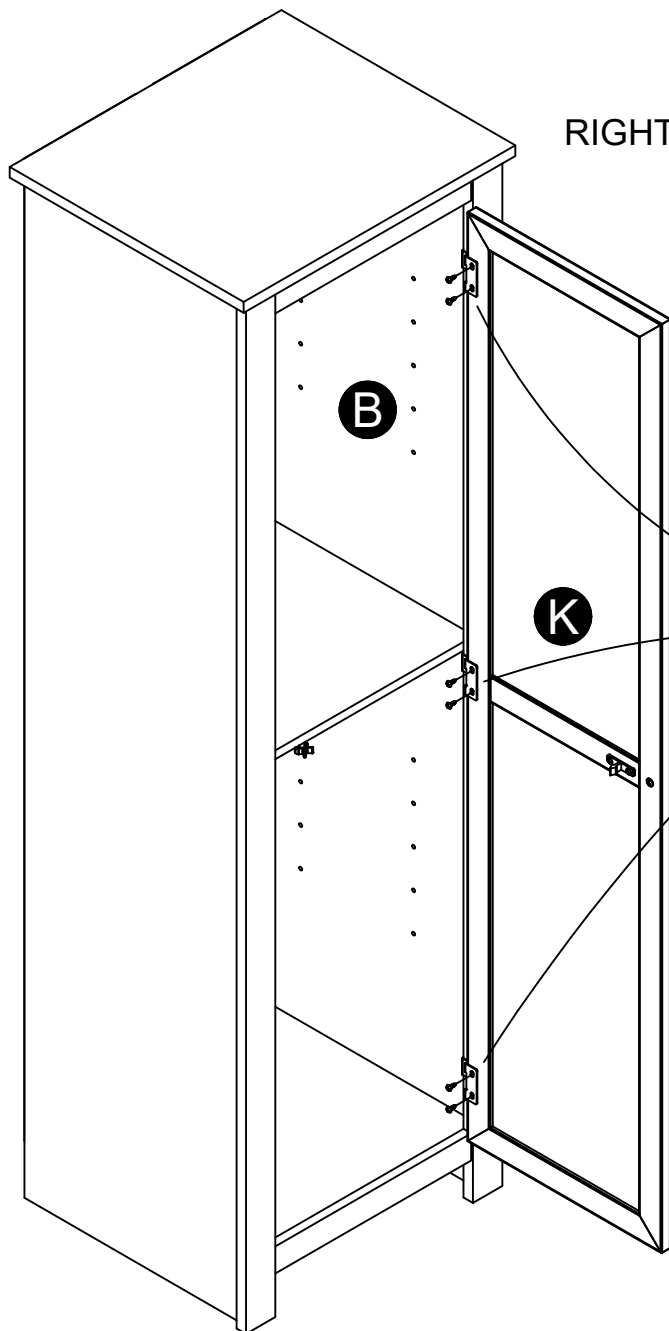


RIGHT HAND DOOR SETUP

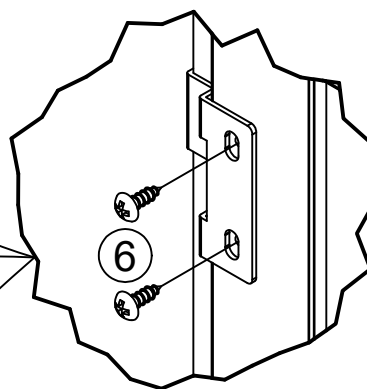 


NOTE: If using the left hand door setup, refer to steps 1 and 7 for locations of the hinges and catch.

 
STEP 14

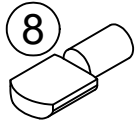

(x8)
#A80250

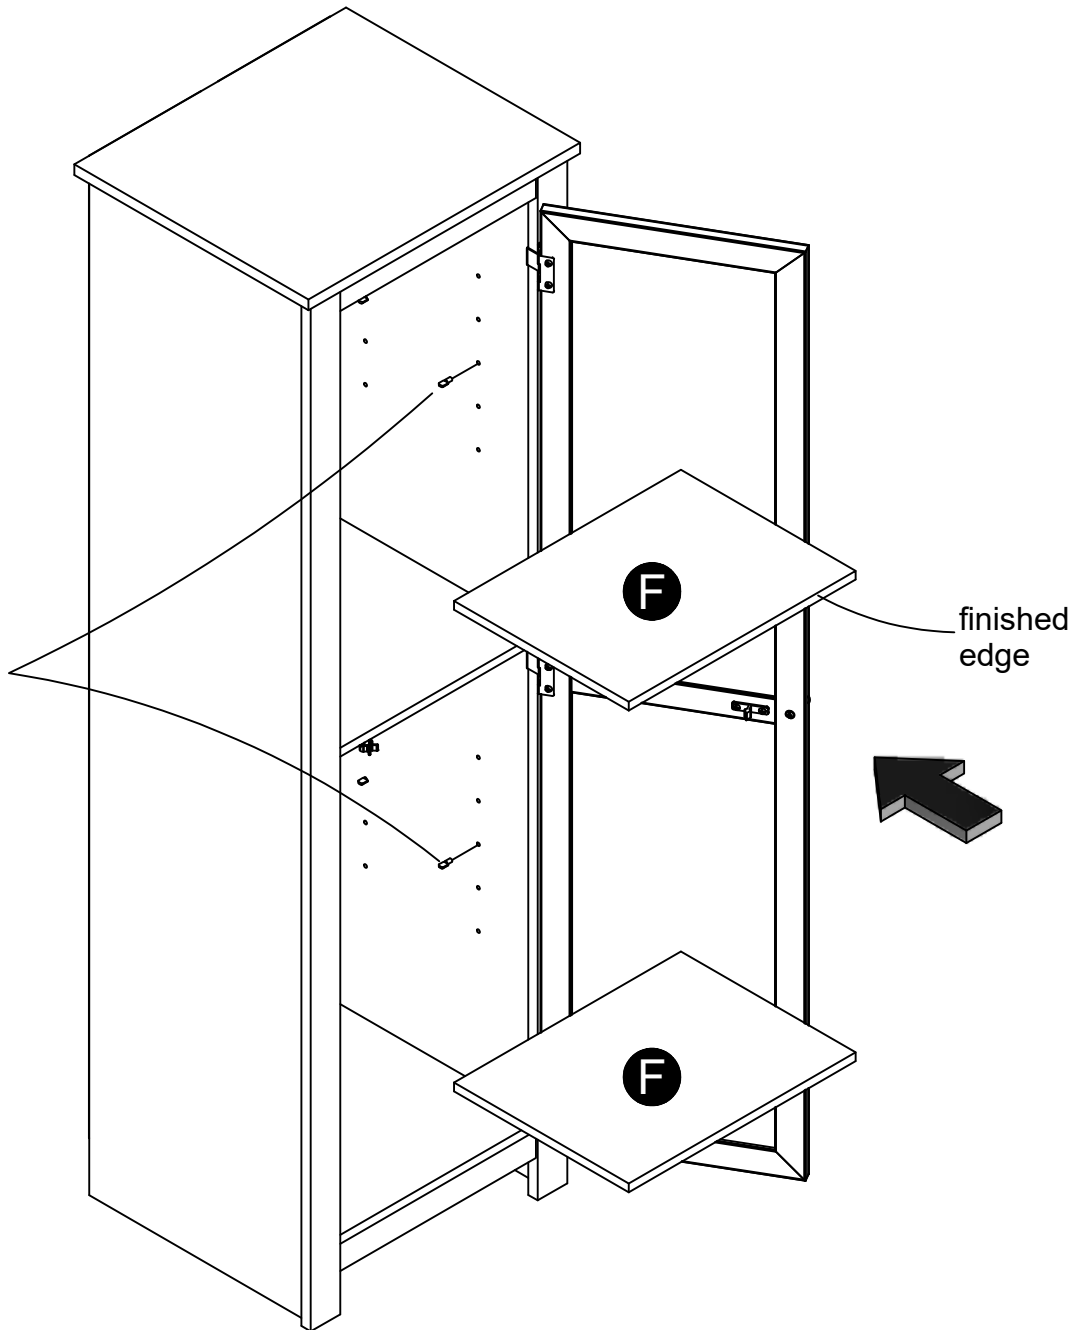 

 STEP 15

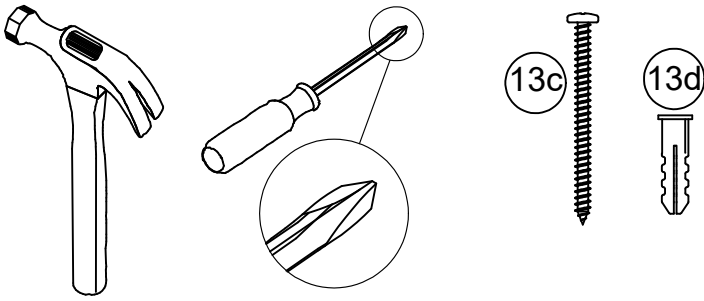

For Masonry, Concrete, or other wall materials:

Consult your local hardware store for appropriate anchors to securely attach the safety bracket.

IMPORTANT: THIS UNIT MUST BE SECURE TO THE WALL TO HELP PREVENT TIPOVER. FOLLOW THESE INSTRUCTIONS TO INSTALL THE ANTI-TIPPING SAFETY BRACKET PROVIDED WITH THIS PRODUCT.

 
WARNING

Serious or fatal crushing injuries can occur from furniture tipover.

To prevent tipover:

- * Install tipover restraint provided
- * place heaviest items in the lowest drawers
- * Unless specifically designed to accommodate, do not set TVs or other heavy objects on the top of this product
- * Never allow children to climb or hang on drawers, door, or shelves
- * Never open more than one drawer at a time

Use of tipover restraints may only reduce, but not eliminate the risk of tipover

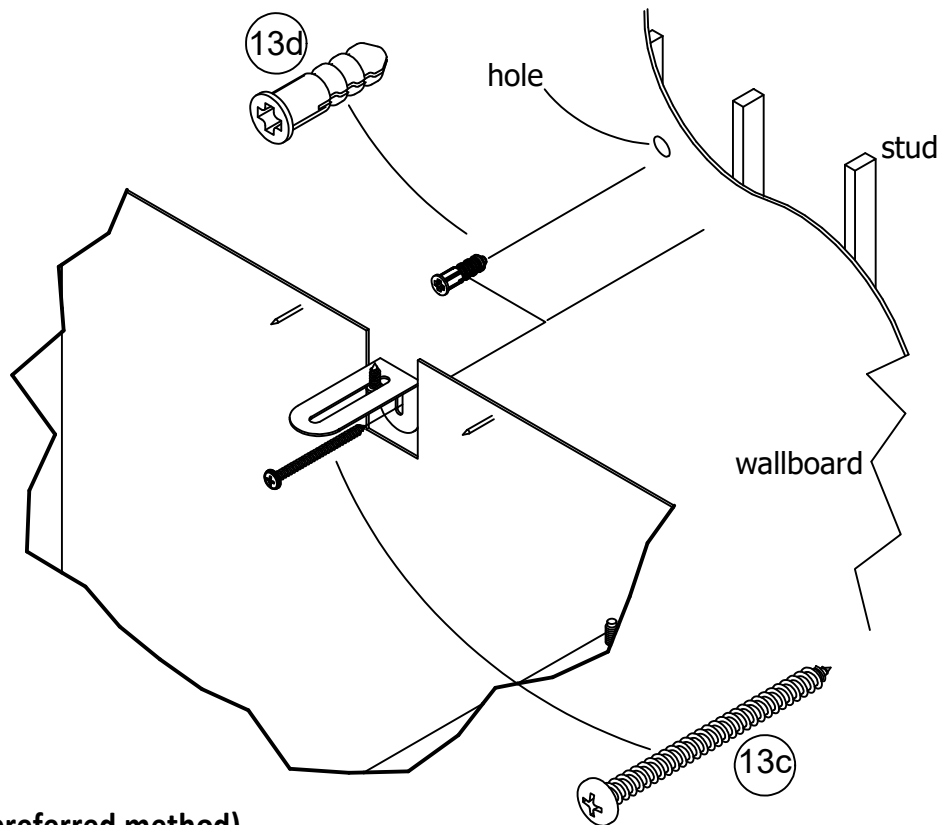

OPTION 1: Attachment into a wall stud (preferred method)


Using a stud finder, locate a stud in the wall. Place your unit against the wall, with the safety bracket aligned in this location. To make driving the screw easier, you can drill a 1/8" diameter pilot hole (3mm) through the safety bracket into the stud. Drive the screw through the safety bracket into the wall stud. Tighten the screw that was not fully tightened in step 5.

OPTION 2: Attachment into drywall

Locate your unit where desired against a wall and mark the wall through the safety bracket, then move your unit aside. Drill a 3/16" diameter hole (5mm) into the wallboard. Tap the wall anchor into the hole until it is flush. Move your unit into location and fasten the wall bracket to the wall anchor with the screw. Tighten the screw that was not fully tightened in step 5.

Maximum Loads

 This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

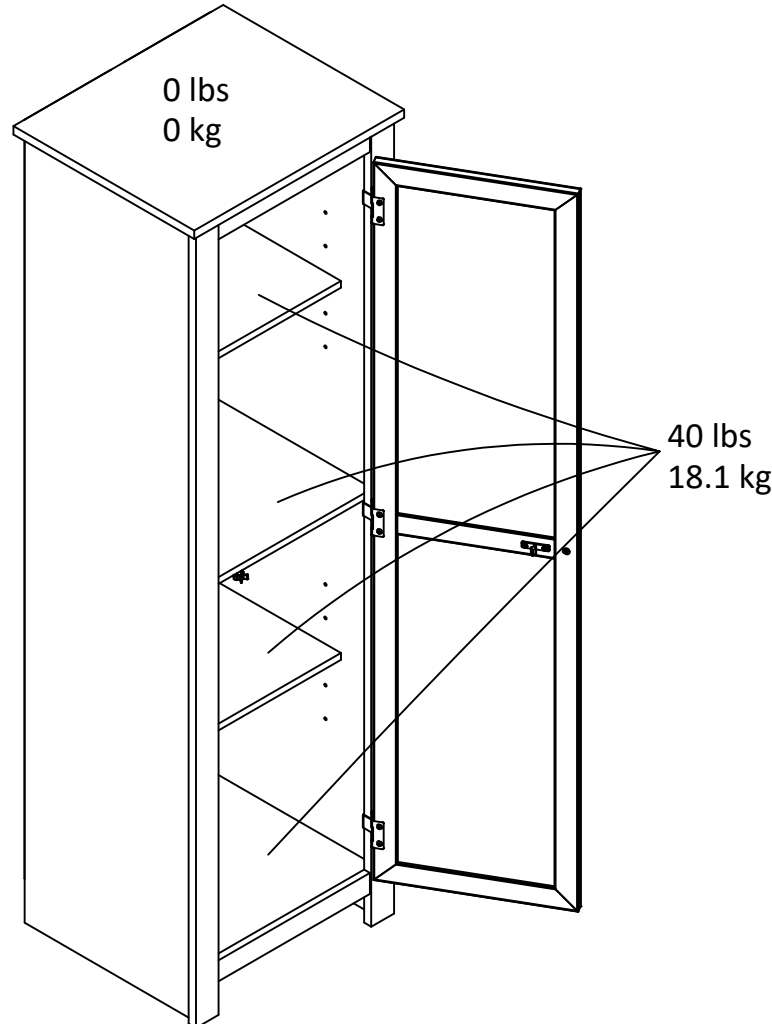

Warning: Risk of injury to persons - do not place a television on this furniture. This furniture is not approved for use with a television.

Certificate of Conformity

1. This certificate applies to the Dorel Home Furnishings, Inc. product identified by this instruction manual.
2. This certificate applies to compliance of this product with the CPSC Ban on Lead-Containing Paint (16 CFR 1303).
3. This product is distributed by: Dorel Home Furnishings, Inc.
410 East First Street South
Wright City, MO 63390
636-745-3351
4. Site of Manufacture: Cornwall ON
5. See front page of instruction manual for date of manufacture.

Register your product to receive the following:



- * New trend details - sneak peek on what's new
- * Surveys - have a voice within our community
- * Exclusive deals and discount codes
- * Quick and easy replacement part service

To register your product, visit ameriwoodhome.com

5 Star Rating



Visit your local retailer's website, rate your purchased product and leave us some feedback!

We would like to extend a big "Thank You" to all of our customers for taking the time to assemble this Ameriwood Home product, and to give us your valuable feedback.

*Thank
You!*

Cubierta Delantera

Este libro de instrucciones contiene información **IMPORTANTE** de seguridad. Por favor lea y manténgalo para referencia en el futuro.

No Regrese este producto! Comuníquese con nuestro amistoso equipo de servicio al cliente para obtener ayuda.

Llámenos al: 1-800-489-3351 (Gratis) Lunes - Viernes 9am - 5pm CST

Visitar: www.ameriwoodhome.com

PRECAUCION

Este mueble puede volcarse y causar graves heridas y/o muerte.

Anclar el mueble a un poste de madera en la pared (si esto se requiere).

No Permita que los niños monten el mueble.

Mantenga los artículos más pesados en los cajones de abajo.

Consejos Útiles (página 2)

- Abra su artículo en el área donde usted planea utilizarlo para evitar levantar y moverlo menos
- Identificar, ordenar y contar las piezas antes de intentar ensamblar
- Las clavijas de compresión se golpean con un martillo
- Las diapositivas están marcadas con una R (derecha) y L (izquierda) para la colocación correcta
- Asegúrese de que siempre este el punto localizado en la parte superior de bloqueador de leva este volteado hacia borde exterior
- Utilizar todos los clavos para el panel de atrás y distribuirlos por igual
- El panel de atrás debe utilizarse para asegurarse de que la unidad quede fija y firme
- No use químicas fuertes ni limpiadores abrasivos en este artículo
- Nunca empuje, tire ni arrastre los muebles

Antes de Que Empieces (página 3)

- Lea cuidadosamente cada paso y siga el orden correcto

- Separar y contar todas sus piezas y hardware

- Dése suficiente espacio para el proceso de ensamble

- Tenga las siguientes herramientas: destornillador de cabeza plana, #2 cabeza Phillips

Destornillador y martillo

- Precaución: Si usa un taladro electrónico o un destornillador eléctrico para atornillar, por favor asegúrese que deje de atornillar cuando el tornillo este apretado. Fallar hacer esto puede causar barrer el tornillo.

Sistema de fijar el bloqueo de leva (página 3)

Este sistema de fijar el bloqueo de leva será usado en todo el proceso ensamble.

Página 7

PUERTA DE LA MANO IZQUIERDA UBICACIÓN
POSICIÓN DE LA BISAGRA DE LA PUERTA DERECHA

Página 11

Espaciamiento igual en ambos extremos.
No apriete completamente el tornillo.

Página 12

Espaciamiento igual en ambos extremos.
No apriete completamente el tornillo.

Página 17

¡IMPORTANTE! EL PÁNEL TRASERO ES UNA PIEZA FUNDAMENTAL EN LA ESTRUCTURA DE ESTA UNIDAD Y DEBE QUEDAR INSTALADA CORRECTAMENTE.

Con la ayuda de otra persona, gire la unidad en su lado delantero. Panel trasero posítion como se muestra. Alinear directamente con los bordes exteriores. Vacíe el borde inferior del panel posterior con el borde inferior de la parte inferior y la uña directamente en los bordes de la parte posterior del panel izquierdo (A), el panel derecho (B), la parte superior (C) y la parte inferior (D).

Asegúrese de que la unidad es cuadrada.
La distancia de la esquina a la esquina debe ser igual a como se muestra.

Vacíe el borde del panel posterior con el borde inferior de la parte inferior (D). Alinear directamente y clavo recto a través de los bordes de atrás.

Página 19

Nota: los orificios de la bisagra (10) están ranurados. Para hacer ajustes de la puerta, afloje los tornillos (6), haga los ajustes y luego vuelva a apretar.
También los agujeros en la captura (12a) están ranurados. Para realizar ajustes en la captura (12a), afloje los tornillos (6), realice los ajustes y vuelva a apretar.

Nota: Si utiliza la configuración de la puerta de la mano izquierda, consulte los pasos 1 y 7 para las ubicaciones de las bisagras y las capturas.

Página 21

Para mampostería, concreto u otro tipo de paredes:

Acude a tu ferretería local para obtener los anclajes adecuados para fijar de forma segura el soporte de seguridad.

IMPORTANTE: ESTA UNIDAD DEBE ASEGURARSE A UNA PARED PARA EVITAR QUE SE VUELQUE. SIGUE ESTAS INSTRUCCIONES PARA INSTALAR EL SOPORTE DE SEGURIDAD ANTICAÍDA QUE SE PROPORCIONA JUNTO CON ESTE PRODUCTO.

ADVERTENCIA

Un mueble al volcarse puede provocar heridas por aplastamiento que pueden resultar graves o mortales.

Para prevenir que un mueble se vuelque:

- * Instala el dispositivo contra caídas que se proporciona
- * Coloca los artículos más pesados en los cajones de más abajo
- * A menos que esté específicamente diseñado para tal fin, no coloques televisiones ni ningún otro objeto pesado sobre este mueble
- * Nunca permitas que los niños se suban o cuelguen de los cajones, puertas o repisas.
- * Nunca abras más de un cajón a la vez

El uso de los dispositivos contra caídas puede reducir, pero no eliminar por completo el riesgo de que el mueble se vuelque.

OPCIÓN 1: acoplado a un travesaño de la pared (método recomendado)

Ubica un travesaño en la pared utilizando un localizador de travesaños. Coloca tu unidad contra la pared, con el soporte de seguridad alineado en ese lugar. Para facilitar la entrada del tornillo, puedes perforar un agujero guía de 1/8" (3 mm) de diámetro a través del soporte de seguridad hasta llegar al travesaño. Introduce el tornillo en el travesaño de la pared a través del soporte de seguridad. Aprieta el tornillo que no apretaste completamente en el paso 5.

OPCIÓN 2: acoplado a un panel de pared

Coloca tu unidad en el lugar deseado contra una pared y marca la pared a través del soporte de seguridad, luego retira tu unidad hacia un lado. Perfora un agujero de 3/16" de diámetro (5 mm) en el tablero de la pared. Golpea el anclaje de pared para introducirlo en el agujero hasta que quede a ras. Vuelve a colocar tu unidad en su lugar y sujeta el soporte de pared al anclaje de pared con el tornillo. Aprieta el tornillo que no apretaste completamente en el paso 5.

Página 22

CARGA MAXIMA

Esta unidad ha sido diseñada para soportar la carga máxima anotada. El exceder estos límites puede causar inestabilidad, colapsarse y/o causar serias lesiones.

ADVERTENCIA: Riesgo de lesiones a las personas - no coloque un televisor sobre muebles. Este mueble no está aprobado para su uso con un televisor.

Página 23

Registre su producto para recibir lo siguiente:

- * Detalles de nuevas tendencias - Vistazo a lo nuevo
- * Encuestas - alec su voz entre su comunidad
- * Códigos de ofertas y descuentos exclusivos
- * Fácil y rápido servicio de partes de remplace

Para registrar su producto, visite ameriwoodhome.com

Clasificación de 5 estrellas

Visite el sitio web de su tienda local, califique su comprado y denos sus comentarios!

Nos gustaría enviar un gran "Agradecimiento" a todos nuestros clientes por tomarse el tiempo de ensamblar este producto de Ameriwood Home, y por darnos sus valiosos comentarios.

Gracias