


NERO COLLECTION

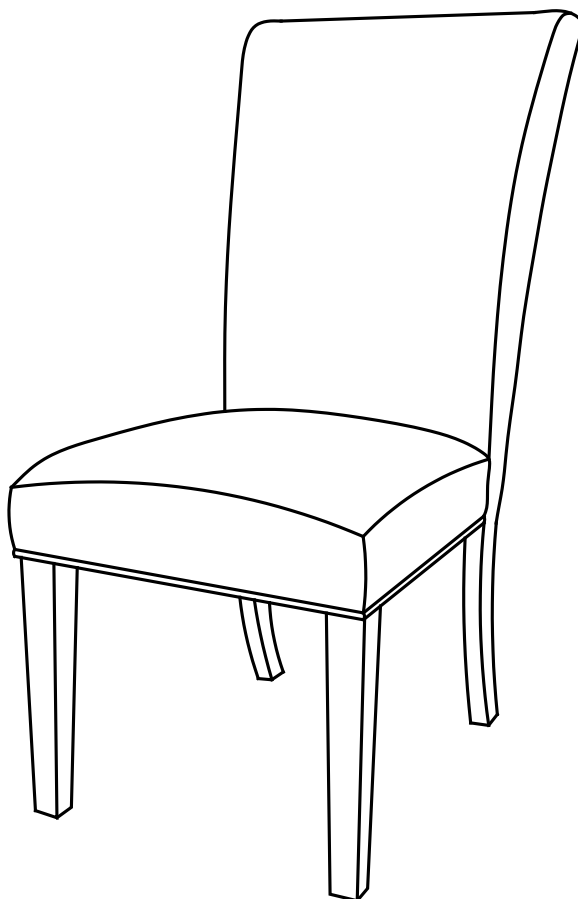

ASSEMBLY INSTRUCTIONS

ITEM#: 6100

SKU#: 810530234

2 PK UPHOLSTERED CHAIR

Need help? We are here for you!
www.biglots.com/help/contact-us

GENERAL BEST PRACTICES FOR ASSEMBLY:

- *Please read the assembly instructions prior to assembling this product.
- *Determine you have adequate space for assembly.
- *Assembly by two adults is recommended.
- *Assemble on soft surfaces to prevent damage to product finish.
- *Keep children away during assembly. This item contains small parts which can be swallowed by children.
- *Do not discard any of packaging until you have checked that you have all the parts and hardware.
- *Retain the assembly instructions for further reference.
- *The manufacturer will not accept responsibility for unauthorized repairs or modifications to this product.


WARNINGS:

- *DO NOT use power tools.
- *Remove all packaging material, make sure all parts are present before assembly.
- *Should this product become damaged, and/or components are broken or missing, DO NOT USE.
- *This product will burn if left in contact with flame source.

MAINTENANCE:

- *Treat upholstered surfaces with care. Clean any spills immediately using a clean, slightly dampened cloth and dabbing the area until the spill is removed.
- *DO Not use any chemical cleaners. Hardware may loosen over time.
- *Periodically check all bolts and fully tighten any that are loose.

PARTS LIST

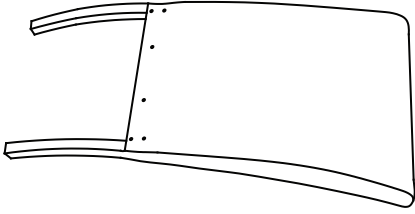


A

Chair Back
x 2pcs



B

Chair Seat
x 2pcs



C

Front Leg
x 4pcs

HARDWARE LIST



1

Long Allen Bolt x 8pcs
Ø5/16" x 90mm




2

Allen Bolt x 12pcs
Ø5/16" x 55mm




3

Lock Washer x 20pcs
Ø5/16" x 13mm



4

Flat Washer x 20pcs
Ø5/16" x 22mm



5

Allen Key x 1pc
Ø5mm





6

Wood Dowel x 2pcs
Ø10 x 30mm


STEP 1

Place the Chair Back (A) and the Chair Seat (B) onto a solid nonabrasive surface such as carpet or a cloth to prevent damage to the chair. Open the cover below the Chair Seat (B). Insert the Wood Dowel (6) into the smaller holes of the Chair Seat (B). Attach the Chair Seat (B) to the Chair Back (A) with Allen Bolts (2), Lock Washers (3) and Flat Washers (4) using Allen Key (5). Do not fully tighten the Allen Bolts at this time.

HARDWARE NEEDED

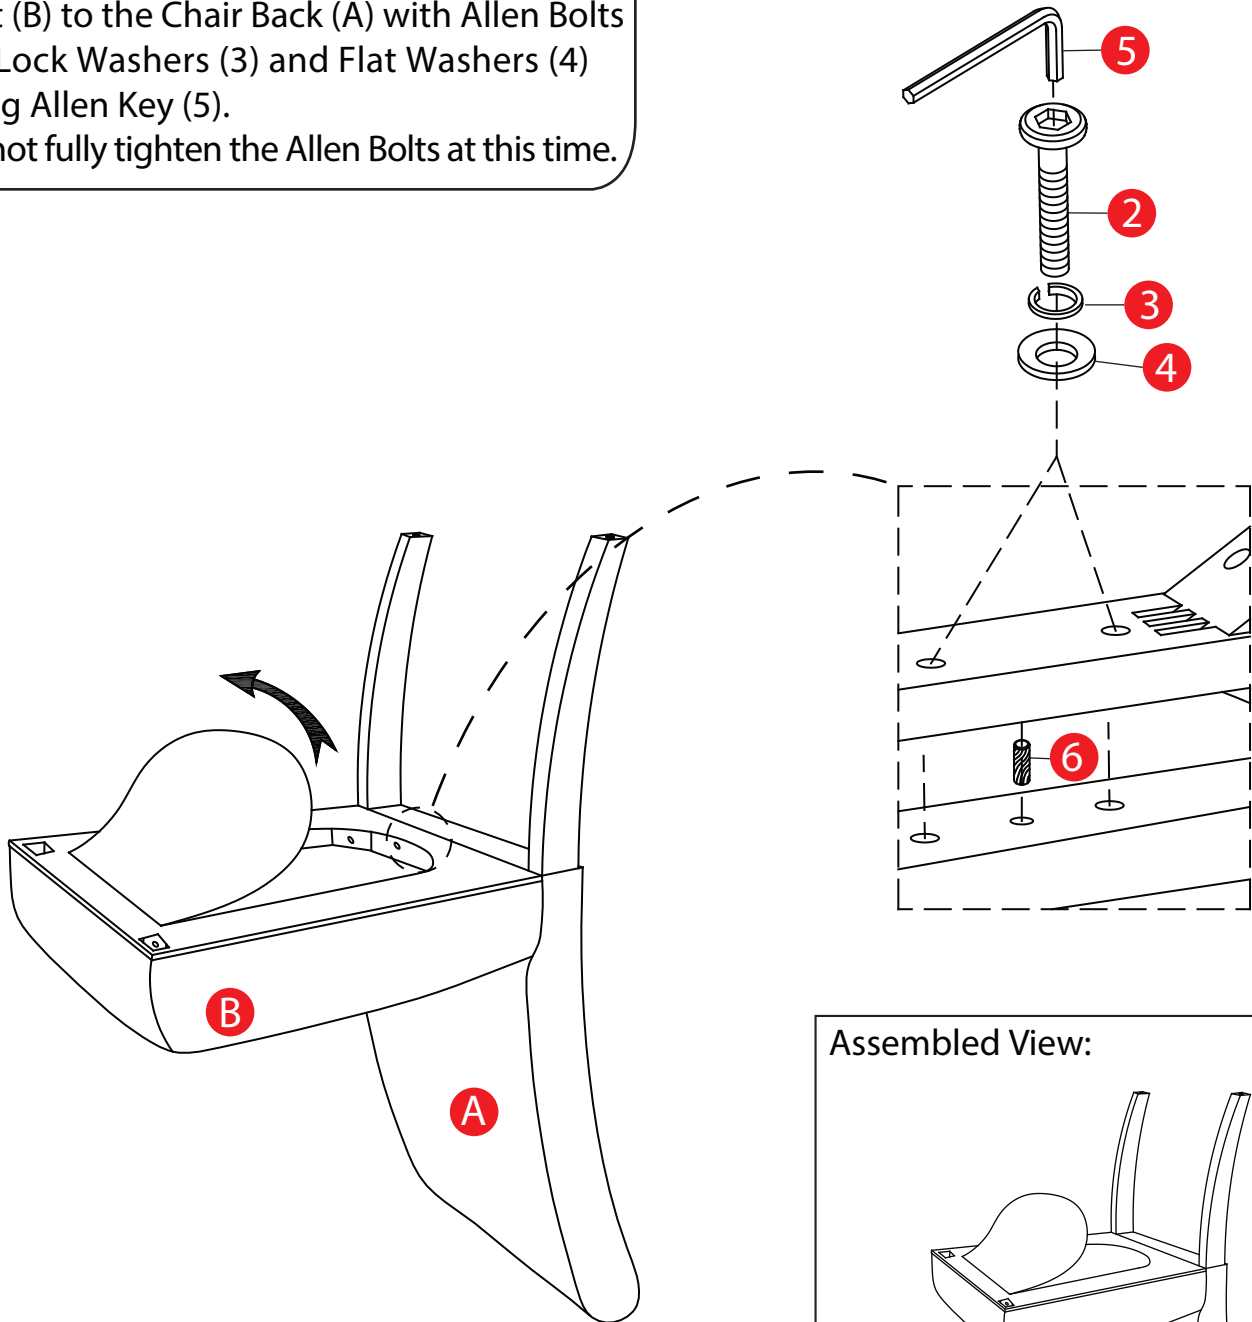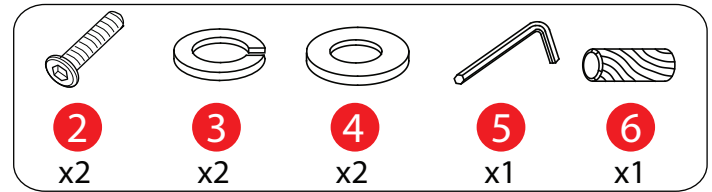

Assembled View:


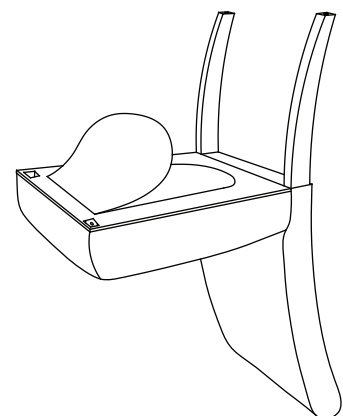


STEP 2


Make sure that edges the Chair Seat (B) are aligned with edges of the Chair Back (A).

Attach the Chair Seat (B) to the Chair Back (A) in the corners with Long Allen Bolts (1), Lock Washers (3) and Flat Washers (4) using Allen Key (5). Fully tighten all the Allen Bolts from Step 1 at this time.

HARDWARE NEEDED

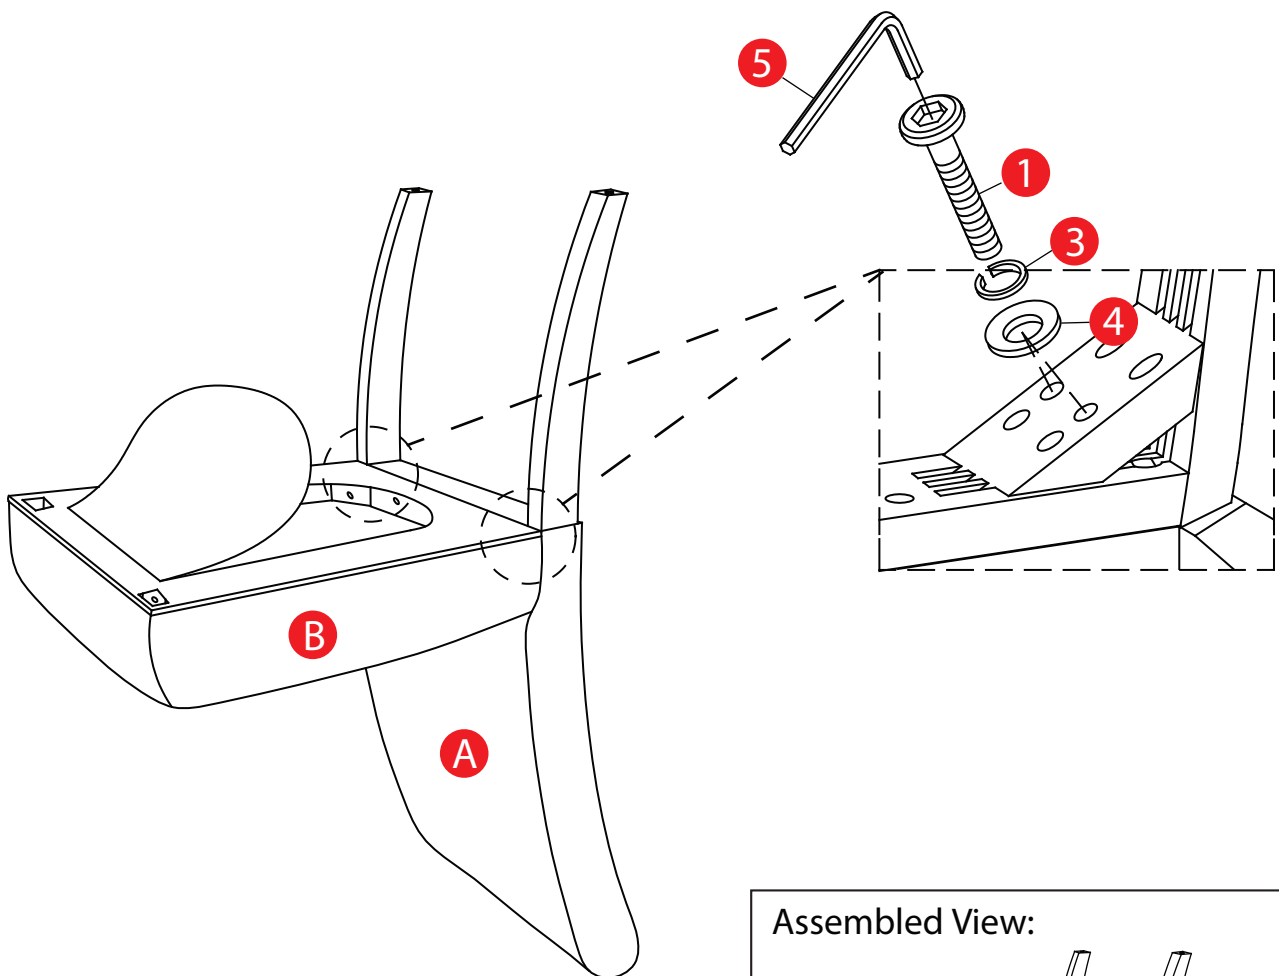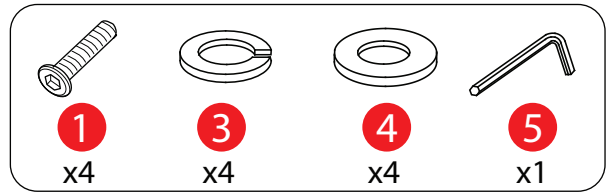




Assembled View:

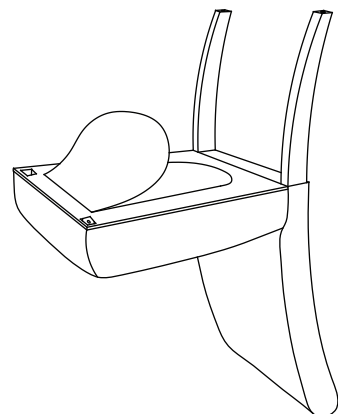


STEP 3


Attach the Front Legs (C) to the Chair Seat (B) with Allen Bolts (2), Lock Washers (3) and Flat Washers (4) using Allen Key (5). Fully tighten the Allen Bolts at this time and close the cover. Repeat Step 1 through Step 3 to assemble remaining chair.

HARDWARE NEEDED

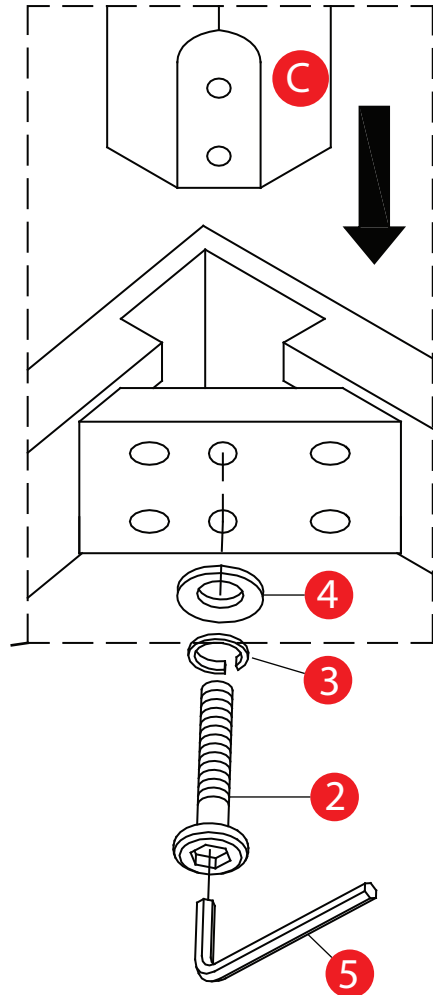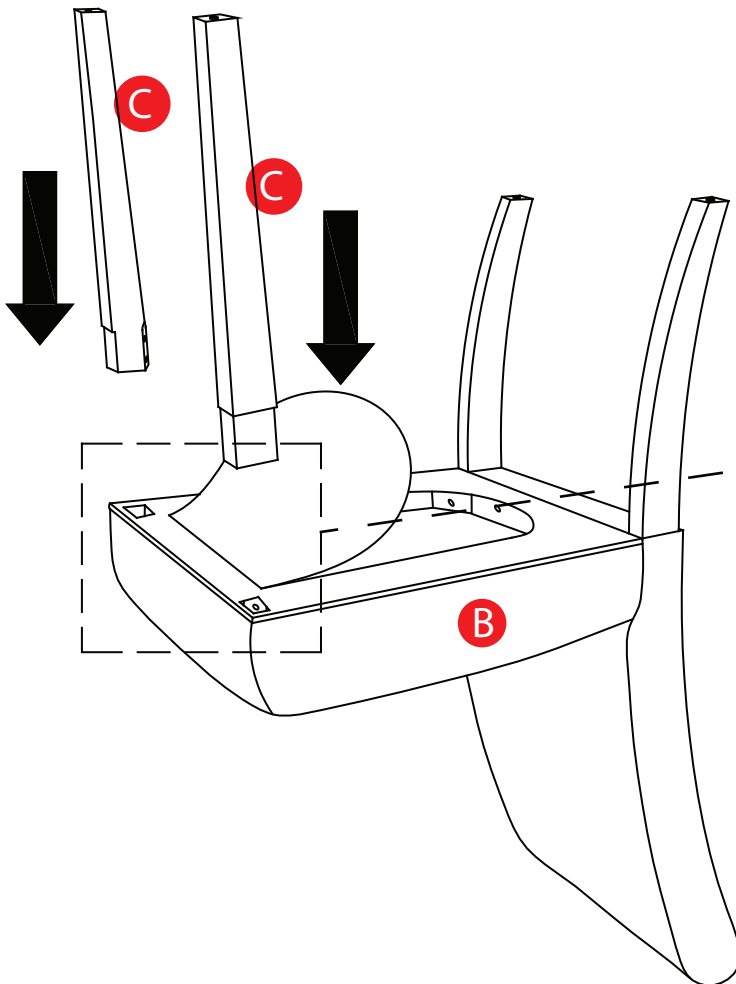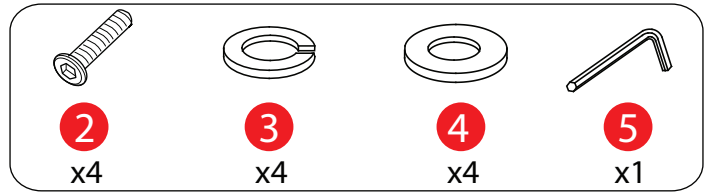

Assembled View:

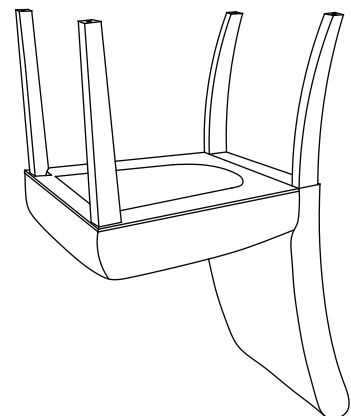

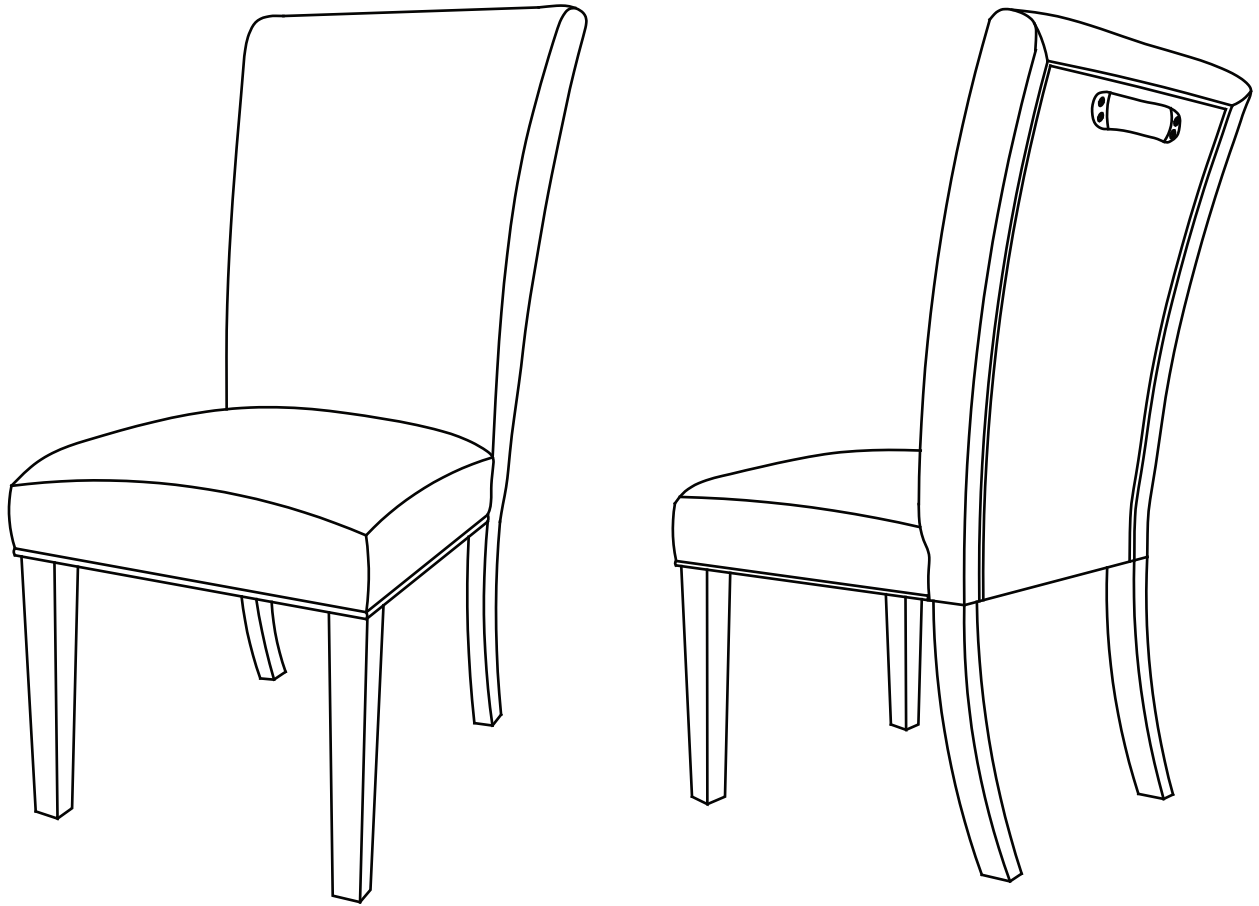

ASSEMBLY IS COMPLETED.