

ASSEMBLY INSTRUCTION

ITEM#IC7275

SKU#810530875

---

## CALCOLO MARBLE COFFEE TABLE

---

---

---

## GENERAL BEST PRACTICES FOR ASSEMBLY:

---

---

Read all instructions before starting.

Clear an area for assembly and assemble on a soft surface such as cardboard or carpet to protect finish.

---

---

## WARNINGS:

---

---

Caution: Adult assembly required. Assembly will require 2 people. Assemble on soft surfaces to prevent damage to the product finish.

DO NOT use power tools.

---

---

## MAINTENANCE:

---

---

Check bolts/screws periodically and tighten if necessary.

WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

---

---

## HELPFUL HINTS

---

---

DO NOT place your furniture too close to window, heaters, or vents.


DO NOT SMOKE WHEN DROWSY. Immediately remove any glowing or lit cigarette which falls on furniture.

Clean any spills immediately using a clean, slightly dampened cloth and dabbing the area until the spill is removed.

---

## PARTS LIST

---

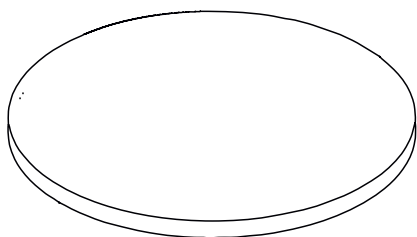

A

Top x1pc



B

Legs x3pc




C

Nut x9 pc




D

Washer x16 pc



E

Spanner x1pc

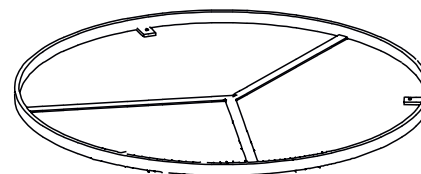

F

Iron ring x1pc



G

Allen key x1pc



H

Allen Screw x7pc



I




Decorative Bolt x3pc

---



## STEP 1

---

1. Place Top (A) upside down on a soft smooth surface. Place the Iron Ring (F) onto Top (A) so the holes are aligned. Secure the ring in place with Washer (D) and Allen Screw (H) using Allen Key (G). Wait until all Allen Screws are inserted before fully tightening.

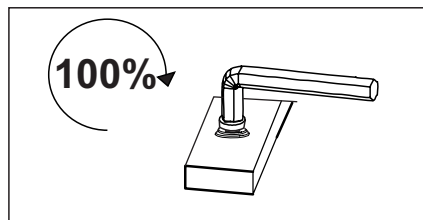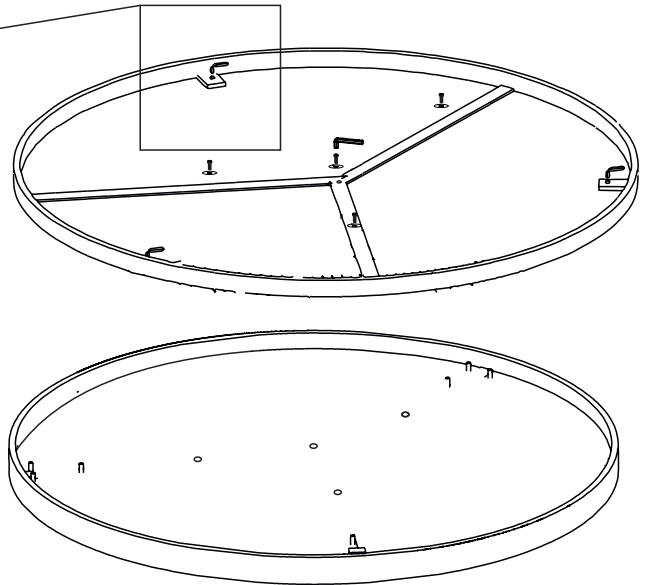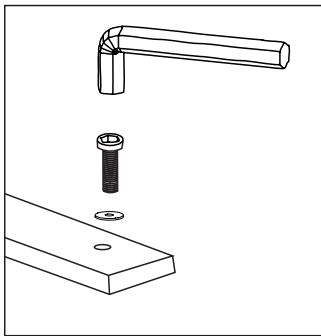

Assembled View:

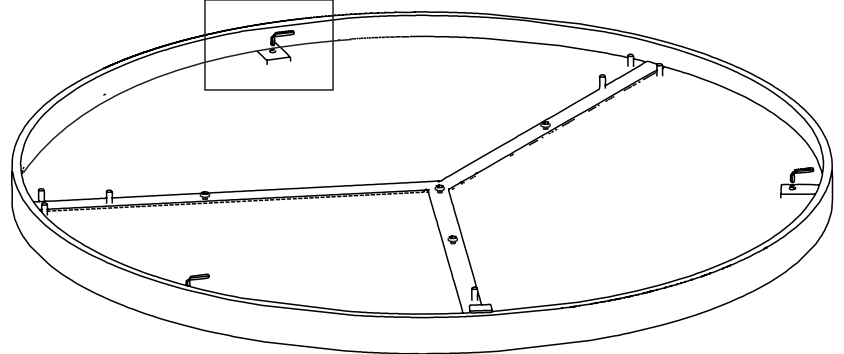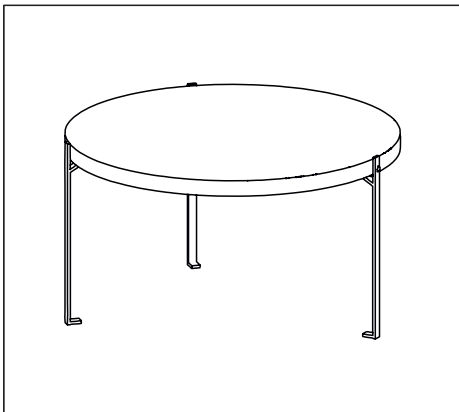


---



## STEP 2

---

1. Align the holes in Leg (B) with the bolts on Top (A) and slide into place. Secure Leg (B) to Top (A) with Washer (D) and Nut (C) using Spanner (E). Wait until all Nuts are in place before fully tightening.

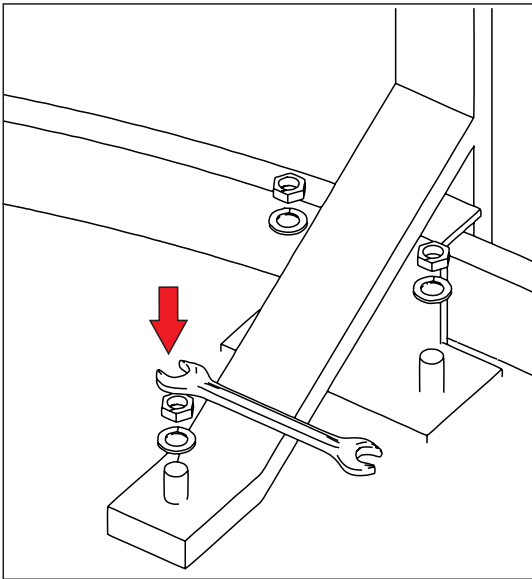

Assembled View:

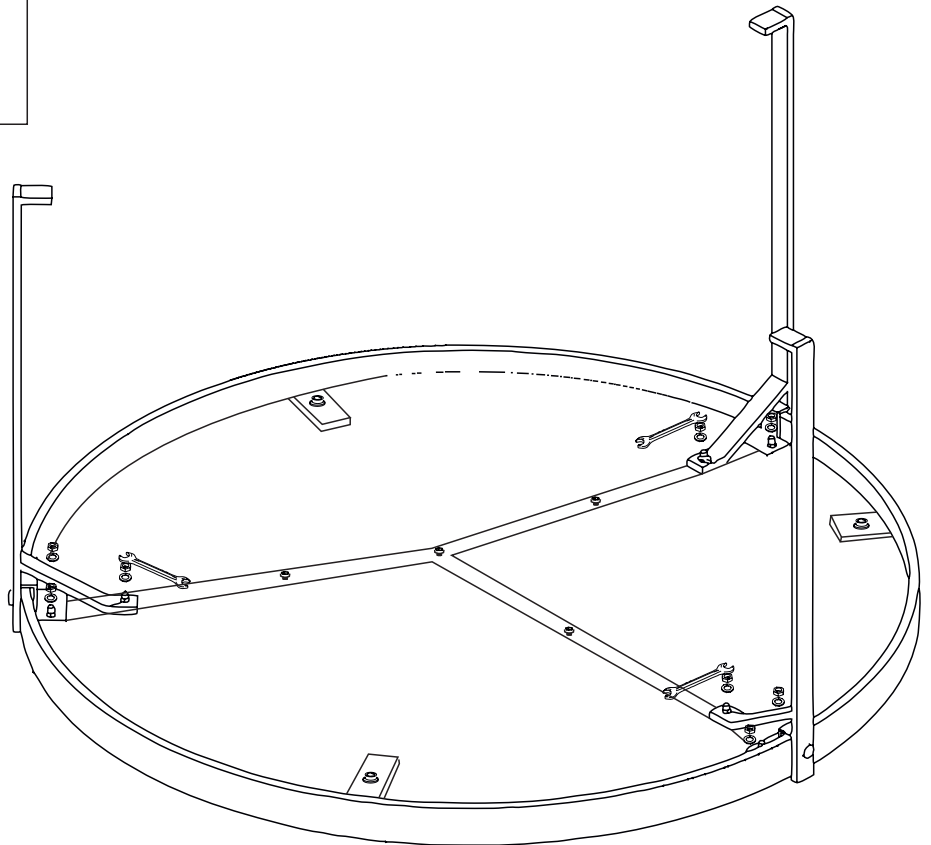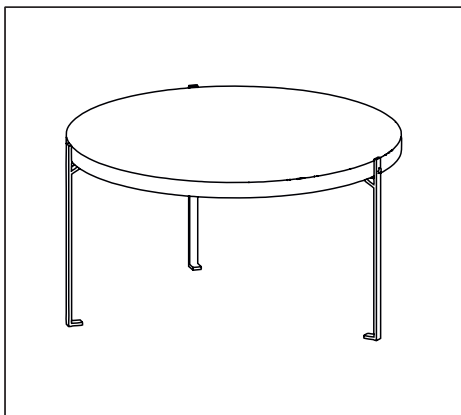


---


## STEP 3

---

1. Turn the table to the upright position. Insert Decorative Bolt (I) into the holes of Leg (B). Hand tighten until tight. DO NOT use tools. Assembly is now complete.

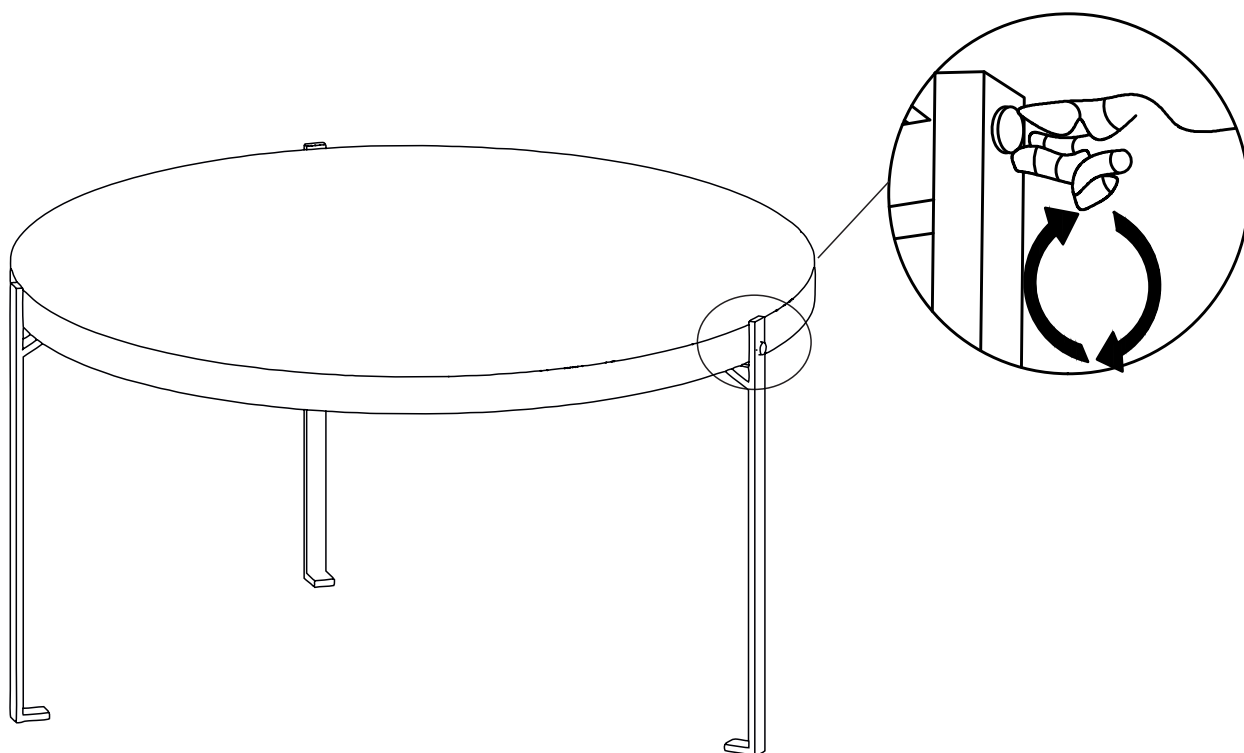

Assembled View:

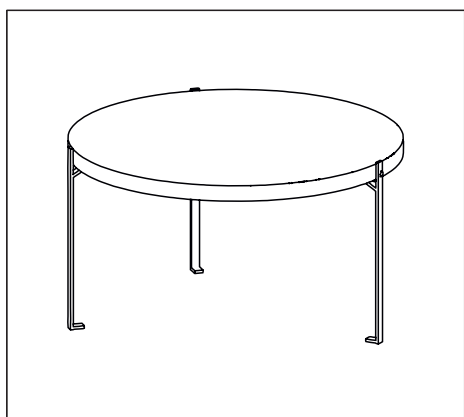

PRINTED IN INDIA