


# ASSEMBLY INSTRUCTIONS

ITEM #: BQ096-0774WH

SKU#: 810582248

RAINBOW UNICORN DRESS UP TABLE

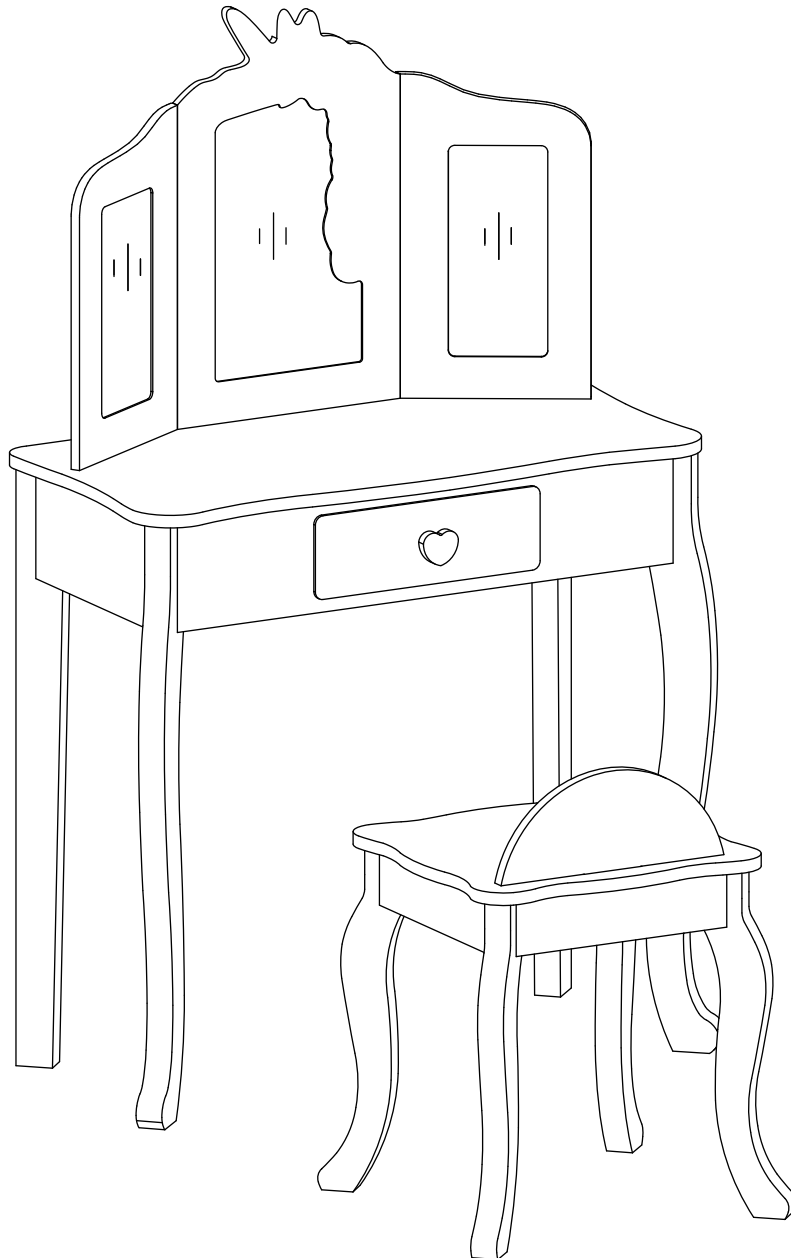

**Need help? We are here for you!**  
**[www.biglots.com/help/contact-us](http://www.biglots.com/help/contact-us)**

## GENERAL BEST PRACTICES FOR ASSEMBLY:

Read all instructions before starting

Clear a flat covered space to begin

Two adults are recommended for assembly

Note that hardware required is provided for every step

Pay attention to orientation


Letter of the part corresponds to a sticker on the product

Number of the hardware corresponds to its number on the package

Helpful hints provided along the way

## WARNINGS:

SUGGEST 2 ADULTS TO ASSEMBLE THIS PRODUCT IN AN OPEN AREA.

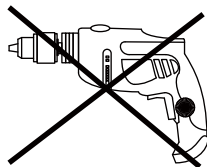


DO NOT USE POWER TOOLS TO ASSEMBLE

## MAINTENANCE:













Regularly check hardware and tighten if necessary.

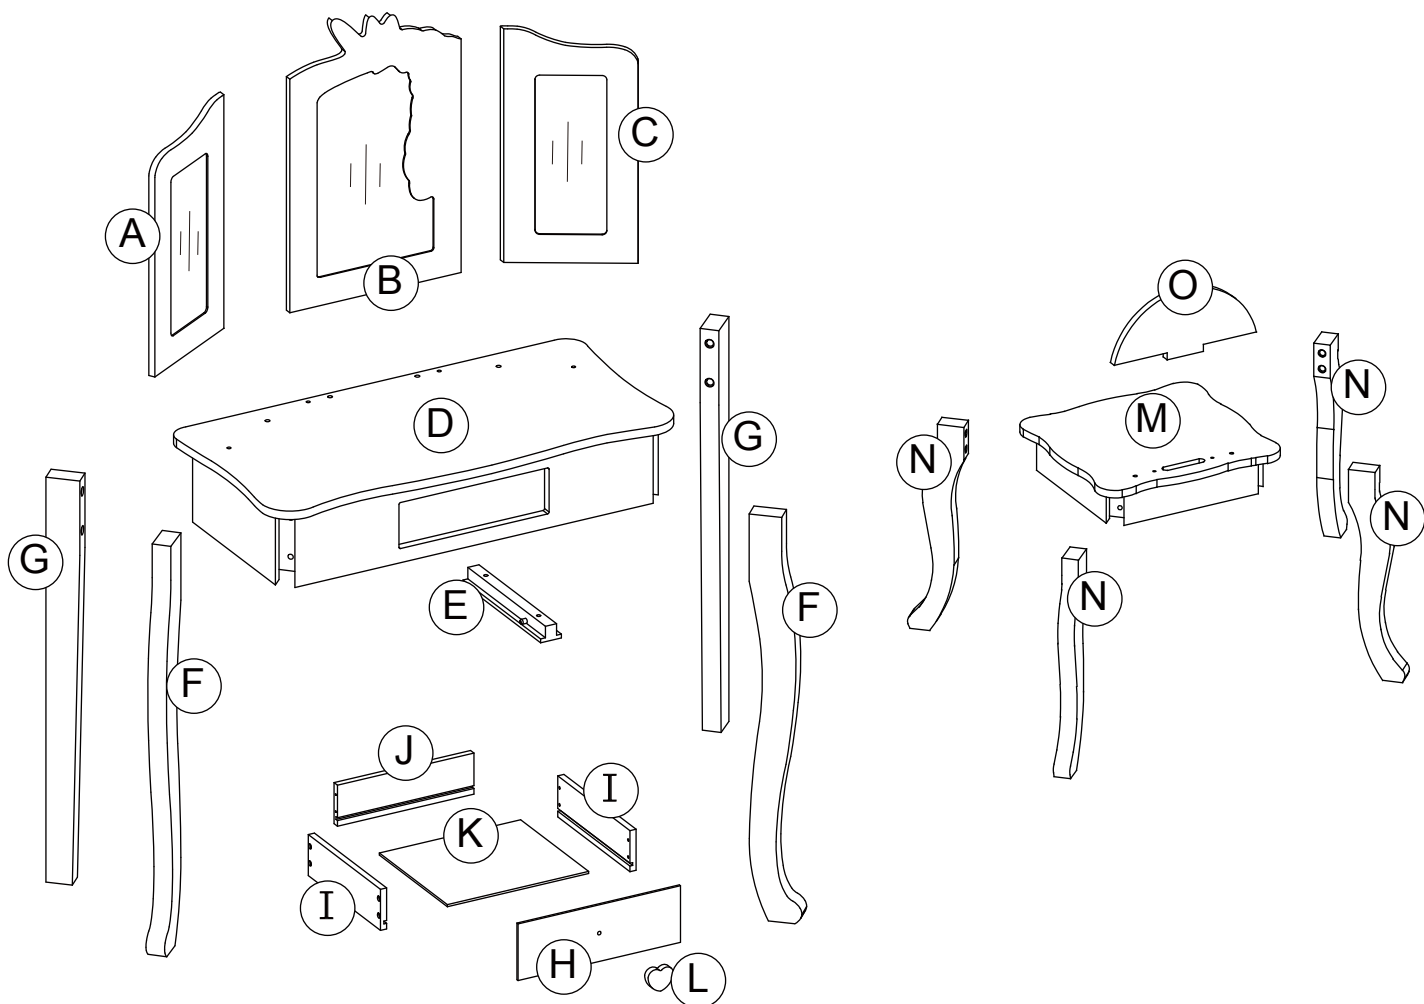Use a dry clean cloth to dust or wipe up any spills.

Avoid exposure to water and fire.




NO	QTY	DESCRIPTION
A	1pc	Left Mirror with Frame
B	1pc	Middle Mirror with Frame
C	1pc	Right Mirror with Frame
D	1pc	Table Top
E	1pc	Wooden Slider
F	2pcs	Front Table Leg
G	2pcs	Rear Table Leg
H	1pc	Front Drawer Panel
I	2pcs	Side Drawer Panel
J	1pc	Back Drawer Panel
K	1pc	Bottom Drawer Panel
L	1pc	Wooden Handle
M	1pc	Stool Top
N	4pcs	Stool Leg
O	1pc	Stool Back


NO	PARTS	QTY	DESCRIPTION
1		1pc	Stopper
2		4pcs	Metal Connector
3		6pcs	Wooden Dowel
4		16pcs	Bolt(6×35mm)
5		16pcs	Spring Washer
6		16pcs	Flat Washer
7		6pcs	Screw(4×30mm)
8		3pcs	Screw(4×25mm)
9		8pcs	Screw(3×20mm)
10		3pcs	Screw(3×10mm)
11		8pcs	Screw(3×8mm)
12		1pc	Allen Wrench

- A Phillips Screwdriver will be needed for assembly and is not provided.
- Separate parts before starting


# 1




③ x 2




④ x 8




⑤ x 8



⑥ x 8



⑦ x 2




⑫ x 1

- Attach Stool Leg (N) to Stool Top (M) with Bolt (4), Spring Washer (5) and Flat Washer (6) using Allen Wrench (12). Fully tighten bolts.

**Note:** The position of the Spring Washer (5) and Flat Washer (6) needs to be the same as the diagram below.

- Insert Wooden Dowel (3) into the end of Stool Back (O) .
- Align the Wooden Dowels (3) in the end of Stool Back (O) with the holes in the Stool Top (M) and slide into place.
- Secure the panels together with Screws (7) using Phillips screwdriver (not provided).

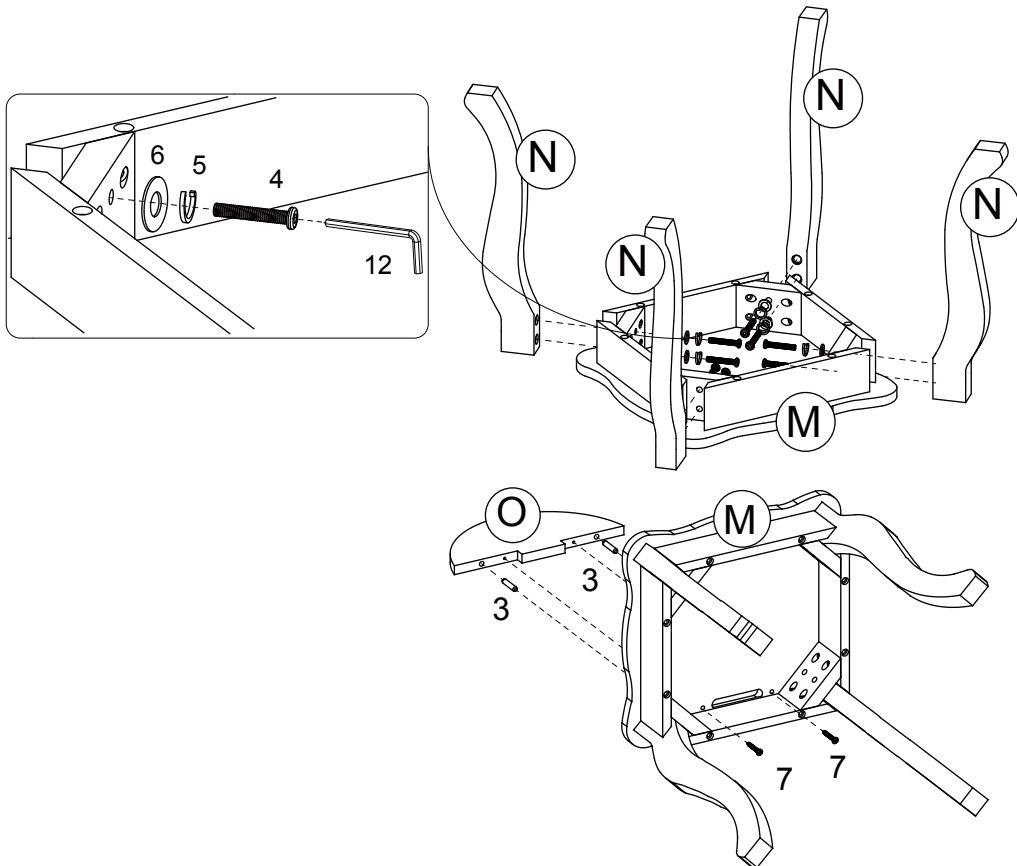

2



(4) x 8



(5) x 8





(6) x 8




(12) x 1

Attach Front Table Leg (F) and Rear Table Leg (G) to Table Top (D) with Bolt (4), Spring Washer (5) and Flat Washer (6) using Allen Wrench (12) as show in the diagram. Fully tighten bolts.

**Note:** The position of the Spring Washer (5) and Flat Washer (6) need to be the same as the diagram below.

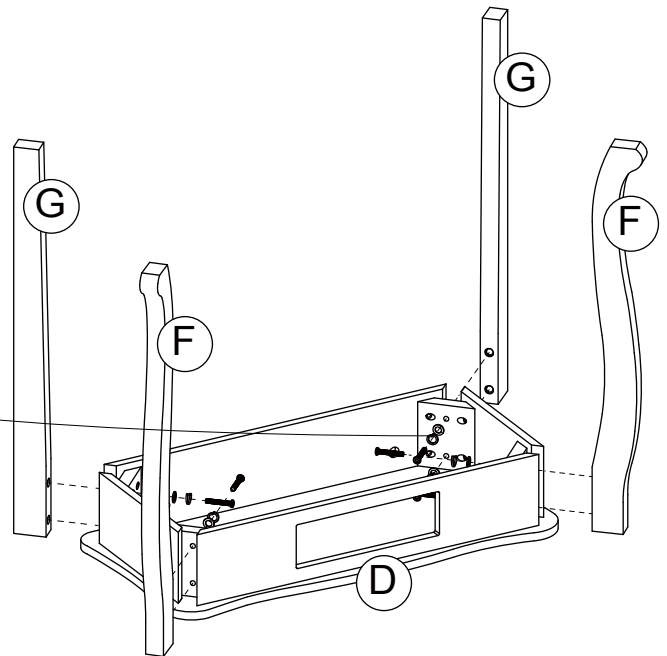
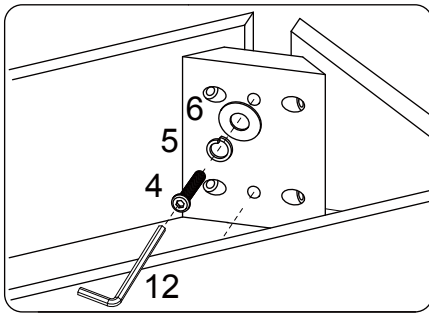


3




(8) x 2


Attach Wooden Slider (E) to Bottom of Table Top (D) with Screw (8) using Phillips screwdriver (not provided). Fully tighten screws.

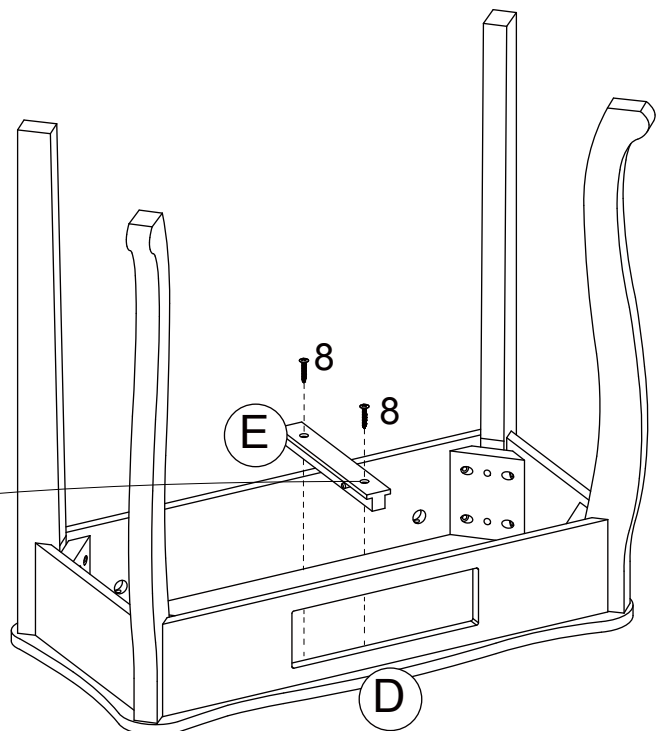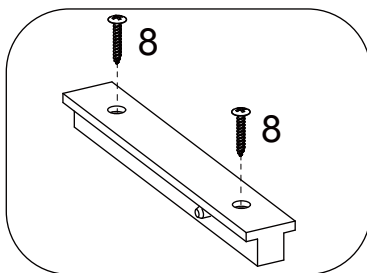

# 4




(8) x 1



(9) x 8

1. Attach Wooden Handle (L) to Front Drawer Panel (H) with Screw (8) using Phillips screwdriver (not provided). Fully tighten screw.
2. Attach Back Drawer Panel (J) and Front Drawer Panel (H) to Side Drawer Panel (I) with Screw (9) using Phillips screwdriver (not provided). Fully tighten screws.
3. Slide Bottom Drawer Panel (K) into the grooves of Front Drawer Panel (H) and Back Drawer Panel (J) until it is fully inserted into the groove of Side Drawer Panel (I).
4. Place the remaining Side Drawer Panel (I) into position so Bottom Drawer Panel (K) is fully inserted into the groove. Attach Side Drawer Panel (I) to Back Drawer Panel (J) and Front Drawer Panel (H) with Screw (9) using Phillips screwdriver (not provided). Fully tighten screws.

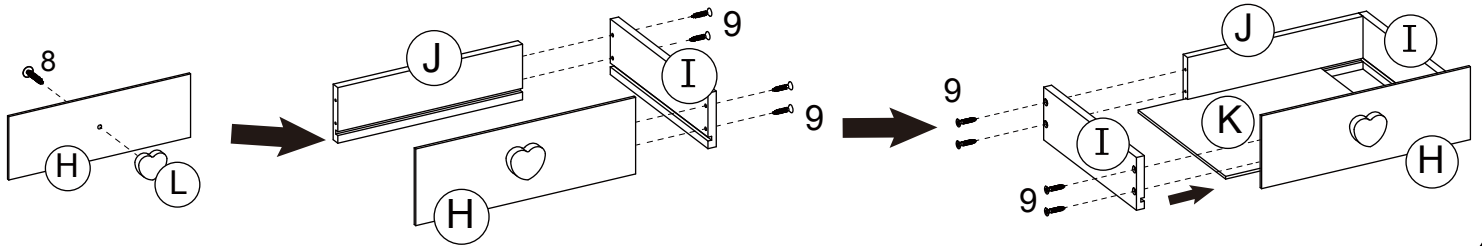

# 5







(1) x 1



(10) x 3


1. Slide the Stopper (1) over the Wooden Slider (E).  
**Note:** The flat side of the Stopper should face the assembled Drawer.
2. Secure the Stopper to the Back Drawer Panel (J) with Screws (10) using Phillips screwdriver (not provided). Fully tighten screws.  
**Note:** Ensure the bottom of the assembled drawer is on top as shown before attaching the the Stopper (1)

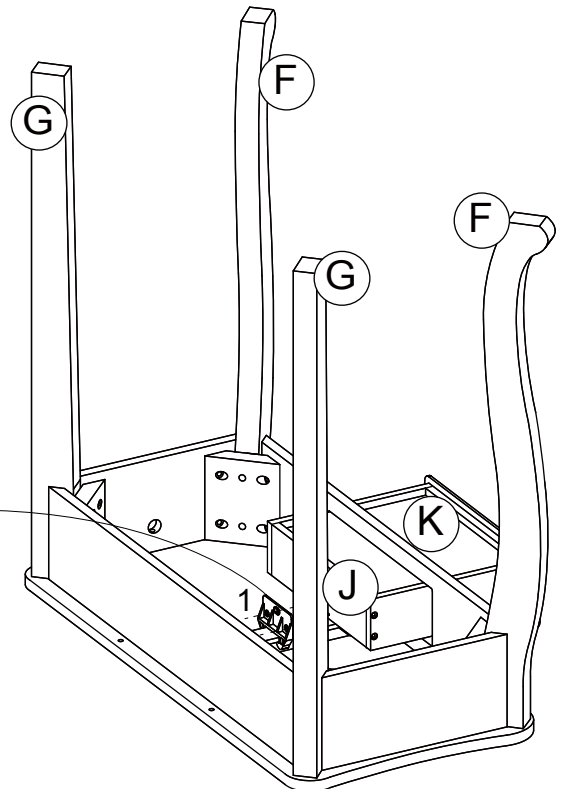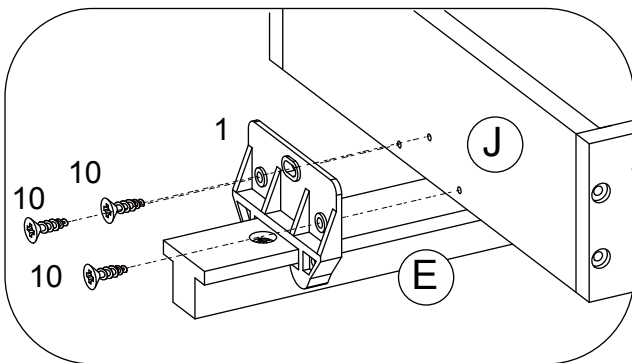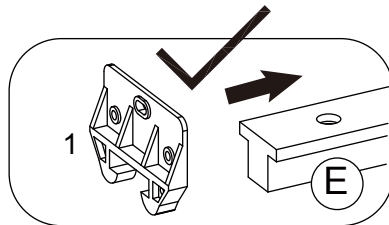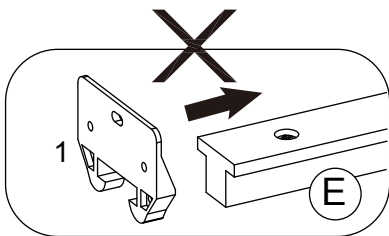

# 6




(3) x 2



(7) x 2


1. Insert Wooden Dowel (3) into the holes of Middle Mirror with Frame (B).
2. Align the Wooden Dowels (3) in Middle Mirror with Frame (B) with the holes in Table Top (D) and lower into place.
3. Secure Table Top (D) to Middle Mirror with Frame (B) with Screw (7) using Phillips screwdriver (not provided). Fully tighten screws.

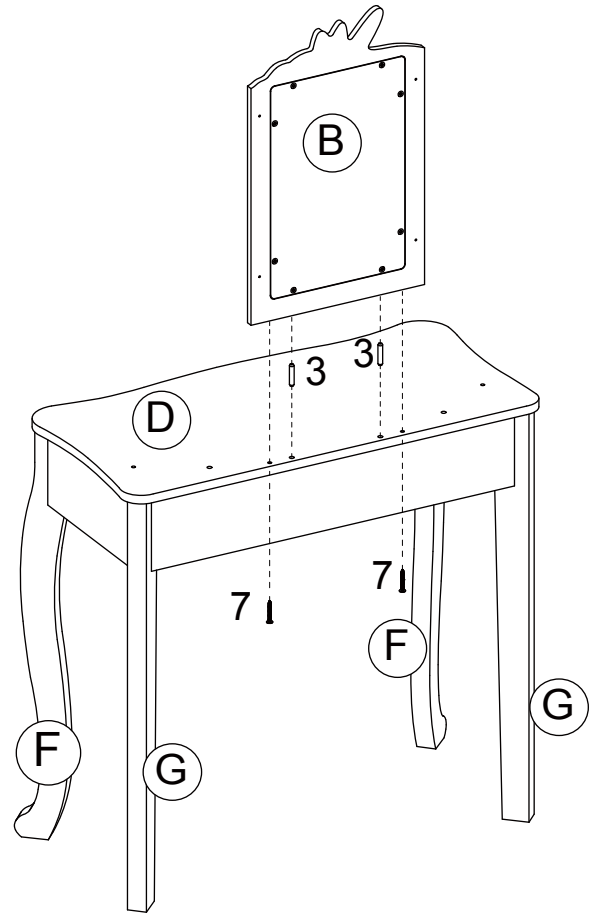

# 7




(3) x 1



(7) x 1


1. Insert Wooden Dowel (3) into the holes of Right Mirror with Frame (C).
2. Align the Wooden Dowels (3) in Right Mirror with Frame (C) with the holes in Table Top (D) and lower into place.
3. Secure Table Top (D) to Right Mirror with Frame (C) with Screw (7) using Phillips screwdriver (not provided). Fully tighten screws.

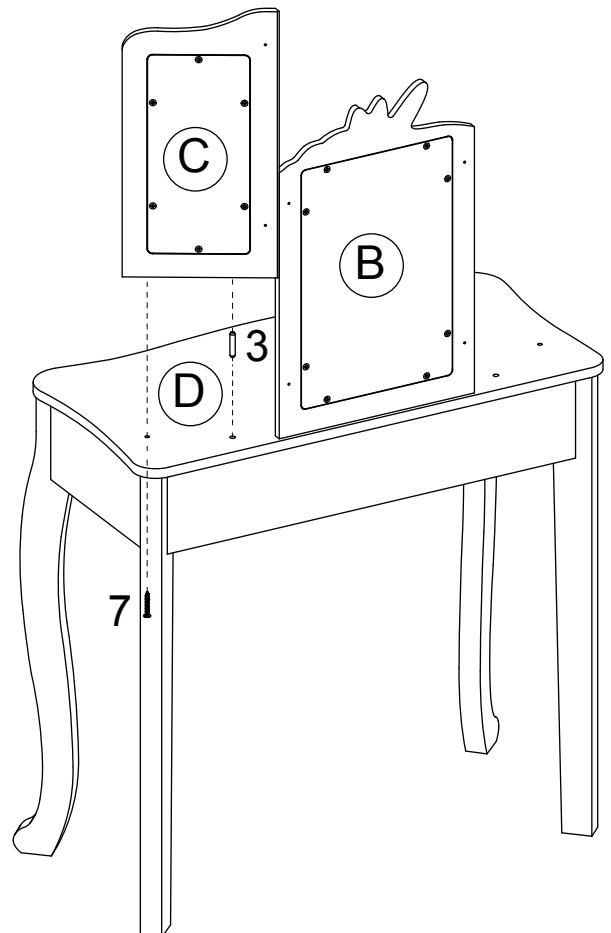

# 8




(3) x 1



(7) x 1

1. Insert Wooden Dowel (3) into the holes of Left Mirror with Frame (A).
2. Align the Wooden Dowels (3) in Left Mirror with Frame (A) with the holes in Table Top (D) and lower into place.
3. Secure Table Top (D) to Left Mirror with Frame (A) with Screw (7) using Phillips screwdriver (not provided). Fully tighten screws.

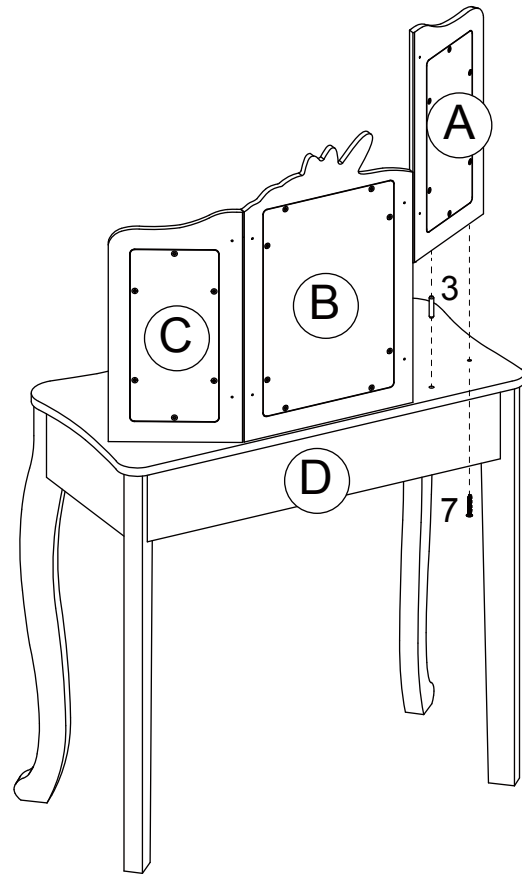

# 9



(2) x 4



(11) x 8

1. Secure Metal Connector (2) to Back of Right Mirror with Frame (C) and Back of Middle Mirror with Frame (B) with Screw (11) using Phillips screwdriver (not provided). Fully tighten screws.

**NOTE:** One hole of Metal Connector (2) is secured onto the Back of Right Mirror with Frame (C) and the other hole is secured onto the Back of Middle Mirror with Frame (B).

2. Secure Metal Connector (2) to Back of Left Mirror with Frame (A) and Back of Middle Mirror with Frame (B) with Screw (11) using Phillips screwdriver (not provided). Fully tighten screws.

**NOTE:** One hole of Metal Connector (2) is secured onto the Back of Left Mirror with Frame (A) and the other hole is secured onto the Back of Middle Mirror with Frame (B).

**Assembly is now complete.**

