

 **real**  
living™

# GUNMETAL FINISH MESH SHOE RACK OVER THE DOOR

ASSEMBLY INSTRUCTION

ITEM#: 5838-7037-GM

SKU#: 810605446

Made in China  
©Whitmor, Inc

Need help? We are here for you! 1(888)944-8667 • Toll Free

## GENERAL BEST PRACTICES FOR ASSEMBLY:

Read all instructions before starting.

Clear a flat covered space to begin.

Always best to do it with a friend.

Note that hardware required is provided for every step.

Pay attention to orientation.

## WARNINGS:

Assemble on soft, smooth surface to protect finish from being scratched.

Do not overload the unit.

## MAINTENANCE:

Regularly check hardware and tighten if necessary.

Wipe clean with a damp cloth when necessary.

## TOOLS REQUIRED:

No additional tools required if hanging over the door.

Hex wrench provided.

For wall mounting, a drill and Phillips screwdriver are required.

# PARTS LIST




**A**

x14  
Horizontal Poles




**B**

x4  
Middle Vertical Frames



**C**

x2  
Top Vertical Frames  
with Push Tab



**D**

x2  
Bottom Vertical Frames



**E**

x28  
Hex Screws



**F**

x2  
Over the Door Brackets



**H**

x1  
Mesh Shelves



**I**

x1  
Hex Wrench

## Part Reference

A	F11516
B	F11517
C	F11518
D	F11519
E	F11520
F	F11521
G	F11522
H	F11523
I	F11524
J	F11525



**J**

x4  
Wall Screws




**K**


x4  
Wall Anchors

**NOTE:** Part (J) is for optional mounting of frame.


# STEP 1

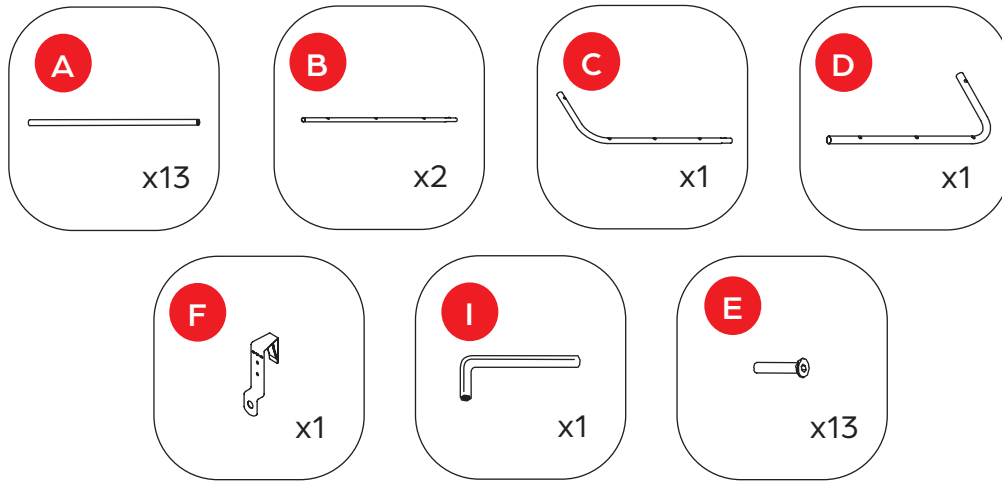





Place one of each frame sections (C,D) and two of middle frame section (B) on a flat hard surface and clip together with the push tabs. Attach thirteen horizontal poles (A) to frame sections using thirteen hex screws (E). Tighten with hex wrench (I). Install over the door bracket (F) by sliding onto the top vertical frame pole (C) past the first hole.

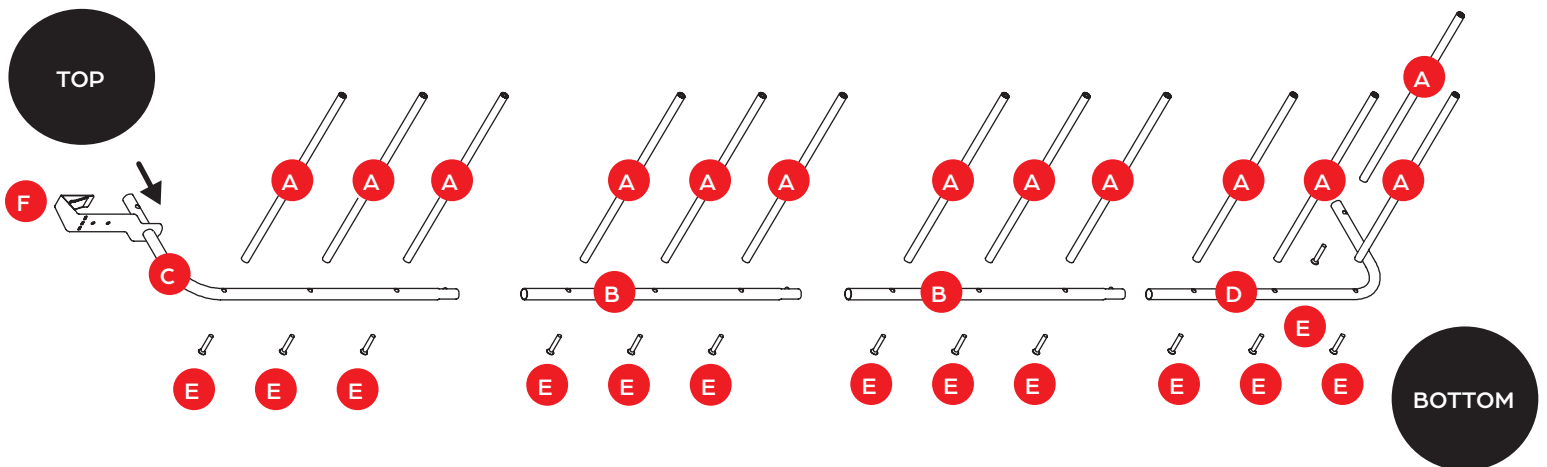


Assembled View:

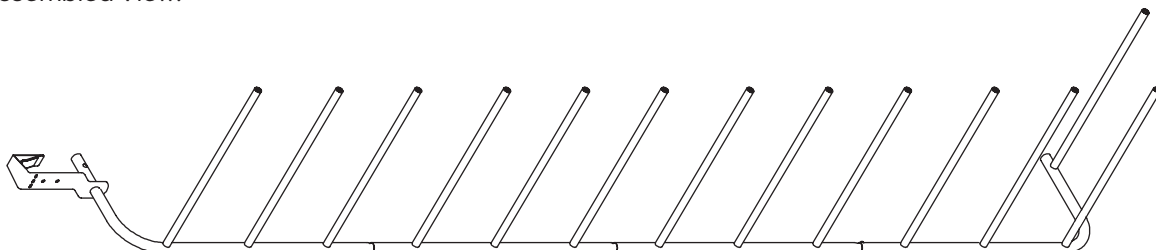


## STEP 2

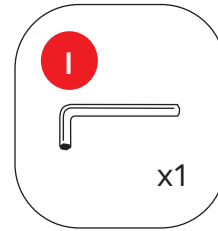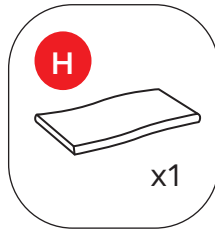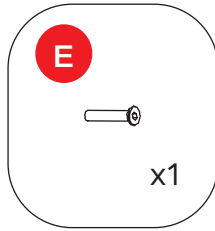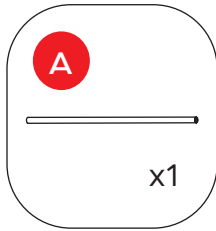


Attach remaining horizontal pole (A) and hex screw (E) behind the bracket (F). Tighten with hex wrench (I).  
Unfold the mesh shelves (H) and install onto horizontal poles. Make sure the tag on the mesh shelves (H) is at the top of the unit.

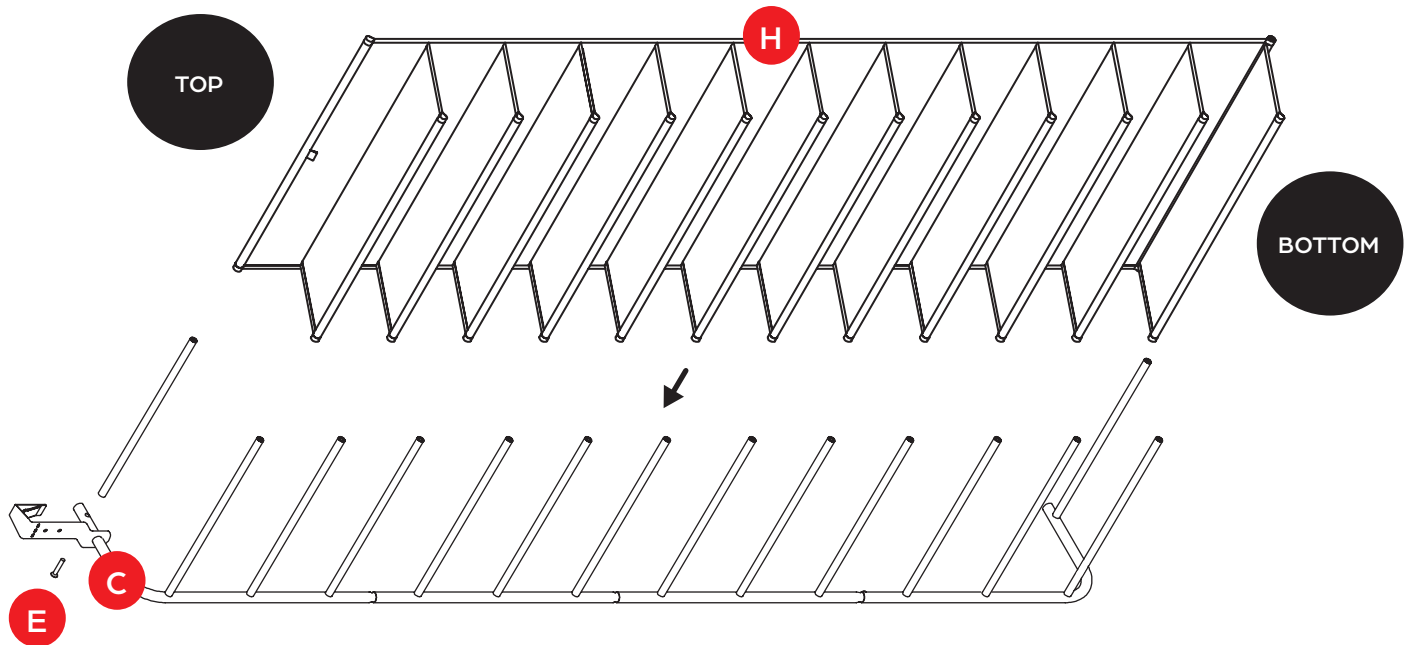


Assembled View:

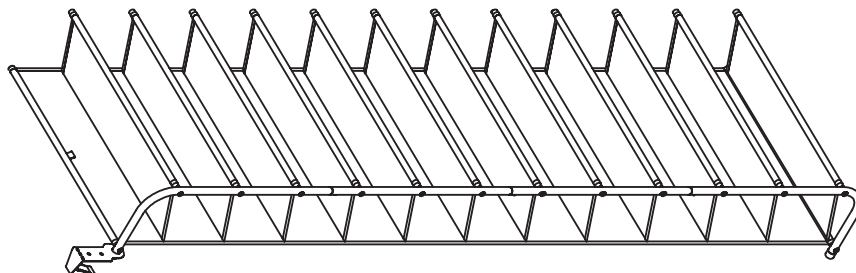

# STEP 3

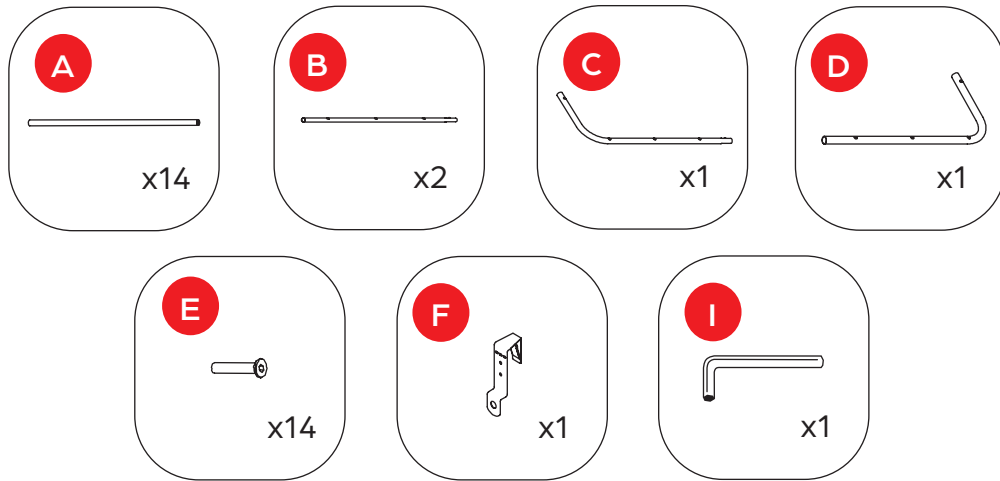


Clip together remaining frame sections (B,C,D) with the push tabs. Install over the door bracket (F) by sliding onto the top vertical frame pole (C) past the first hole. Align assembled side frame section with horizontal poles (A) and attach using hex screws (E). Tighten with hex wrench (I).




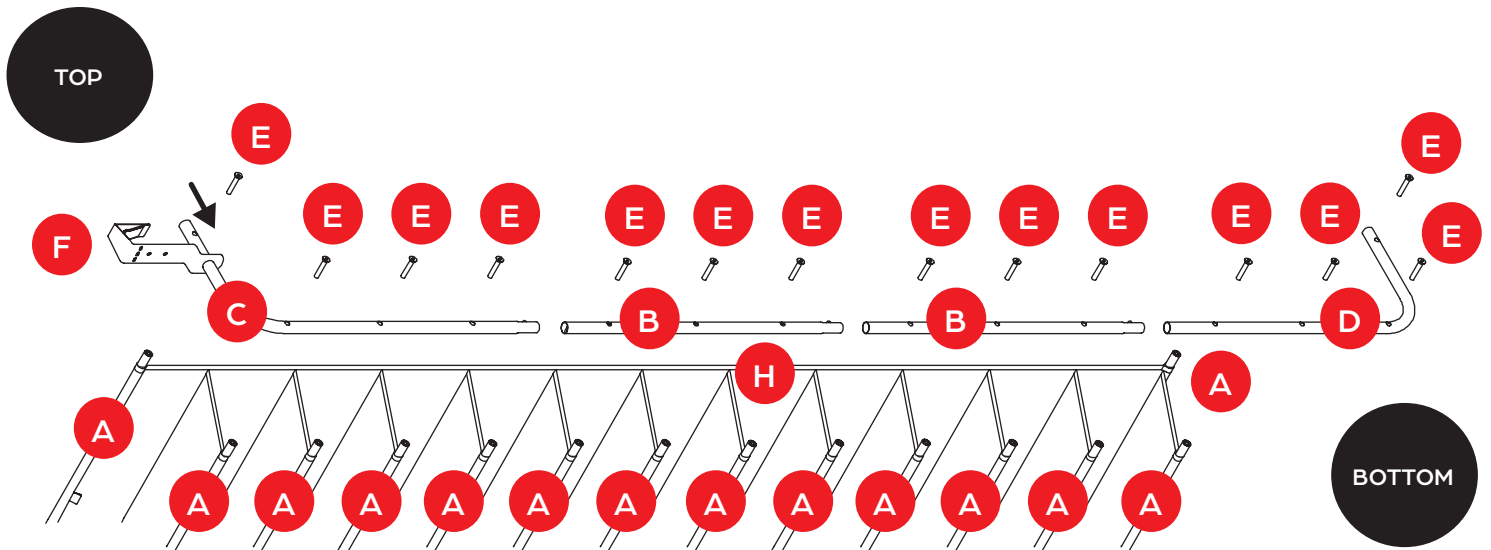


## STEP 4A (IF INSTALLED OVER THE DOOR)

Lift the assembled shoe rack and place over an interior door.

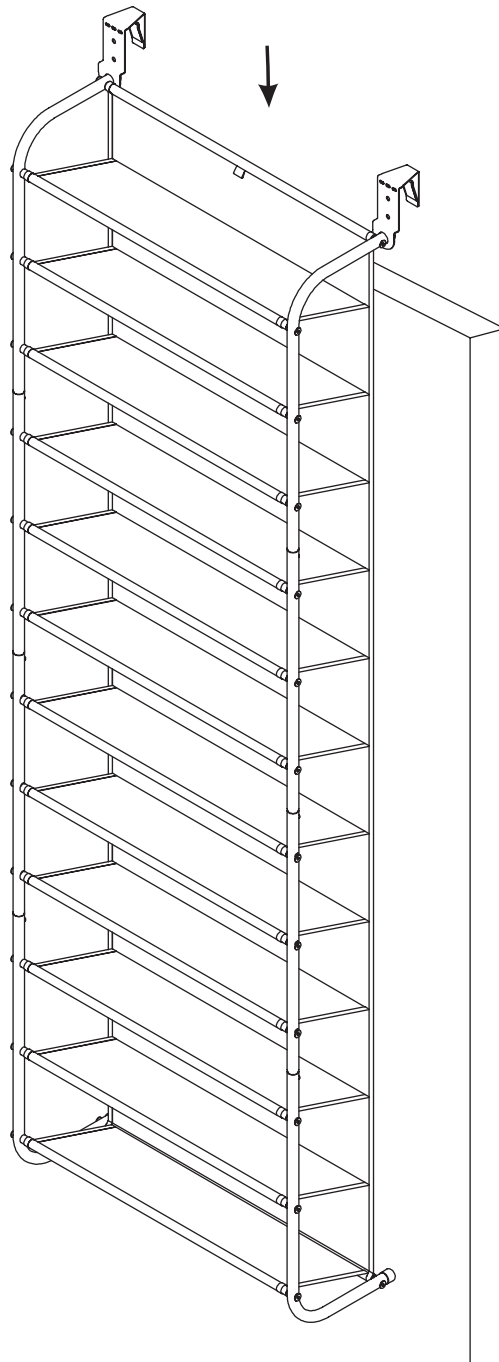

## STEP 4B (IF WALL MOUNTED)

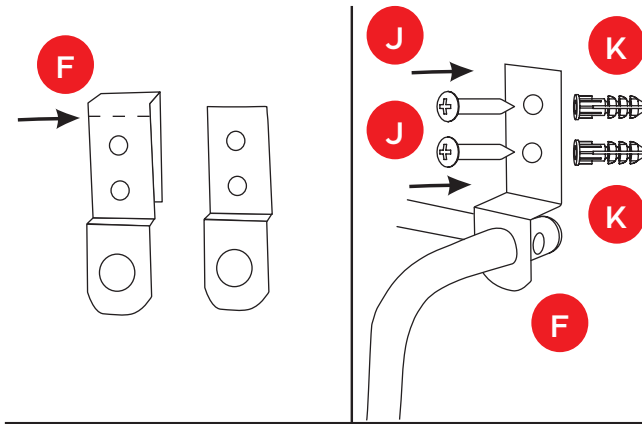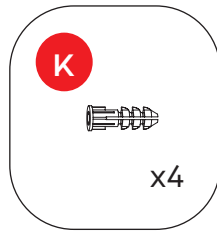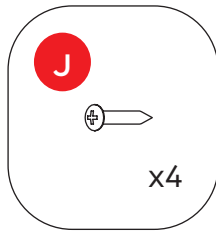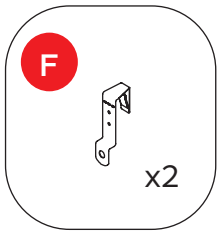

Break off the top of over the door bracket (F) perforation. Use a drill (not included) to pre-drill holes if you are installing this shoe rack onto drywall or soft wall. Insert wall anchors (K). Use a Phillips screwdriver (not included) to tighten screws (J) into wall.

