


BACK ATTACHMENT INSTRUCTIONS

FOR MANUAL OR POWER RECLINERS

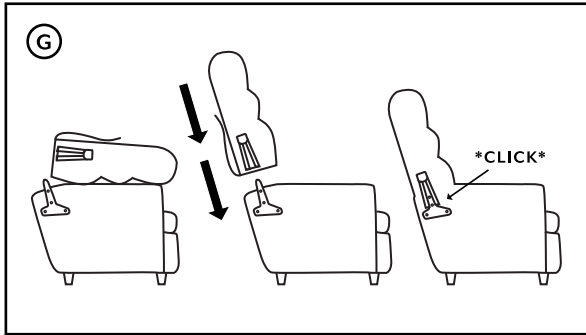

STEP 1 Set back on top of arm.

STEP 2 Hold back and flap with both hands and align interlocking brackets together. Apply downward force to top of back to ensure snap engagement. (see figure G)

STEP 3 **For Electronics:** Connect the wire coming from the back to the connector under the back seat rail. The AC adapter must be plugged into wall outlet.
If connectors are the same, use color code on wires.

STEP 4 Attach Velcro back flap, starting in middle and working toward outside, pulling flap tight as you go.

STEP 5 Turn unit back to an upright position. (see figure F)

BACK REMOVAL INSTRUCTIONS

STEP 1 Unhook all connections, including the transformer at the wall socket. Grasp and pull apart at the connectors. (see figure A)

Incorrect: Do not pull apart connectors by the wires. (see figure B)

STEP 2 Lift the back flap as far as it will go to expose the inside of the chair. Tilt chair forward to access the 2 seat/back connecting mechanisms located on the wooden frame. (see figure C)

STEP 3 Locate the steel connecting mechanism. (see figures D & E)
With a heavy screw driver or bar placed between the male and female parts of the mechanism (see figure D), press down briskly, thus separating the two pieces.

STEP 4 When both sides are separated and all electrical connectors are disconnected, the back may be lifted from the seat. (see figure F)

⚠ CAUTION: Separation of the back from the seat takes place only by uncoupling the male piece from the female piece located inside the chair (see figures D and E). **DO NOT** try to take them apart by prying or pulling the back from the arm rest as damage may occur to the chair/recliner.

