

# PEAK | LIVING


## Leg Installation

1. Remove legs and hardware from red zip bag labeled “legs”.
2. Place a leg at one corner inset  $1/4'' - 1/8''$  as shown in Photo 1 below.



**Photo 1.**

3. Place a screw, supplied in hardware bag inside the leg bag, in each hole in the leg as shown in Photo 2 below.

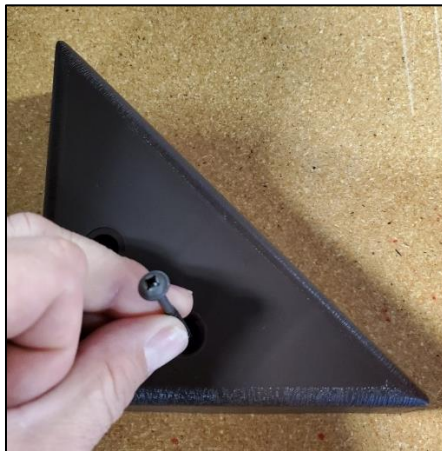

**Photo 2.**

4. Using a #2 square bit/screwdriver or a #2 phillips bit/screwdriver, show in Figures 3, 4, and 5 below, turn the screw clockwise until the leg is snug with the bottom of the piece of furniture. Use caution to get too tight. Repeat for the second screw.



**Photo 3. #2 Square Bit and Screw**



**Photo 4. #2 Square Head Screwdriver**



**Photo 4. #2 Phillips Head Screw Driver**

5. Repeat steps 2-4 for the remaining three corners.