

3PC WOOD BISTRO SET

ASSEMBLY INSTRUCTION

ITEM#: AWCFDWP303

SKU# 810621345

Need help? We are here for you!
Email us at customerservice@prestigepatio.com

GENERAL BEST PRACTICES FOR ASSEMBLY:

Read all instructions before starting

Clear a flat covered space to be in

Always best to do it with a friend

Note that hardware required is provided for every step

Pay attention to orientation

Letter of the part corresponds to a sticker on the product

Number of the hardware corresponds to its letter in the package

Helpful hints provided along the way

WARNINGS:

NOTE: UNIT SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE

DO NOT TIGHTEN ANY BOLTS UNTIL ALL BOLTS HAVE BEEN STARTED

MAINTENANCE:

Regularly check hardware and tighten if necessary

Clean loose dirt and dusts off with a cloth or brush

Cover or store them away in a cool dry place when not in use

Do not wash outdoor wooden furniture as it will cause damage

PARTS LIST




A

x2




B

x2

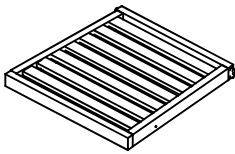


C

x2

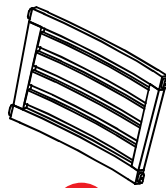


D

x2

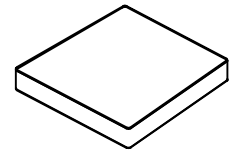


J

x2

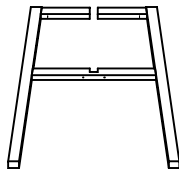


K

x1

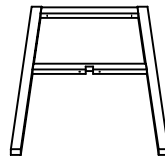

L

x1

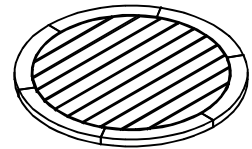

M

x1

HARDWARE LIST



E

x12
M6x60mm




F

x4
M6x40mm




G

x4
M6x15mm



N

x2




P

x4
1/4" x50mm



R

x8
M4x15mm






H

x2
M4




Not Included
No Se Adjunto
Non Indus




STEP 1

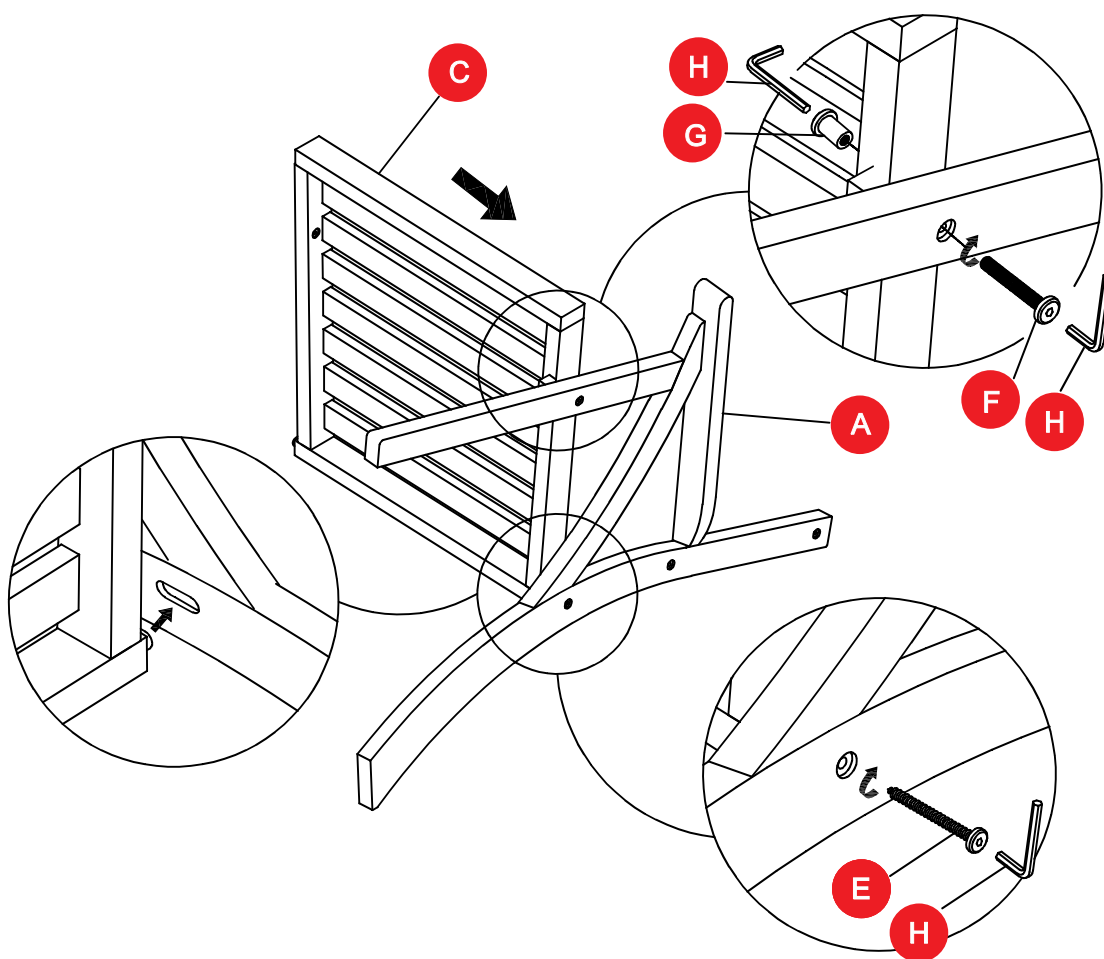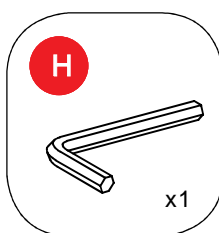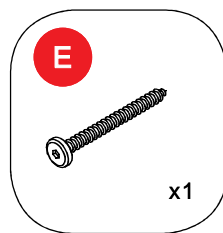


Assembled View:

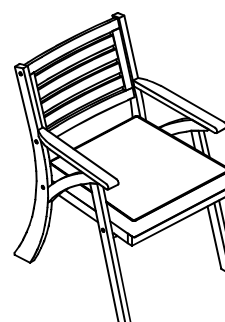


STEP 2

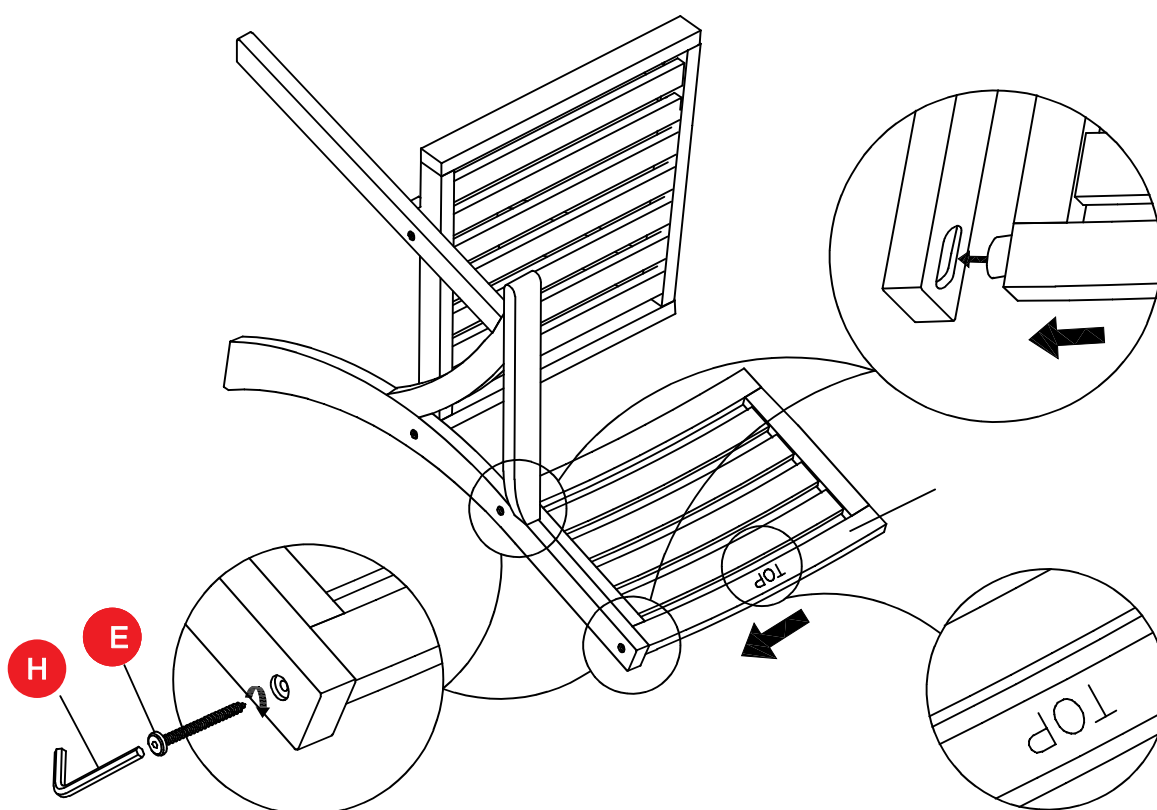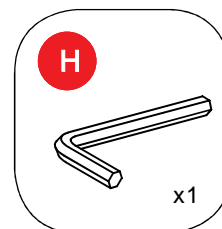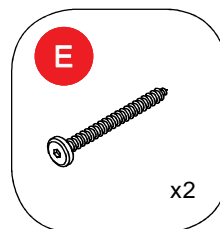


Assembled View:

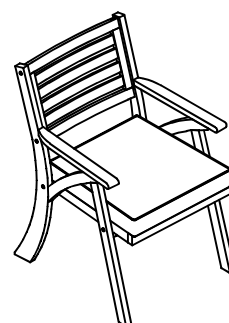






STEP 3

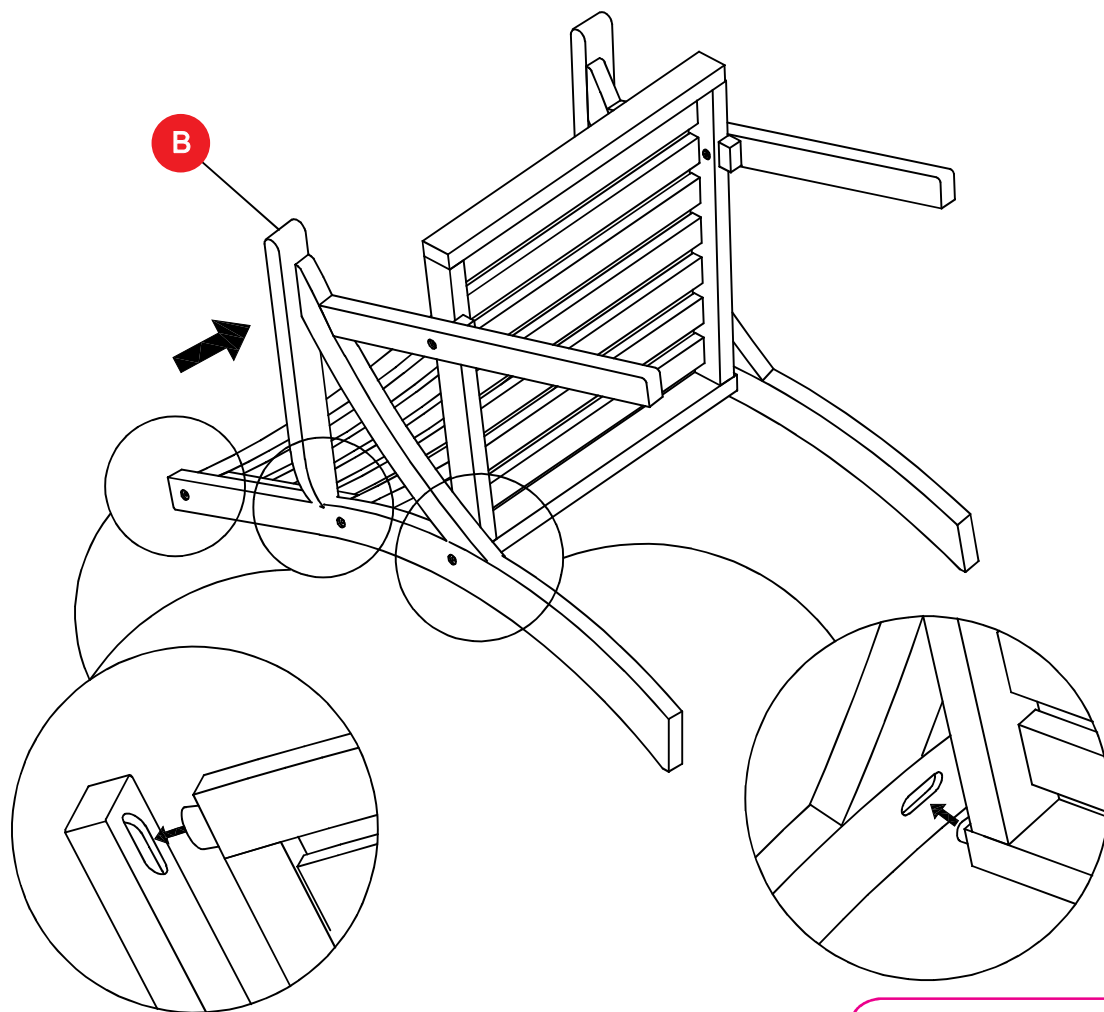


Assembled View:

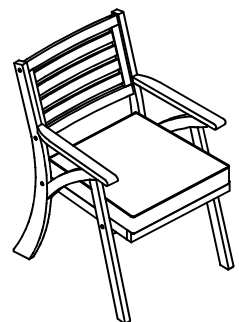



STEP 4

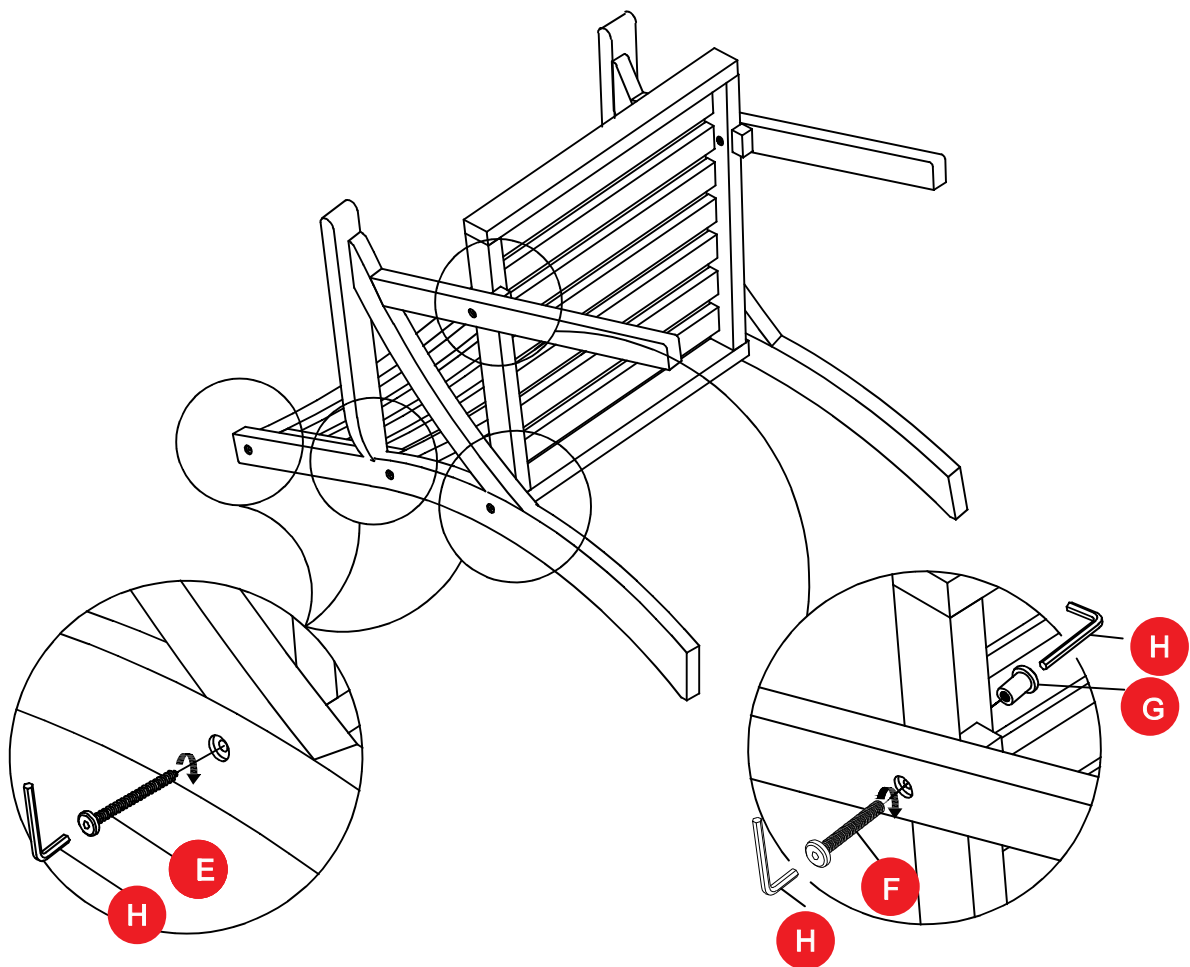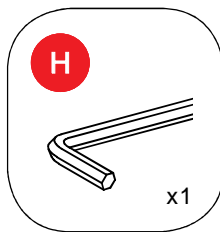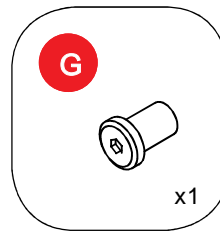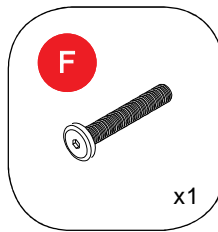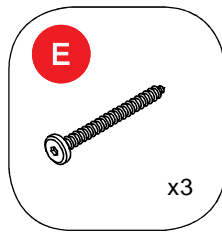

Assembled View:

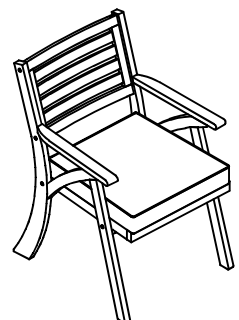


STEP 5

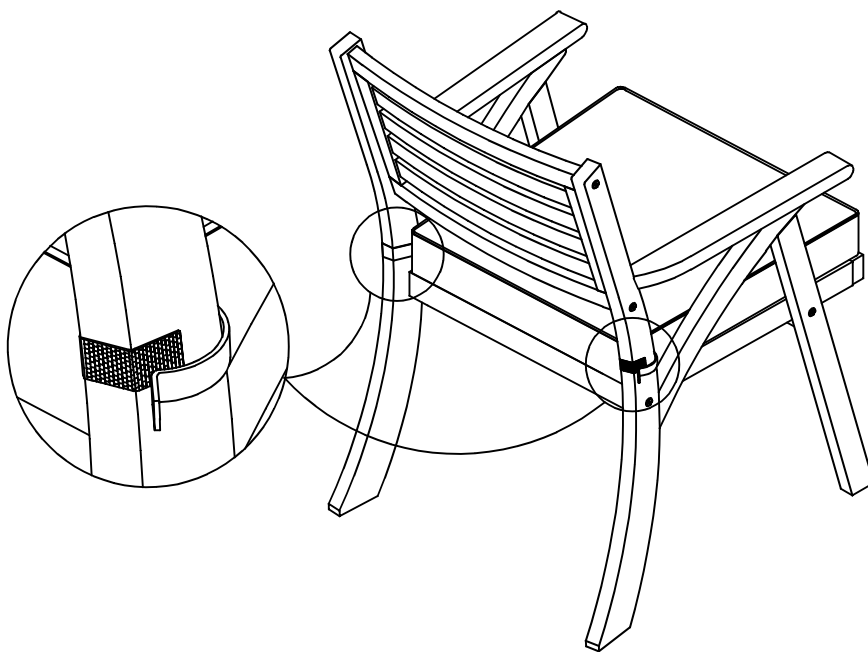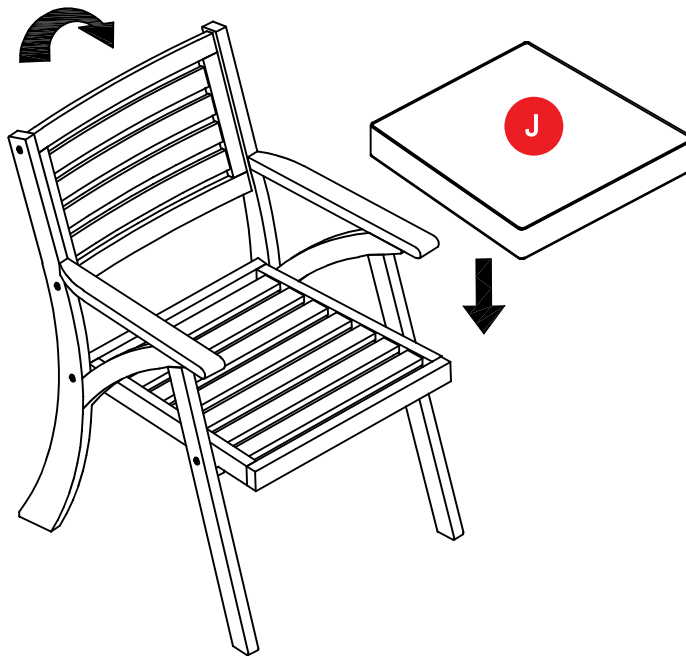


NOTE: Level the chair and tighten all bolts with the Allen wrench


Assembled View:

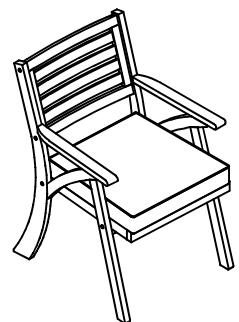



STEP 6

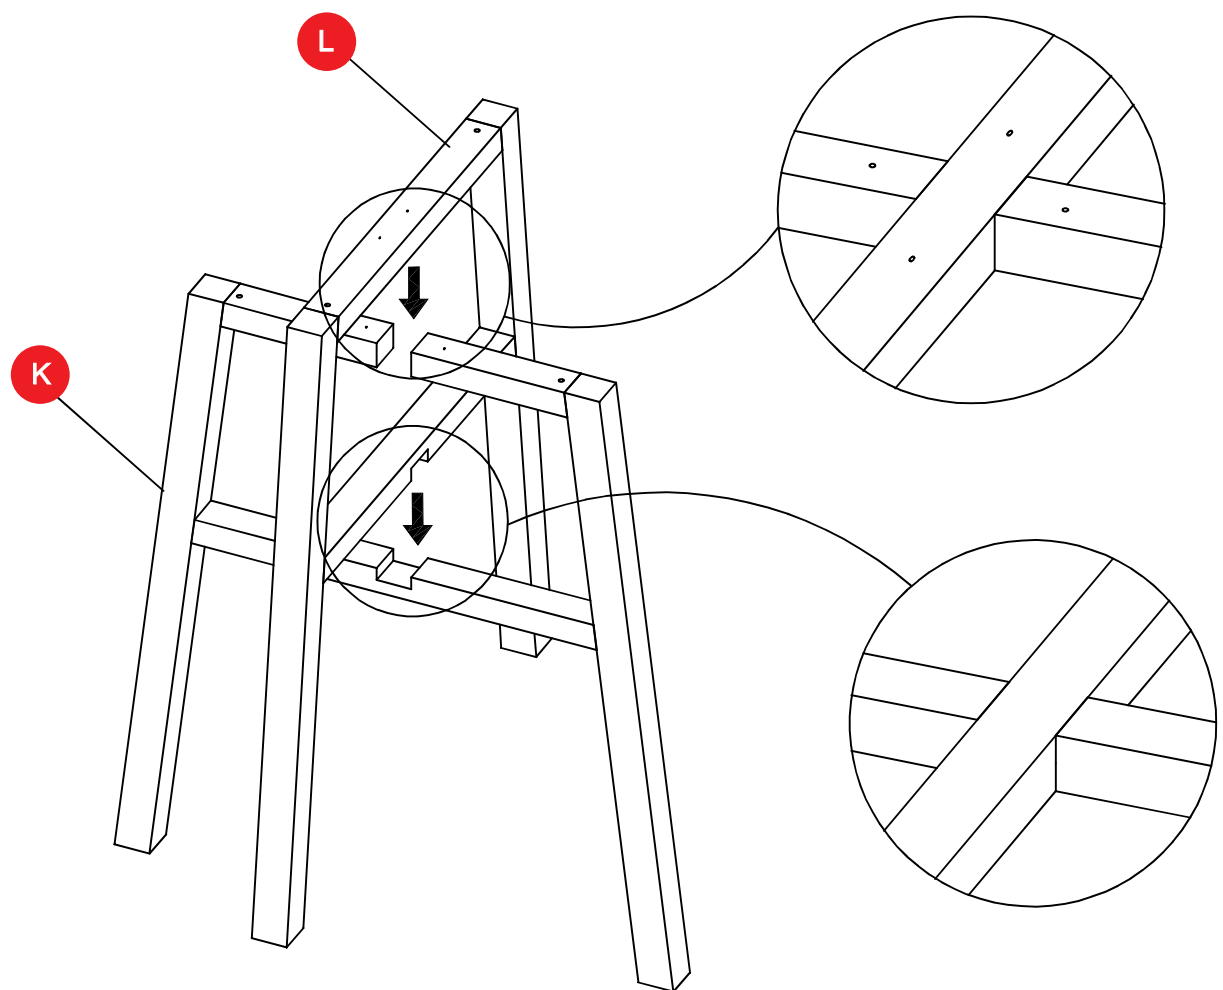


Assembled View:

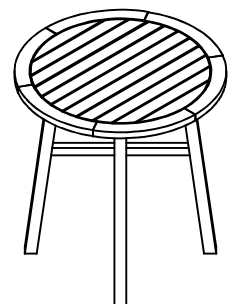

STEP 7

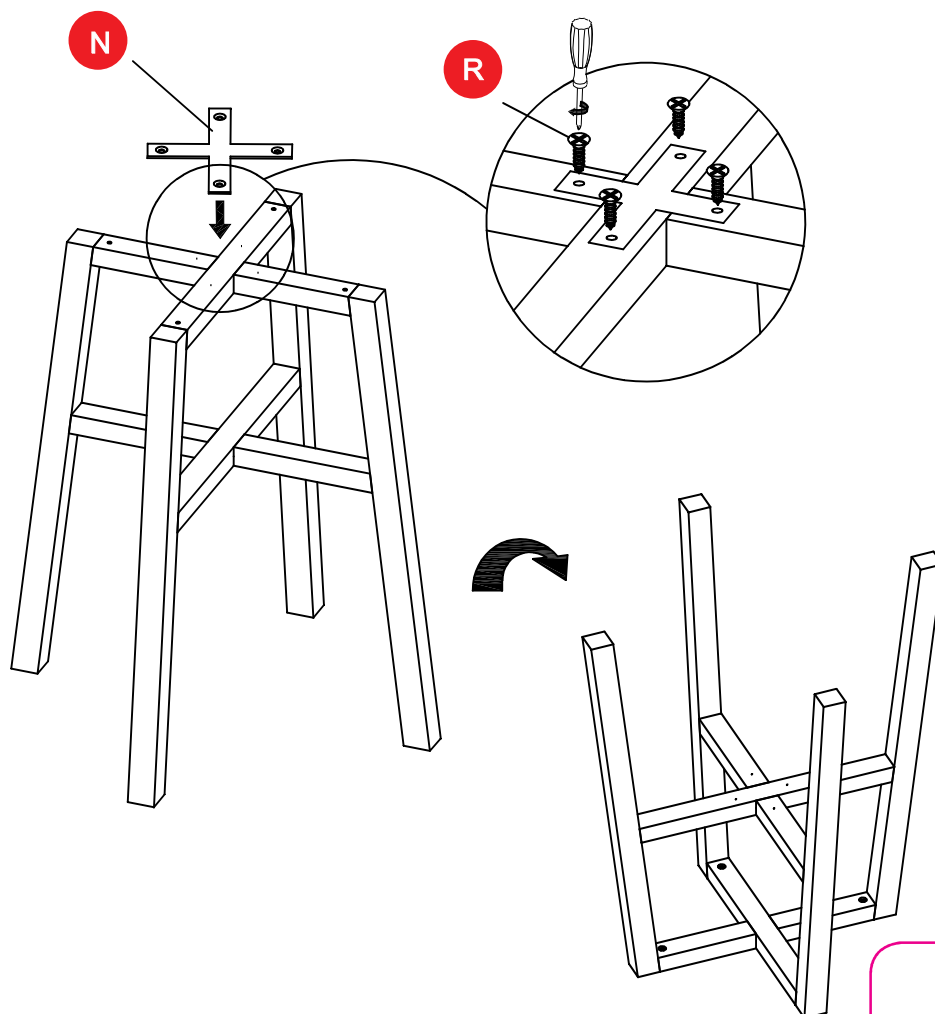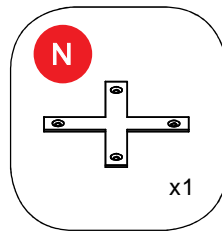

Assembled View:

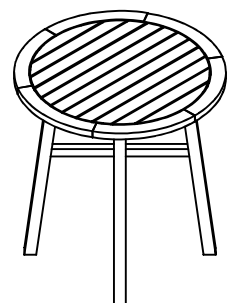

STEP 8

