

SAN MARINO



ASSEMBLY INSTRUCTIONS

ITEM#: A222043710

SKU#: 810667034

SAN MARINO DINING CHAIR 6PK

Need help? We are here for you! 1(866)578-6569 24/7 • Toll Free

Production number:2024200103

GENERAL BEST PRACTICES FOR ASSEMBLY:

- Please read and understand this entire manual before attempting to assemble or install the product.
- Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.
- Do not place the product on a damp or conductive subsurface.

WARNINGS:

- Chair is for sitting purpose only. Standing on or misuse of chair may result in damage or injury.
Not intended for commercial use.
- WEIGHT LIMIT 250 LBS(113KG).
- Keep all children and pets away from assembly area.
- Children and pets should be supervised when they are in the area of the Chair construction.
- Keep assembly area at least 6 feet from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
- Check all bolts for tightness before use. IMPORTANT - check and tighten bolts often to keep them secure!

WARRANTY:

WHAT IS COVERED ?

The limited warranty is extended to the original purchaser and applies to material and manufacturer's defect provided the item is maintained with care and used only for personal, residential purposes.


For further assistance, please email Biglots@sunjoygroup.com

Warranty: 12 months










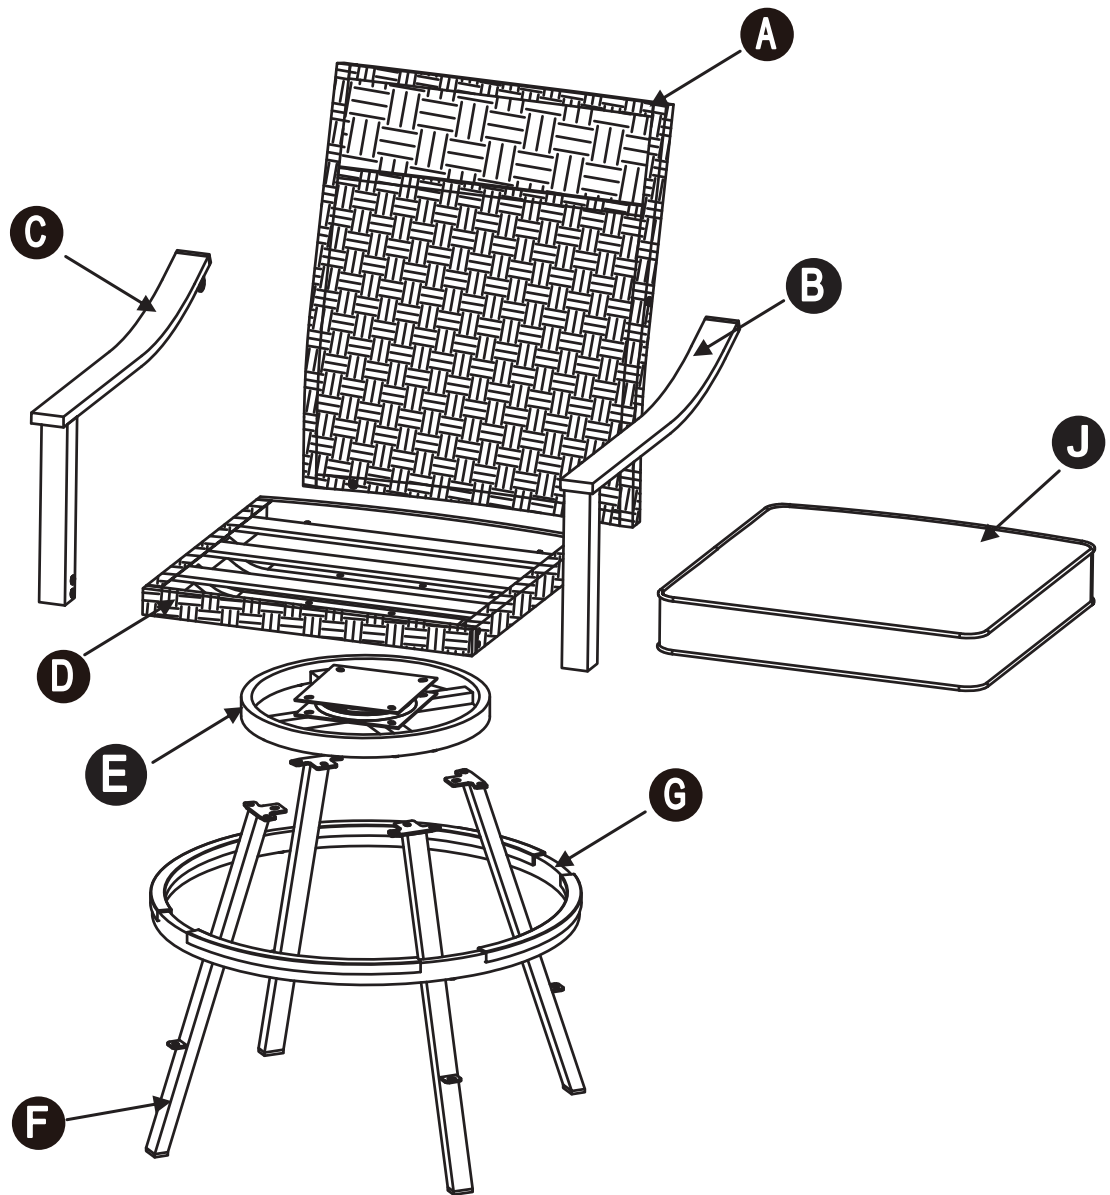

MAINTENANCE:

- Before using, clean the Chair completely with a soft dry towel.
- Do not use harsh abrasives or cleaners.
- When not in use, store in a cool, dry area.
- Steel components for this chair are treated with rust inhibiting paint that protects it from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur if these protective coatings are scratched. This is not a defect and thus not covered by the warranty.








EXPLODED DRAWING



PARTS LIST




Label	Part Number	Description	Qty	Part Image
A	P00150017601	Counter Height Chair Back	1	
B	P00140040801	Counter Height Chair Left Arm	1	
C	P00140040901	Counter Height Chair Right Arm	1	
D	P00160031101	Counter Height Chair Seat Board	1	
E	P00510040801	Turnplate	1	
F	P00540074201	Counter Height Chair Leg	4	
G	P00500086201	Footrest Cover	1	
J	P00180023801	Counter Height Chair Seat Cushion	1	
K	H990060013	Plastic Plug	2	
L	H990030012	Foot Pad	4	
M	P005300082	Pad	4	

HARDWARE LIST

Label	Part Number	Description	Qty	Add	Part Image
H1	H010030030	Bolt M6*15	18	2	
H2	H010030034	Bolt M6*30	10	1	
H3	H050010025	Flat washer M6	32	3	
H4	H050020017	Spring Washer M6	4	1	
H5	H040050029	Nut M6	4	1	
HW1	H090030002	Allen Key M6	1	0	
HW2	H090010017	Wrench M6	1	0	

HELPFUL HINTS




- Separating parts before starting
- Tools needed and not included

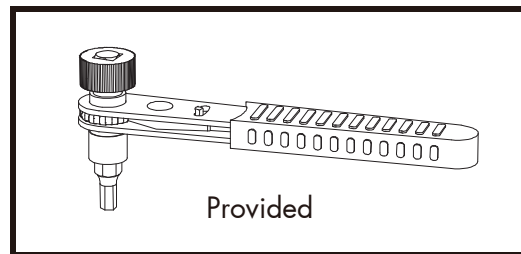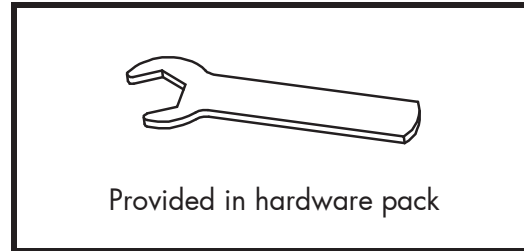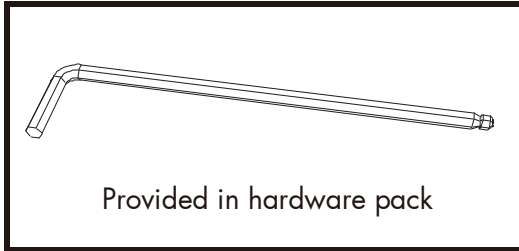

How many people needed for the installation






STEP 1

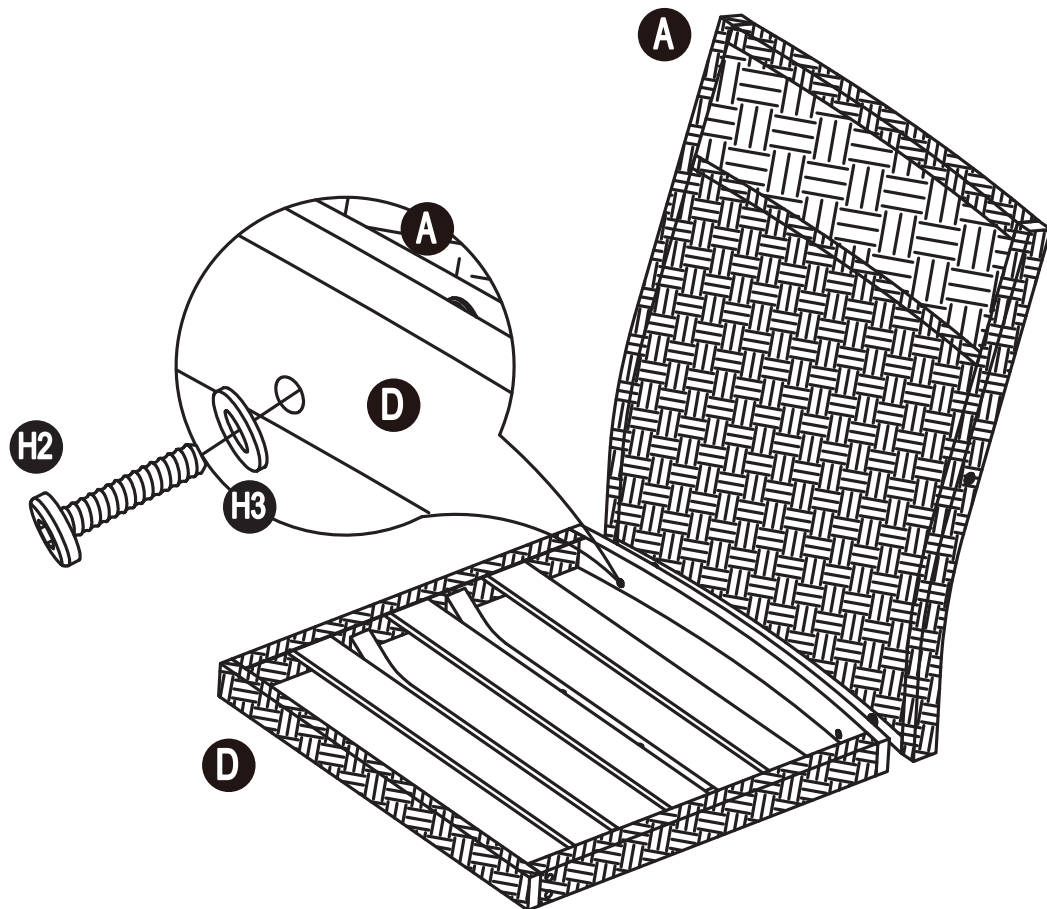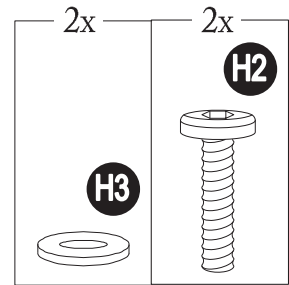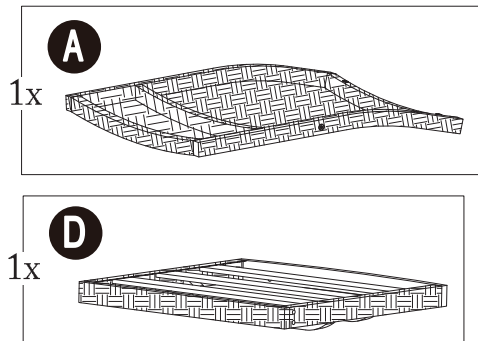





Assemble the Chair Back (A) to Seat Board (D) with Bolt (H2) and Flat Washer (H3), tighten all the bolts to 80% degree with Allen Key (HW1)

STEP 2

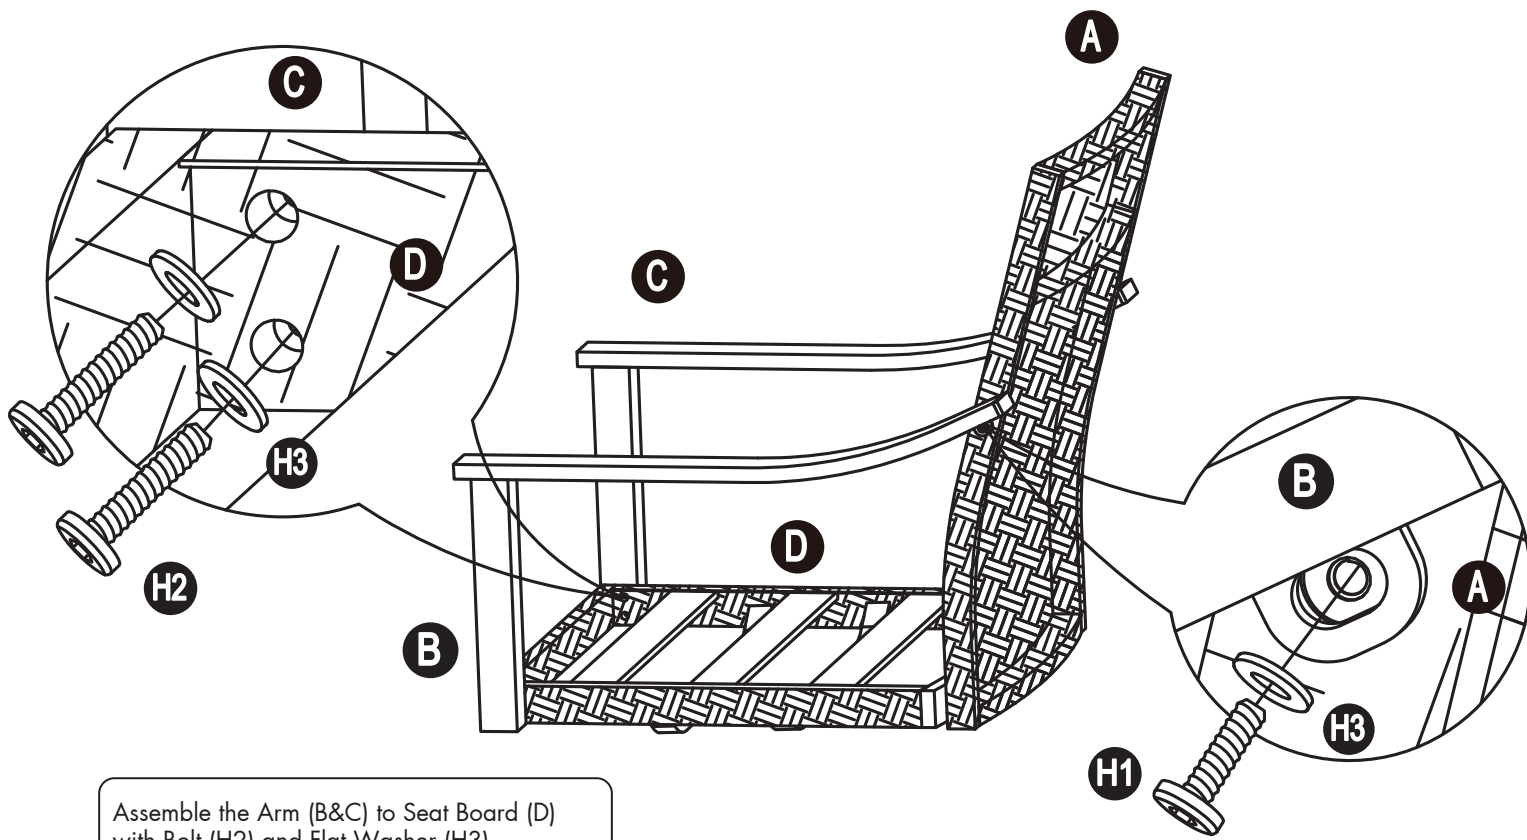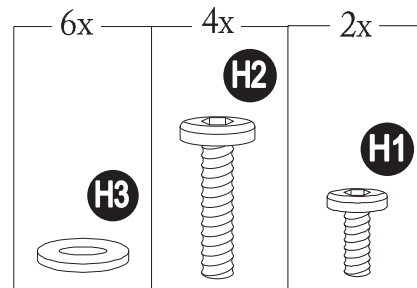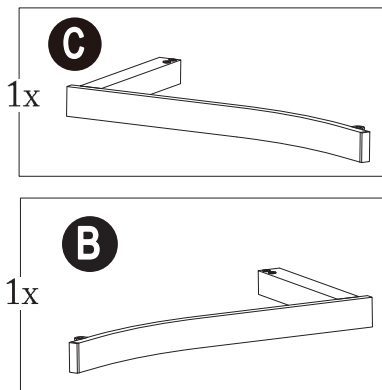




Assemble the Arm (B&C) to Seat Board (D) with Bolt (H2) and Flat Washer (H3), Assemble the Arm (B&C) to Chair Back (A) with Bolt (H1) and Flat Washer (H3), tighten all the Bolts to 80% degree with Allen Key(HW1).

STEP 3

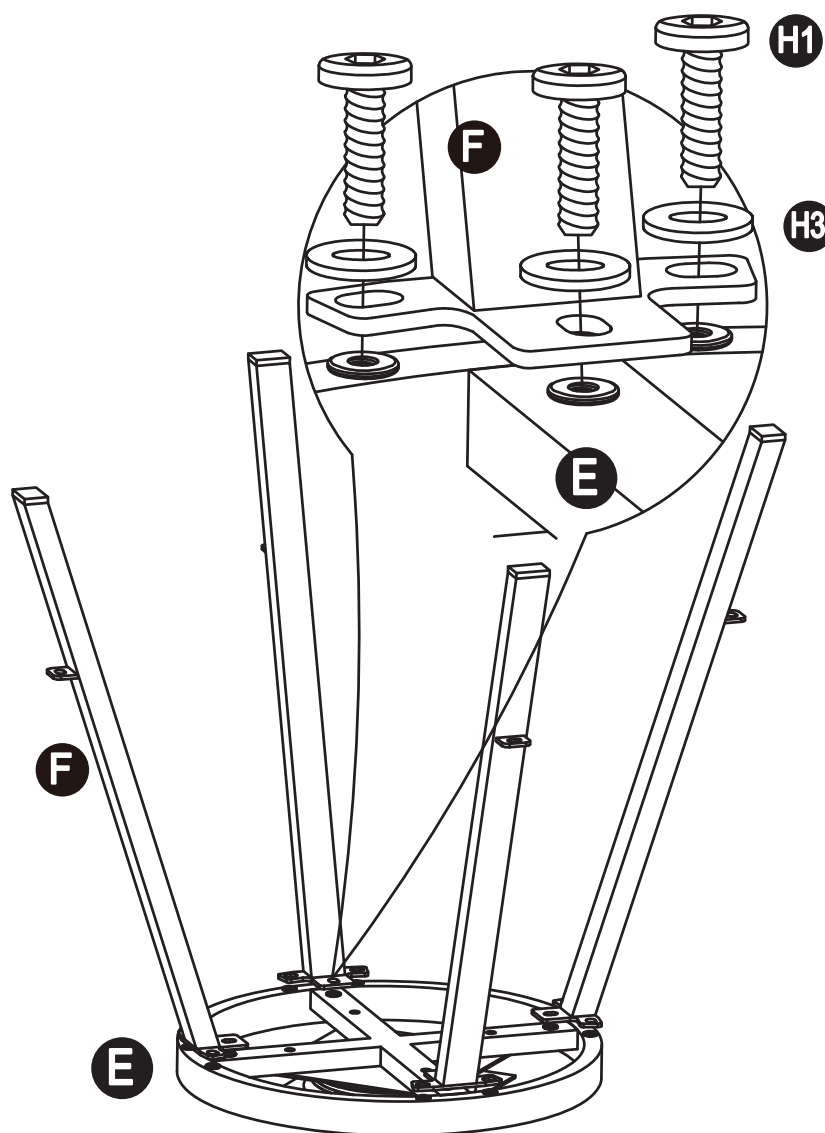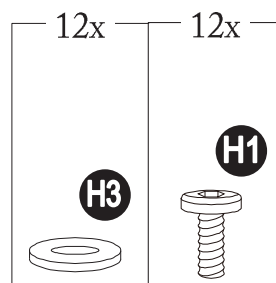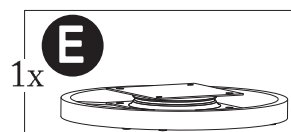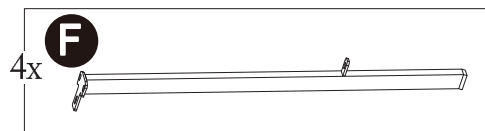



Assemble the Chair Leg(F) to Turnplate (E) with Bolt (H1) and Flat Washer (H3), tighten all the bolts to 80% degree with Allen Key(HW1).

STEP 4

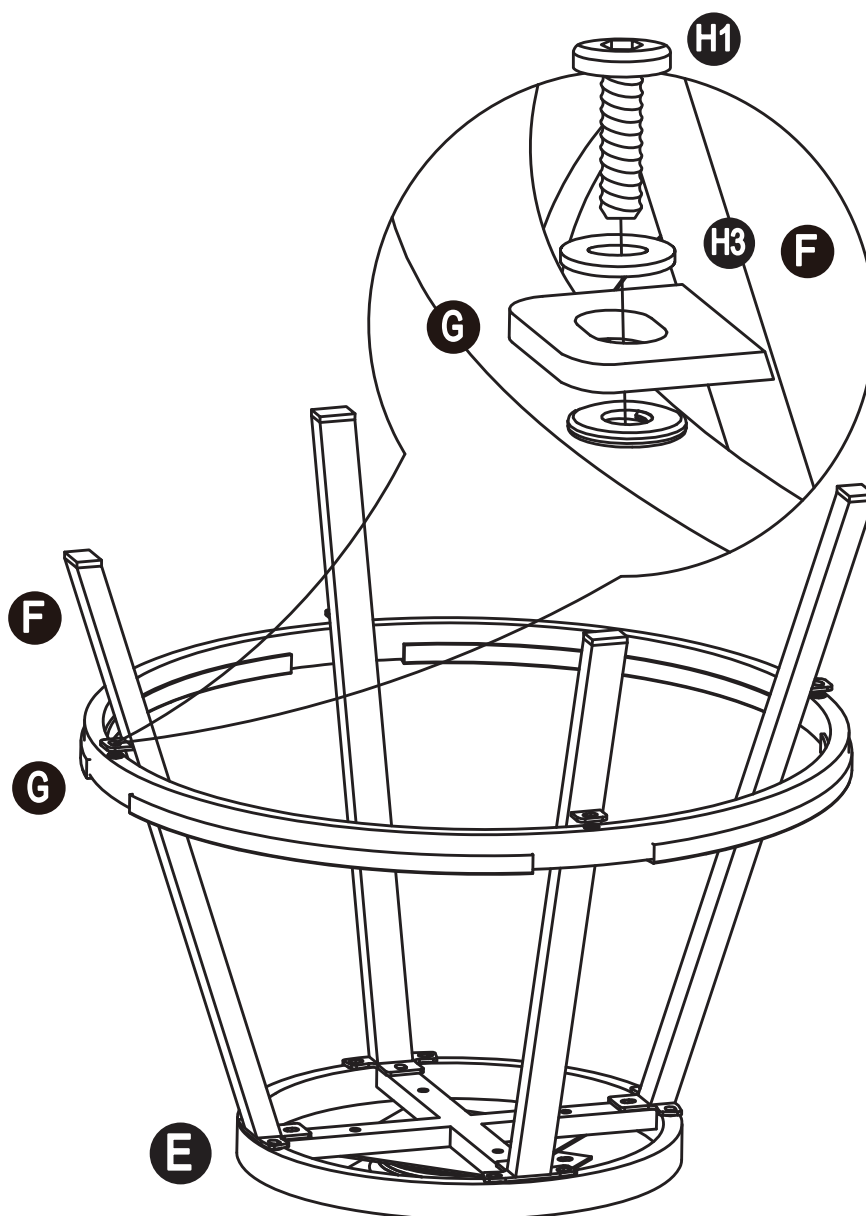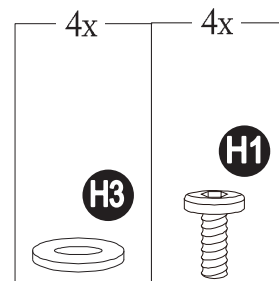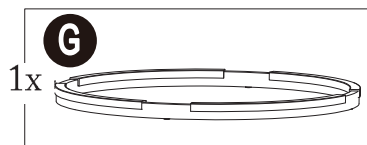



Assemble the Footrest Cover(G) to Chair Leg(F) with Bolt (H1) and Flat Washer (H3), tighten all the bolts to 80% degree with Allen Key(HW1).

STEP 5

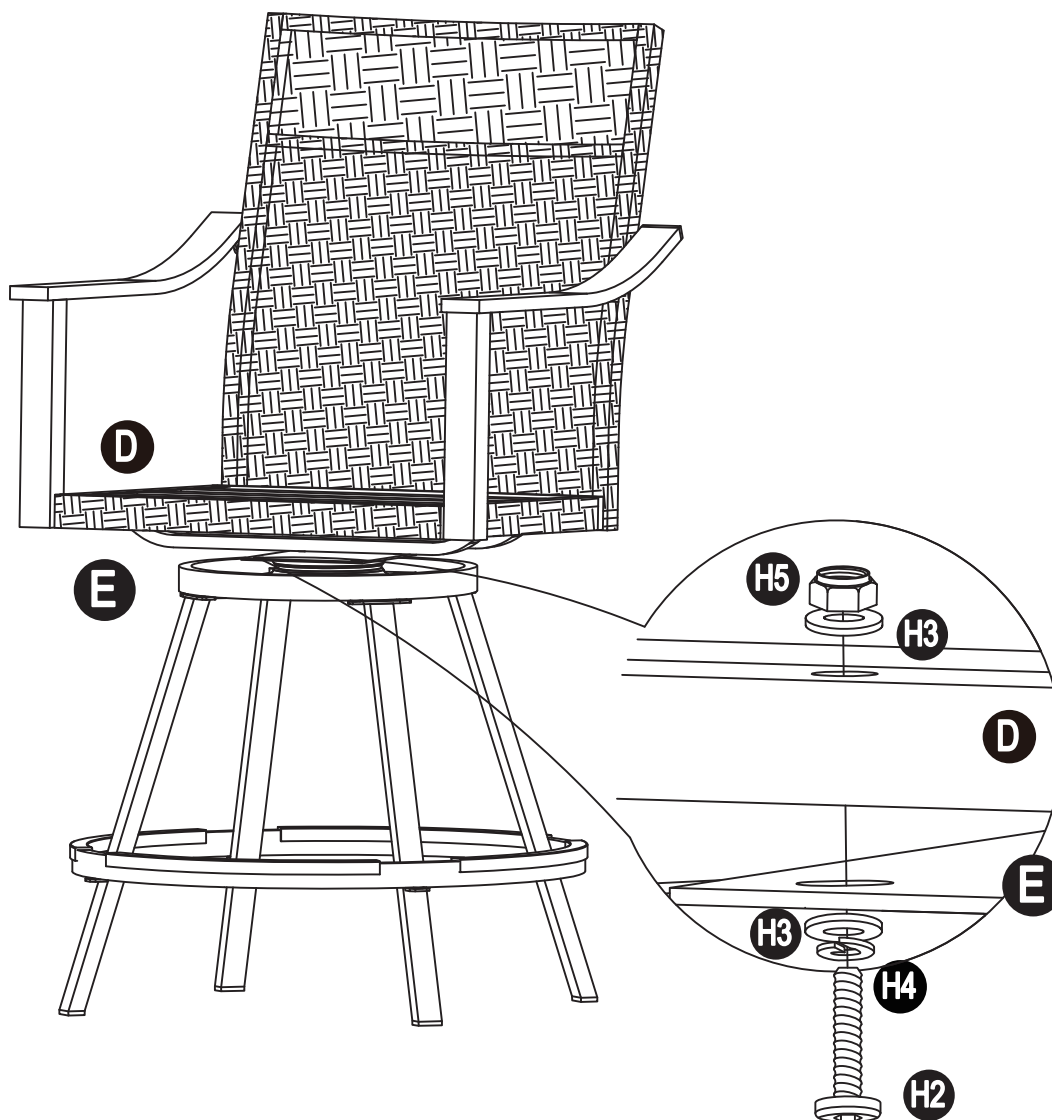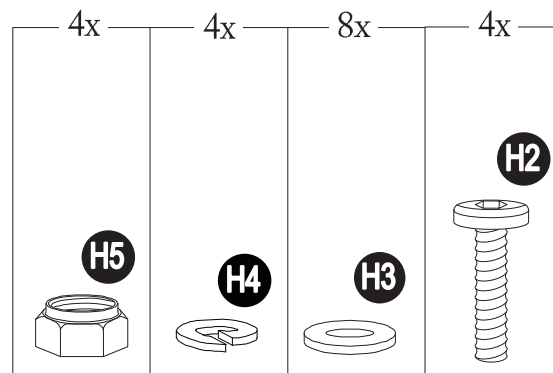

Assemble the Seat Board (D) to Turnplate (E) with Bolt (H2), Nut (H5), Spring Washer (H4) and Flat Washer (H3), tighten all the bolts to 100% degree with Allen Key (HW1). tighten all the Nuts to 100% degree with Wrench (HW2).

STEP 6

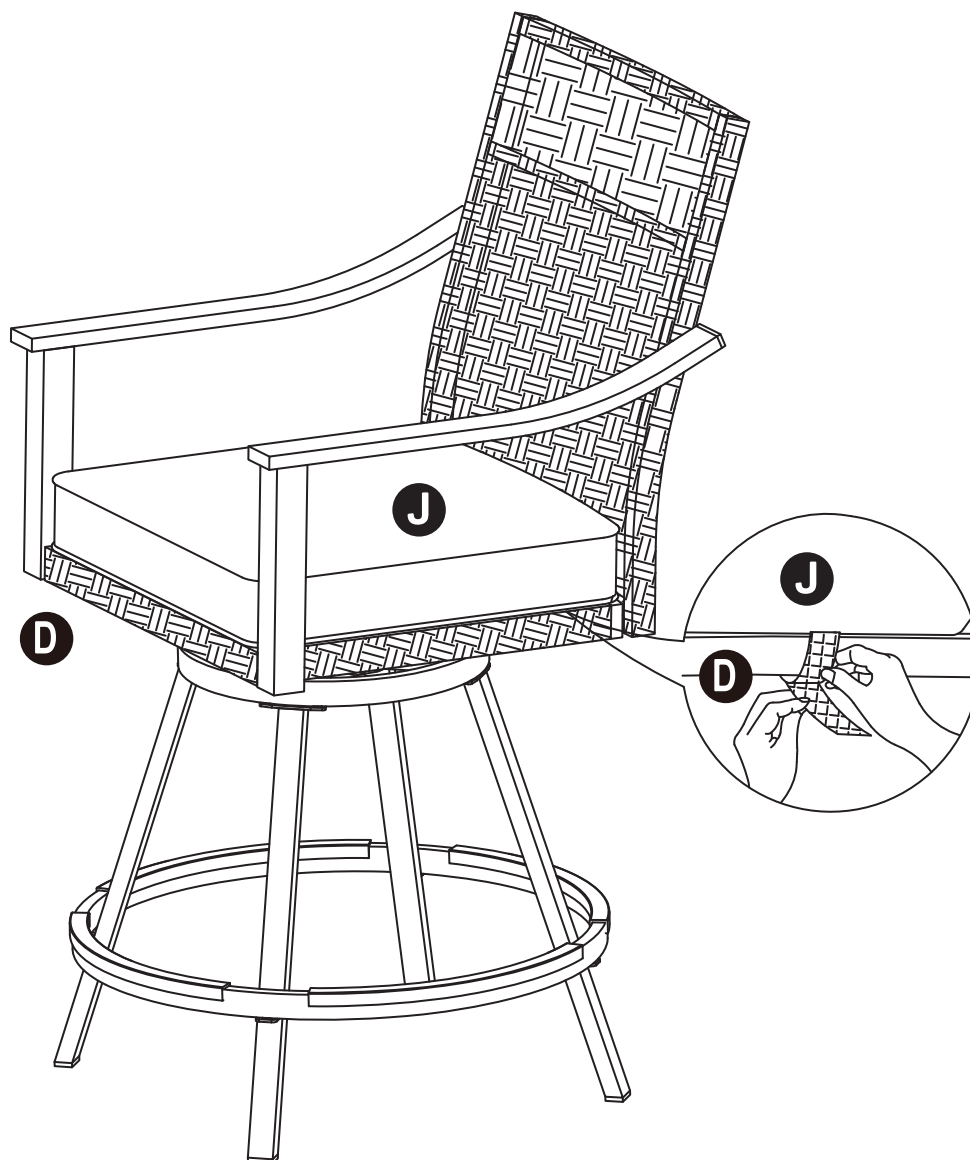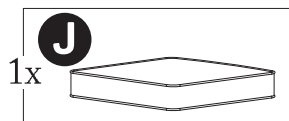

Put the Cushion (J) on Seat Board (D), tighten the fabric band on both side.